

CRUISERS
OWNER'S MANUAL



245 CR

265 CR

282 CR

298 SS

298 SC

302 CR

322 CR

TABLE OF CONTENTS

	Page		Page
M INTRODUCTION	M-1	5 GETTING UNDERWAY	5-1
New Boat Delivery	M-2	Safety Checklist	5-1
Specifications	M-3	Safety Equipment	5-2
Special Gas Precautions	M-3	Boarding	5-2
Fire Extinguishing System	M-4	6 RUNNING	6-1
Troubleshooting	M-5	Maneuvering Techniques	6-1
Generator Set	M-9	Salt Water	6-2
Air Conditioner	M-11	Freezing Temperatures	6-3
A.C. Wiring Diagrams	M-12	Towing Procedure	6-3
Electrical Schematics	M-15	Anchoring	6-4
1 BOATING SAFETY	1-1	Performance Boating	6-5
Boating Regulations	1-2	Propellers	6-6
Boater Responsibilities	1-2	7 CARE AND MAINTENANCE	7-1
Required Safety Equipment	1-3	Electrical	7-1
Emergencies	1-7	Fuel System	7-3
Hazardous Conditions	1-8	Steering System	7-3
Operation By Minors	1-10	Corrosion Protection	7-3
Passenger Safety	1-11	General Maintenance	7-4
Water Sports	1-11	8 TROUBLESHOOTING	8-1
General Precautions	1-12	Trouble Check Chart	8-1
2 BASIC RULES OF THE ROAD	2-1	9 STORAGE	9-1
Aids to Navigation	2-1	10 TRAILERING	10-1
Right-of-Way	2-4	Classifications	10-1
3 CONTROLS AND INDICATORS	3-1	Trailer Components	10-2
Shift/Throttle Control	3-1	Safety Chains	10-2
Instruments	3-2	Trailer Checklist	10-3
Switches	3-4	Backing Up Trailers	10-4
Steering System	3-8	Launching	10-5
4 OPERATION	4-1	Loading	10-5
Fueling	4-1	Slings/Lifting	10-6
Starting	4-2	11 SHIP SYSTEMS	11-1
Shifting/Running	4-4	Electrical Systems	11-1
Warning Alarm	4-4	Water Systems	11-8
Steering Controls	4-5	Hot Water Heater	11-11
Stopping	4-5	Sanitizing The Fresh Water System	11-12
Docking	4-6	Sample Float Plan	11-17
Boat Trim	4-7	12 GLOSSARY OF TERMS	12-1
Drive Trim Angle	4-7		

Dear Valued Customer,

Welcome to the Monterey Life!

We would like to extend to you our "Thank You" for choosing a Monterey boat!

You have made an investment in our product and we are confident you will enjoy many years of boating pleasure. Your new boat has been built to the standards set forth by the United States Coast Guard, National Marine Manufacturers Association and the American Boat and Yacht Council. We are proud to have you in our "Family!"

At this time, we need you to read your owner's manual and become familiar with all systems on your boat. Make certain that you and your dealer have filled out and mailed your warranty registration card back to us here at the factory. It is very important to us and it is also a U.S. Federal Regulation.

This manual is an important aid in the operation and maintenance of your boat. The information is intended as a guide and cannot cover every question you may have about your boat and boating in general. We encourage you to contact your dealership for any additional information you might need. If there is a question about your boat that can't be answered by your dealer, please contact our factory direct by calling the Monterey Boats Customer Service Department, (352) 529-9181 or online if you prefer at: www.info@montereyboats.com.

If you are new to boating, we recommend you participate in a boating class or group to gain more knowledge and confidence. Contact your dealer, local U.S. Coast Guard or U.S. Power Squadron Organizations for information in your area.

With proper care, routine service and preventive maintenance, your Monterey boat will not only reward you with enjoyment, but with reliability, dependability and one of the higher resale values in today's boating industry.

Enjoy your new boat and please respect our environment at all times. Always remember to practice safe boating procedures for your protection as well as those around you.

Sincerely,

The M.O.S.T. (Monterey Owners Support Team)

Have a safe boating day!

DATE PURCHASED _____

DEALER/PHONE NUMBER _____

BOAT MODEL _____

HULL ID NUMBER _____

TRAILER ID NUMBER _____

ENGINE MAKE/MODEL _____

ENGINE #1 SERIAL NUMBER _____

ENGINE #2 SERIAL NUMBER _____

DRIVE MAKE/MODEL _____

DRIVE #1 SERIAL NUMBER _____

DRIVE #2 SERIAL NUMBER _____

To comply with Federal regulations it is important to return the warranty registration card within 15 days.

INTRODUCTION

This manual is designed to give you a basic understanding of your Monterey boat and some of the responsibilities that go along with owning/operating a boat. Of primary importance is the owner's/operator's responsibility for safety. Read this manual and all other information supplied with your boat before taking to the water and be sure that all other operators do the same.

This manual is not intended to be the final authority, but rather a general guide for operation. If the information contained in this manual should conflict with that given in the manufacturer's information, the manufacturer's information shall take precedence.

As part of your warranty responsibilities, you must register your Monterey boat within 15 days of purchase and perform periodic maintenance/ inspections as outlined in this manual and other information supplied in the owner's packet.

The descriptions and specifications contained in this manual were in effect at the time of printing. Monterey Boats reserves the right to discontinue models at anytime, without notice and without incurring obligation. The equipment and features described within this manual may not be identified as either standard or optional. Refer to the current price sheet for correct vendor supplied options.

This section contains specific information about your Monterey boat that is different or not covered elsewhere in this manual. Refer to the Table of Contents on page i-1 to locate general information. Once again, thank you for choosing a Monterey boat; we wish you many years of boating enjoyment!


IDENTIFICATION NUMBERS

Safeguard information about your boat by recording the Hull Identification Number (HIN), and model and serial numbers of major components and accessories. Keep a detailed Data Sheet for emergency purposes in a safe place off the boat. In case of theft, damage, etc., report these numbers to local authorities, your insurance agent, and your dealer.

NOTICE

By law, the HIN must be clearly visible and may not be removed, altered, or tampered with in any way. The HIN is attached to the transom on the upper starboard side, above the waterline.

BOATING TERMINOLOGY

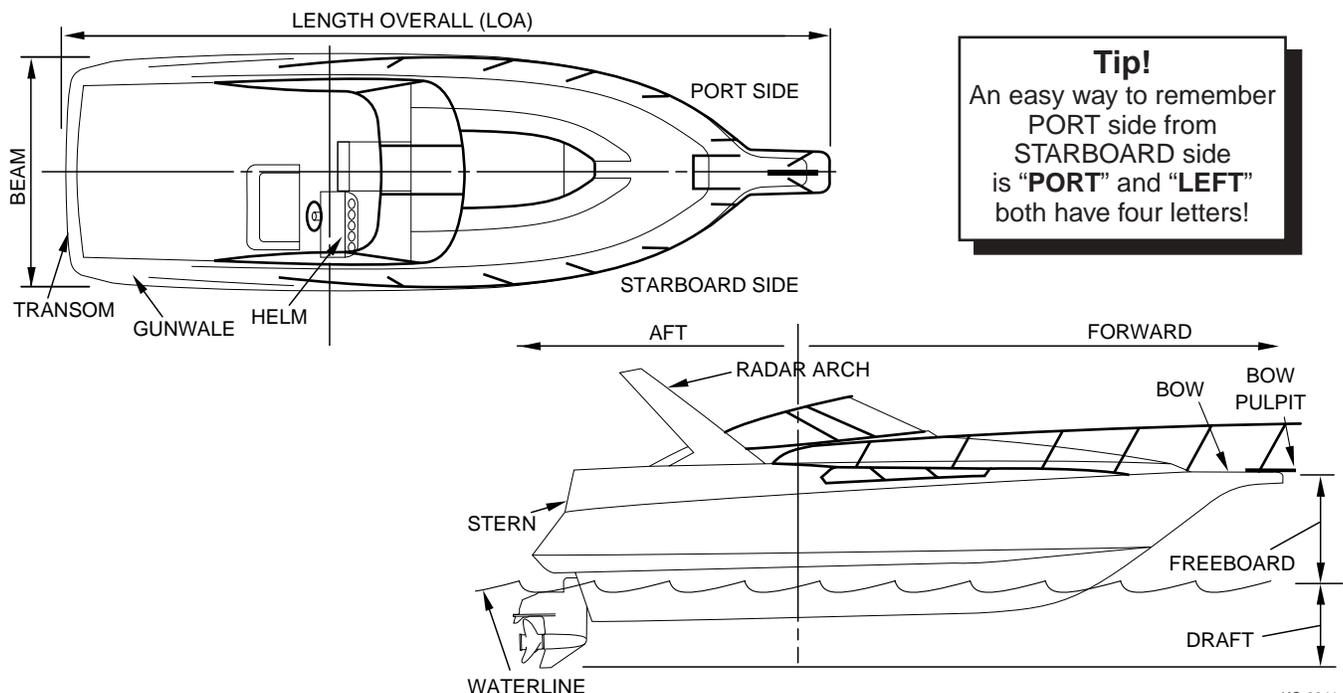

KC-0941

SPECIFICATIONS

MODEL

	245 CR	265 CR	282 CR	298 SC
LOA w/swim plat.	27' (8.2 m)	29'-6" (9 m)	30'-10" (9.4 m)	31'-10" (12.8 m)
Hull Length	24'-6" (7.5 m)	26'-11" (8.2 m)	28'-9" (8.76 m)	29'-7" (9.0 m)
Beam	8'-6" (2.6 m)	8'-6" (2.6 m)	10'-0" (3.05 m)	9'-6" (2.9 m)
Deadrise	18°	18°	19°	22°
Bridge Clearance with Arch	N/A N/A**	9'-3/4" (2.74 m) N/A**	N/A*** 10'-6" (3.2 m)	7'-9" (2.4 m) N/A**
Draft Up	22'-1/4" (57 cm)	20'-1/4" (51.4 cm)	21" (53.3 cm)	21" (53.3 cm)
Draft Down	41" (104 cm)	NA	37" (94 cm)	37" (94 cm)
Fuel Capacity Gal.	77 gal (291.5 l)	89 gal (337 l)	142 gal (537.4 l)	142 gal (538 l)
Water Capacity Gal.	20 gal (76 l)	30 gal (114 l)	38 gal (143.8 l)	15 gal (57 l)
Waste Capacity Gal.	20 gal (76 l)	30 gal (114 l)	22 gal/std* (83.3 l*)	21 gal/std* (79 l)
Weight	5,300 lbs (2404 kg)	6,000 lbs (2722 kg)	10,100 lbs (4581.3 kg)	8,500 lbs (3856 kg)
Max Litre	6.2 l	8.1 l	5.7 l (twin)	6.2 l (twin)

	298SS	302 CR	322 CR
LOA w/swim plat.	31'-10" (12.8 m)	32'-5 1/2" (9.89 m)	33'-3" (10.14 m)
Hull Length	29'-7" (9.0 m)	30'-4 1/2" (9.26 m)	32'-2" (9.8 m)
Beam	9'-6" (2.9 m)	10'-6" (3.2 m)	10'-10" (3.3 m)
Deadrise	22°	19°	18°
Bridge Clearance with Arch	7'-9" (2.4 m) N/A**	N/A*** 10'-6" (3.2 m)	NA*** 10'-10" (3.3 m)
Draft Up	21" (53.3 cm)	21" (53.3 cm)	22" (53.3 cm)
Draft Down	37" (94 cm)	37" (94 cm)	37" (94 cm)
Fuel Capacity Gal.	142 gal (538 l)	150 gal (567.6 l)	200 gal (756.9 l)
Water Capacity Gal.	15 gal (57 l)	45 gal (170.3 l)	60 gal (227.1 l)
Waste Capacity Gal.	21 gal/std* (79 l*)	28 gal (106 l)	28 gal (106 l)
Weight	8,000 lbs (3629 kg)	10,770 lbs (4885.2 kg)	12,880 lbs (5806.2 kg)
Max Litre	6.2 l (twin)	6.2 l (twin)	6.2 l (twin)

* = 28 gal. Vac-flush

** = Not available with a radar flush

*** = Not available without a radar arch

SPECIAL GAS PRECAUTIONS




Holding tank systems on boats produce odorless Methane gas which is extremely lethal in enclosed spaces. Follow these precautions when working on your boat's holding tank system to prevent injury:

- Before work, open all doors and hatches wide, and rig a good fan to disperse gas.
- During work, have another person frequently check on you.
- Before and during work, DON'T SMOKE.

! DANGER !

Carbon monoxide (CO) gas is an odorless, colorless gas which is lethal in high concentrations. Common sources of CO in a marine environment are: exhaust from engines and generators, ranges, space and water heaters, and any other device used to burn carbon based materials. Also, boathouses, sea walls, and other boats in close proximity can contribute to CO levels. If any of the following symptoms are experienced by anyone onboard, **IMMEDIATELY** move the person to fresh air and get medical help:

- flushed appearance
- throbbing temples
- inattentiveness
- ringing in the ears
- headaches
- drowsiness
- nausea
- dizziness
- fatigue
- vomiting
- collapse
- convulsions

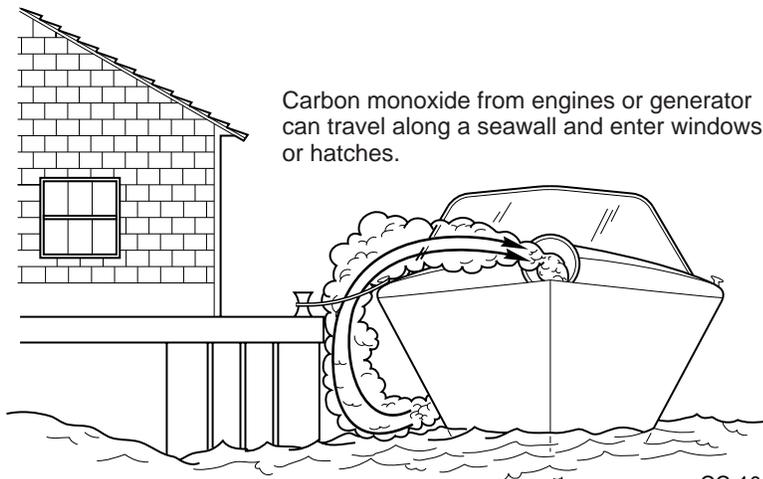


CC-10A

FIRE EXTINGUISHING SYSTEM

Your Monterey boat is equipped with an Automatic Fire Extinguishing System to provide protection in the event of an engine compartment fire. The system is automatically actuated when temperatures reach or exceed a preset limit.

When actuation occurs, a loud popping sound may be heard followed by “rushing” air sound. When a discharge occurs, immediately shut down all electrical and mechanical systems, and powered ventilation if not already done automatically by means of the pressure switch (optional).

Do not open the engine hatch at this time! This feeds oxygen to the fire and flashback can occur. Allow the extinguishing agent to “soak” the compartment for at least fifteen (15) minutes, and wait for hot metals and fuels to cool before inspecting for cause or damage.

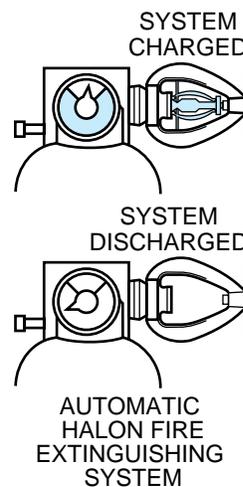

KC-0084

! WARNING !

Extinguishing agent and fire by-product fumes are toxic; do not breathe the fumes. Accidental discharge can be dangerous and may cause serious injury. Do not attempt to service the system unless qualified to do so.

! CAUTION

Extinguishing agent cylinders must be accurately weighed periodically according to manufacturer's specifications to ensure that they are adequately charged.

TROUBLESHOOTING

The following charts will assist you in finding and correcting minor mechanical and electrical problems with your boat. Contact your nearest authorized Monterey dealer for problems and procedures requiring the skill of a trained service technician.

Engine and Power Train

Notice

For further troubleshooting information other than given here, refer to the individual component owner's manual.



WARNING



Disconnect battery cables before making checks or adjustments around engine and electrical components. Personal injury or damage to the boat may occur.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Engine will not start.	Fuel valves are closed or fuel tank is empty.	Check fuel valves or fill tank.
	Contaminated fuel.	Check fuel for contaminants or water. If fuel is contaminated, drain tank and lines, flush with clean fuel and replace fuel filters. See Monterey Dealer for Service.
	Loose wiring or bad key switch.	Look for any loose connections. Contact technician to replace switch if necessary.
	DC main and/or ignition circuit breakers are OFF.	Turn all breakers ON.
Low starter speed.	Weak or bad battery.	Have battery tested or charged.
Starter will not turn engine crankshaft.	Corroded battery terminals.	Clean terminals.
	Loose wiring connections.	Clean and tighten all wire connections.
	Weak or discharged battery.	Charge battery.
	Defective starting switch.	Contact authorized dealer for switch replacement.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Lack of power.	Throttle not fully open.	See authorized dealer for throttle linkage adjustment.
Erratic engine speed.	Contaminated fuel.	Drain fuel tank and lines; flush with clean fuel and replace fuel filters. See Monterey Dealer for service.
Engine overheats.	Pinched or clogged fuel lines or tank vent line.	Replace line or remove obstruction. See Monterey Dealer for service.
Excessive vibration. NOTE: Some vibration is normal due to engine and prop action.	Contaminated fuel.	Drain fuel tank and lines; flush with clean fuel and replace fuel filters. See Monterey Dealer for service.
Engine overheats.	Engine cooling water seacock closed or water pick-up is blocked.	Open seacock or remove obstruction.
Excessive vibration. NOTE: Some vibration is normal due to engine and prop action.	Leaking or pinched water lines.	Repair or replace water lines. See Monterey Dealer for service.
Excessive vibration. NOTE: Some vibration is normal due to engine and prop action.	Foreign objects obstructing the propeller.	Remove objects from propeller by reversing prop or cutting and pulling away obstruction.
Excessive vibration. NOTE: Some vibration is normal due to engine and prop action.	Bent propeller.	Replace propeller as necessary.
Excessive vibration. NOTE: Some vibration is normal due to engine and prop action.	Engine components touching a brace or some part of the hull.	Check engine mounts and components for proper alignment. See Monterey Dealer for service.
Excessive vibration. NOTE: Some vibration is normal due to engine and prop action.	Engine not timed properly or misfiring.	Have engine tuned-up by an authorized dealer.
Poor performance.	Boat is overloaded or weight is badly distributed.	Reduce overload or distribute load evenly. Trimming the boat will also help.
Poor performance.	Material wrapped around the propeller.	Run prop in reverse or cut and pull material from prop.
Poor performance.	Damaged or use of wrong propeller.	Inspect propeller; replace as necessary.
Poor performance.	Boat hull has marine growth on it or hull is damaged.	Clean or repair hull as necessary.
Poor performance.	Excessive bilge water.	Pump out water and inspect hull for leaks.

Electrical

Notice

For any troubleshooting information other than given here, refer to the individual component owner's manuals.



CAUTION

Never reset a circuit breaker which has been automatically tripped without first locating and correcting the problem.



CAUTION

Only experienced and certified electrical professionals should perform work on your boat's electrical system.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Electrical component will not function.	Circuit breaker in the tripped or OFF position. Weak or discharged battery. Loose or broken wire connection.	If breaker is tripped, correct the problem and reset; otherwise turn circuit breaker ON. Charge battery. Connect or repair wire as necessary. Install plug in outlet.
Lights do not come on or are dim.	Circuit breaker in the tripped or OFF position. Weak or discharged battery. Loose or broken wire connection. Light bulb burned out.	If breaker is tripped, correct the problem and reset; otherwise turn circuit breaker ON. Charge battery. Connect or repair wire as necessary. Replace bulb.
Generator will not start.	DC main circuit breaker in OFF position.	Turn circuit breaker ON.
No power at AC outlets.	Ground fault circuit interrupter tripped.	Reset button on outlet and test. If reset button or light does not come on, DO NOT use any outlets. Have circuit checked by qualified technician.

Plumbing

Notice

For any troubleshooting information other than given here, refer to the individual component owner's manuals.


PROBLEM	POSSIBLE CAUSE	SOLUTION
No water from cockpit wash-down when turned on.	<p>WASHDOWN PUMP circuit breaker tripped or OFF.</p> <p>Washdown switch OFF.</p> <p>Strainer or hull inlet plugged.</p> <p>Seacock closed.</p> <p>Pump's automatic shut-off is defective.</p>	<p>If breaker is tripped, correct the problem and reset; otherwise turn circuit breaker ON.</p> <p>Flip switch to ON.</p> <p>Clean strainer or remove obstruction from inlet.</p> <p>Open washdown seacock.</p> <p>Have washdown pump checked by authorized dealer.</p>
No water at showers or sinks when faucets are turned on.	<p>FRESHWATER PUMP circuit breaker tripped or off.</p> <p>Freshwater tank is empty.</p> <p>Pump is defective.</p>	<p>If breaker is tripped, correct the problem and reset; otherwise turn circuit breaker ON.</p> <p>Fill freshwater tank.</p> <p>Have pump serviced by authorized dealer.</p>
Low water pressure at all showers and sinks.	<p>Water system has lost its charge.</p> <p>Weak or worn pump.</p>	<p>Check for leaks in water system or air leaks in accumulator. See Monterey Dealer for service.</p> <p>Have pump serviced by authorized dealer.</p>
Low water pressure at only one shower or sink.	<p>Restriction or obstruction in water line.</p>	<p>Clean, repair, or remove obstruction from water line.</p>
Shower sump overflows.	<p>SUMP PUMP circuit breaker in the tripped or OFF position.</p> <p>Discharge lines blocked or pinched.</p> <p>Pump or automatic switch is defective.</p>	<p>If the breaker is tripped, correct the problem and reset; otherwise turn circuit breaker ON.</p> <p>Remove obstruction or straighten line.</p> <p>Have pump or switch serviced by authorized dealer.</p>
Head will not flush.	<p>HEAD, FWD circuit breaker in the tripped or OFF position.</p> <p>Low battery charge.</p> <p>Flush water seacock not open.</p> <p>Inlet pedal valve not working.</p>	<p>If breaker is tripped, correct the problem and reset; otherwise turn circuit breaker ON.</p> <p>Charge the batteries.</p> <p>Open seacock.</p> <p>Have head serviced by authorized dealer.</p>
Head will not empty.	<p>Y valve not open or line to holding tank is blocked.</p>	<p>Open Y valve or remove obstruction.</p>

GENERATOR SET

The following procedure summarizes the operation of, and safety precautions for, the optional marine generator available for your boat. Before operating your generator, read the owner's manual which accompanies your generator.

Prestart

1. Check that the air cleaner is clean and properly installed.
2. Check the battery connections and electrolyte level (if battery has filler caps).
3. Check that the fuel tanks are full and that the fuel system is primed for operation.

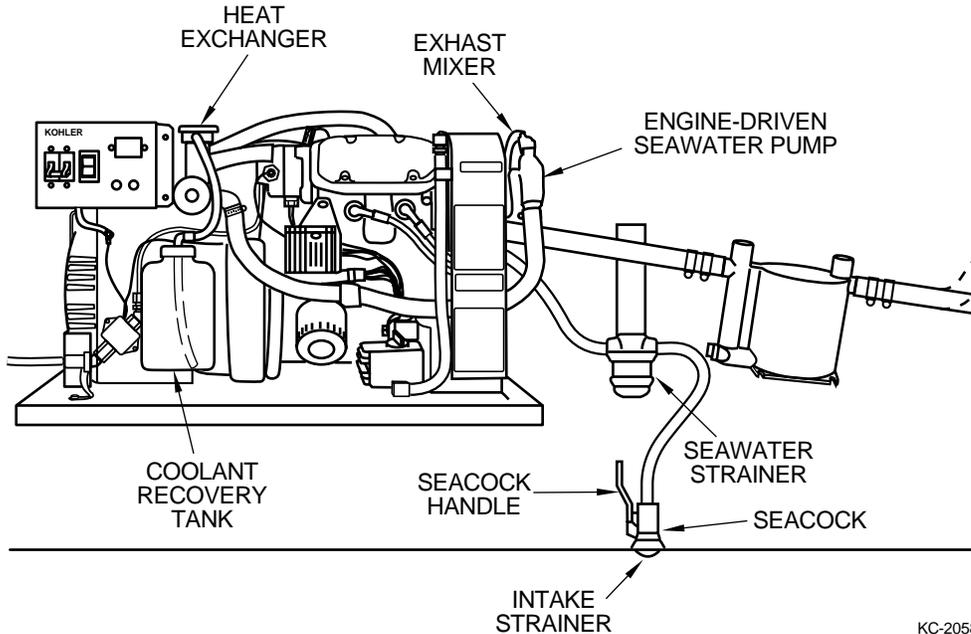

KC-2058



WARNING



Hot coolant can cause severe burns. Do not remove the pressure cap when engine is hot.

5. Check that coolant level in coolant recovery tank is between the MIN and MAX marks. Periodically remove the pressure cap and check on the fluid level **when engine is cool**. Do not rely solely on level in the coolant recovery tank.
6. For initial startup only, prime the sea water pump by closing seacock, removing hose from water filter outlet, filling hose and pump with clean water, replacing hose, and opening seacock.

CAUTION

Failure to have seacock open when generator is running, will result in serious engine damage due to overheating.

7. Check that generator seacock is open.
8. Check that marine ship-to-shore transfer switch is in the proper position and that all breakers are in the OFF position.
9. Open the manual fuel shut-off valve (if equipped).

Starting



WARNING



The blowers must be operated for a minimum of four minutes before each time the engine is started. Failure to operate the blower can cause an explosion.

1. Operate the ventilation blowers for a minimum of four minutes and check the engine compartment for gasoline vapors.

CAUTION

Do not crank the engine for more than seven seconds at a time. Allow a five second cool down period between cranking attempts if the engine fails to start. If the engine fails to start after three attempts, contact an authorized dealer for repairs. Failure to do so may result in serious damage to the starter motor.

2. Press the controller master switch, or the remote start switch on the AC control panel, to the START position and release switch when the unit has started.

CAUTION

Allow at least 30 seconds after shutdown before starting a hot engine. If the engine fails to start after the first attempt, close the seacock before continuing. This will prevent sea water from entering the engine cylinders through the exhaust valve.

CAUTION

After generator has started, check to be sure that water is flowing overboard from the generator discharge. If there is no discharge, stop and check for leaks or obstructions.

Stopping

1. Run generator set at no load for five minutes to allow engine to cool down.
2. Switch the controller master switch, or the remote start switch on the AC control panel, to the STOP position and wait until the generator set comes to a complete stop.

Circuit Protection

The AC circuit breaker on the generator controller will trip if a fault is detected in the AC output circuit. In case of fault, refer to your generator owner's manual for troubleshooting information.

CAUTION

Only replace fuses with fuses of the same type (ABC or #AB (ceramic)) and ampere rating. Do not use clear glass fuses.

Engine Shutdown Switches

The generator set engine is protected by three shutdown switches which automatically reset after the engine cools down; or in the case of low oil pressure, if the problem is corrected.

Low Oil Pressure (LOP) – will shut down unit if pressure is 20 psi or less.

High Water Temperature (HWT) – will shut down unit if temperature is greater than 248°-266°.

High Exhaust Temperature (HET) – will shut down unit if temperature is greater than 215° ± 5°.


AIR CONDITIONER

The following describes the optional air conditioning unit available for your boat. Before operating your air conditioner, read the accompanying owner's manual for more information.

The rated capacities of the air conditioning units are:

- 5,000 Btu/hr for the 245
- 7,000 Btu/hr for the 265
- 10,000 Btu/hr for the 282 and 302
- 12,000 Btu/hr for the 322


The optional air conditioning unit is supplied with sea water through a sea water pump. The seacock must be open to operate the heating/cooling unit.

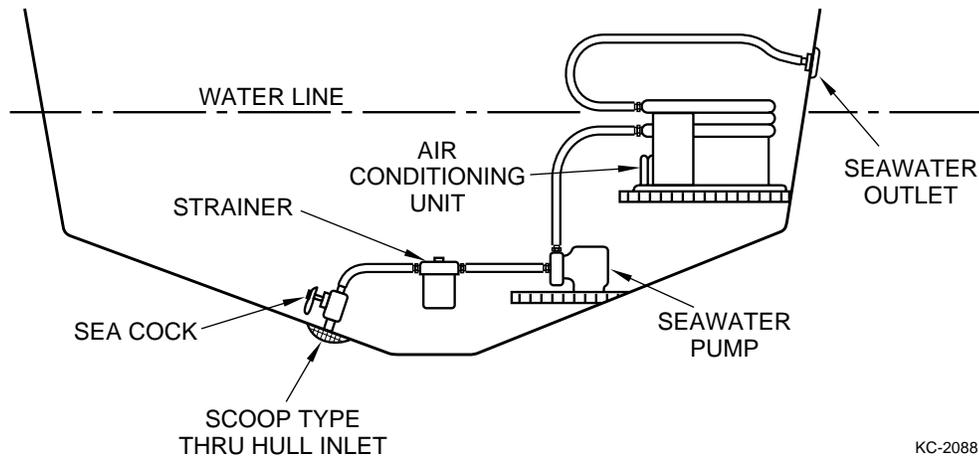


KC-2088

CAUTION

After air conditioner has started, check to be sure that water is flowing overboard from the air conditioner discharge. If there is no discharge, stop and check for leaks or obstructions.

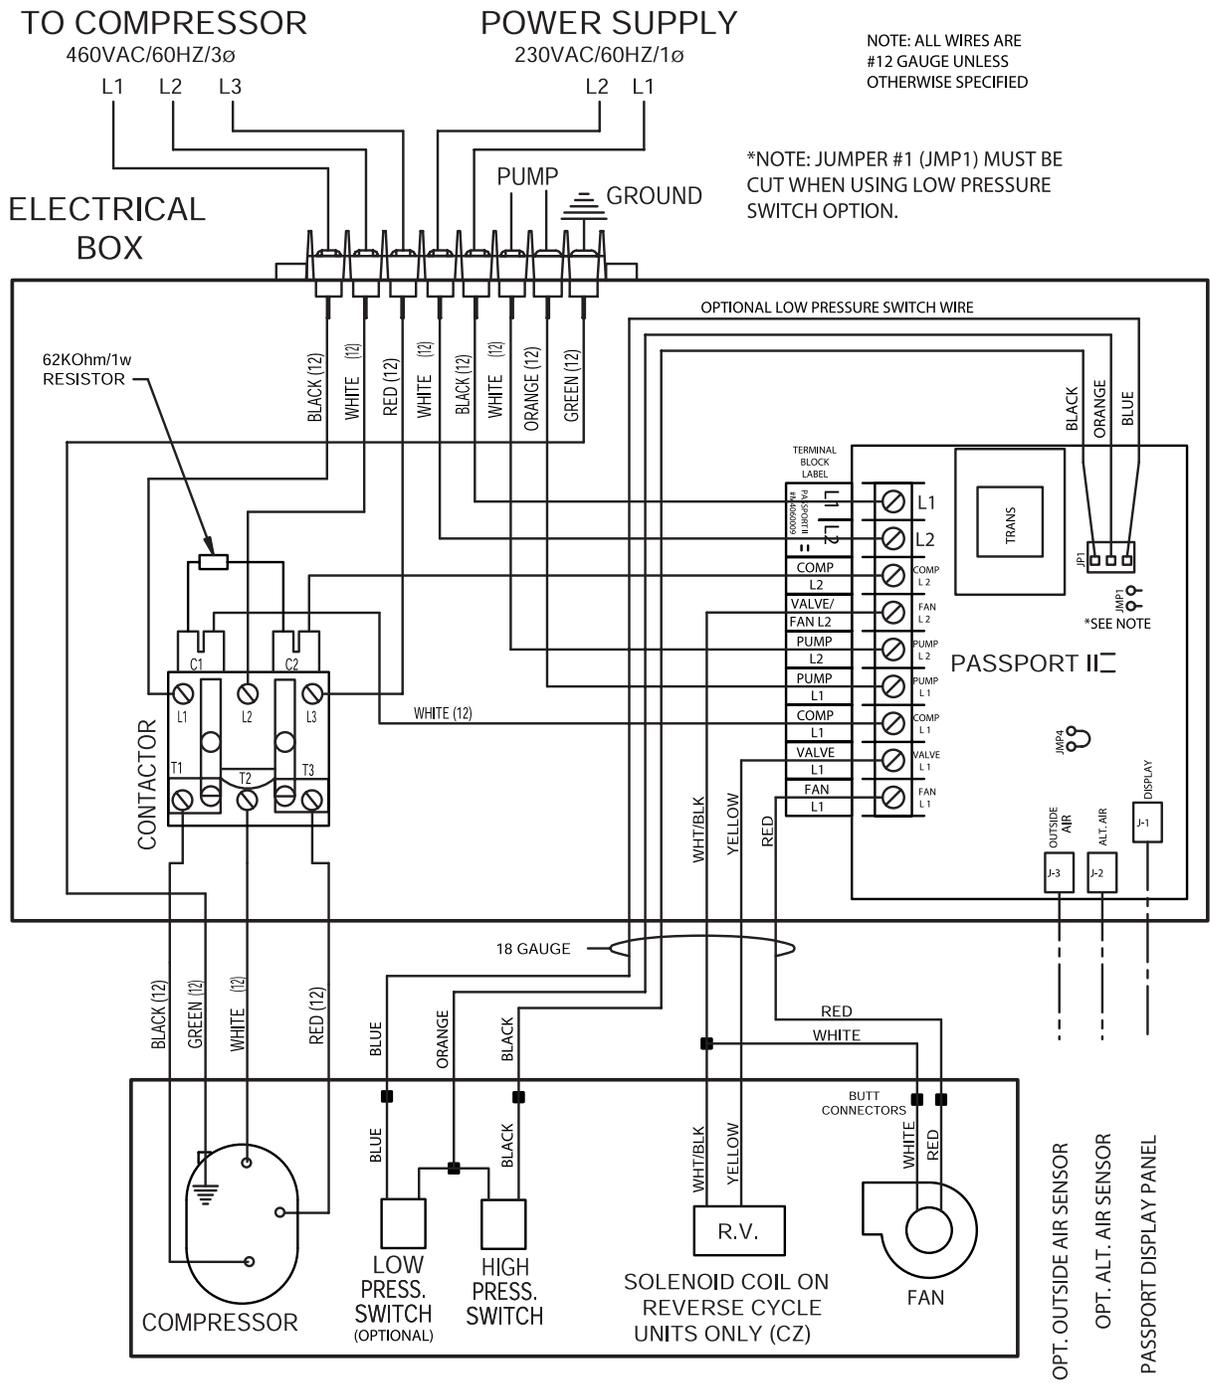


VECTOR SERIES AIR CONDITIONER SELF CONTAINED UNIT WIRING DIAGRAM

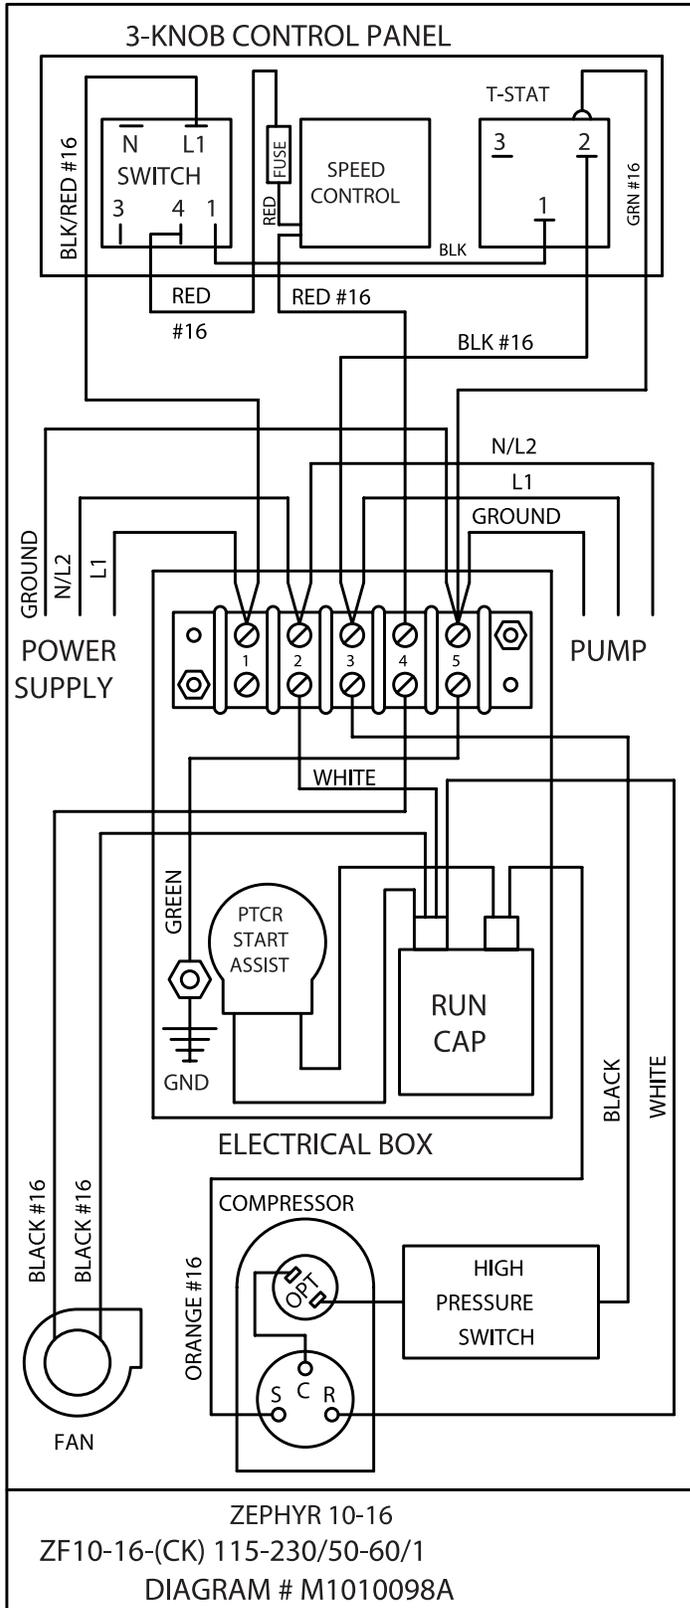


ZEPHYR SERIES AIR CONDITIONER WIRING DIAGRAM

ELECTRICAL BOX

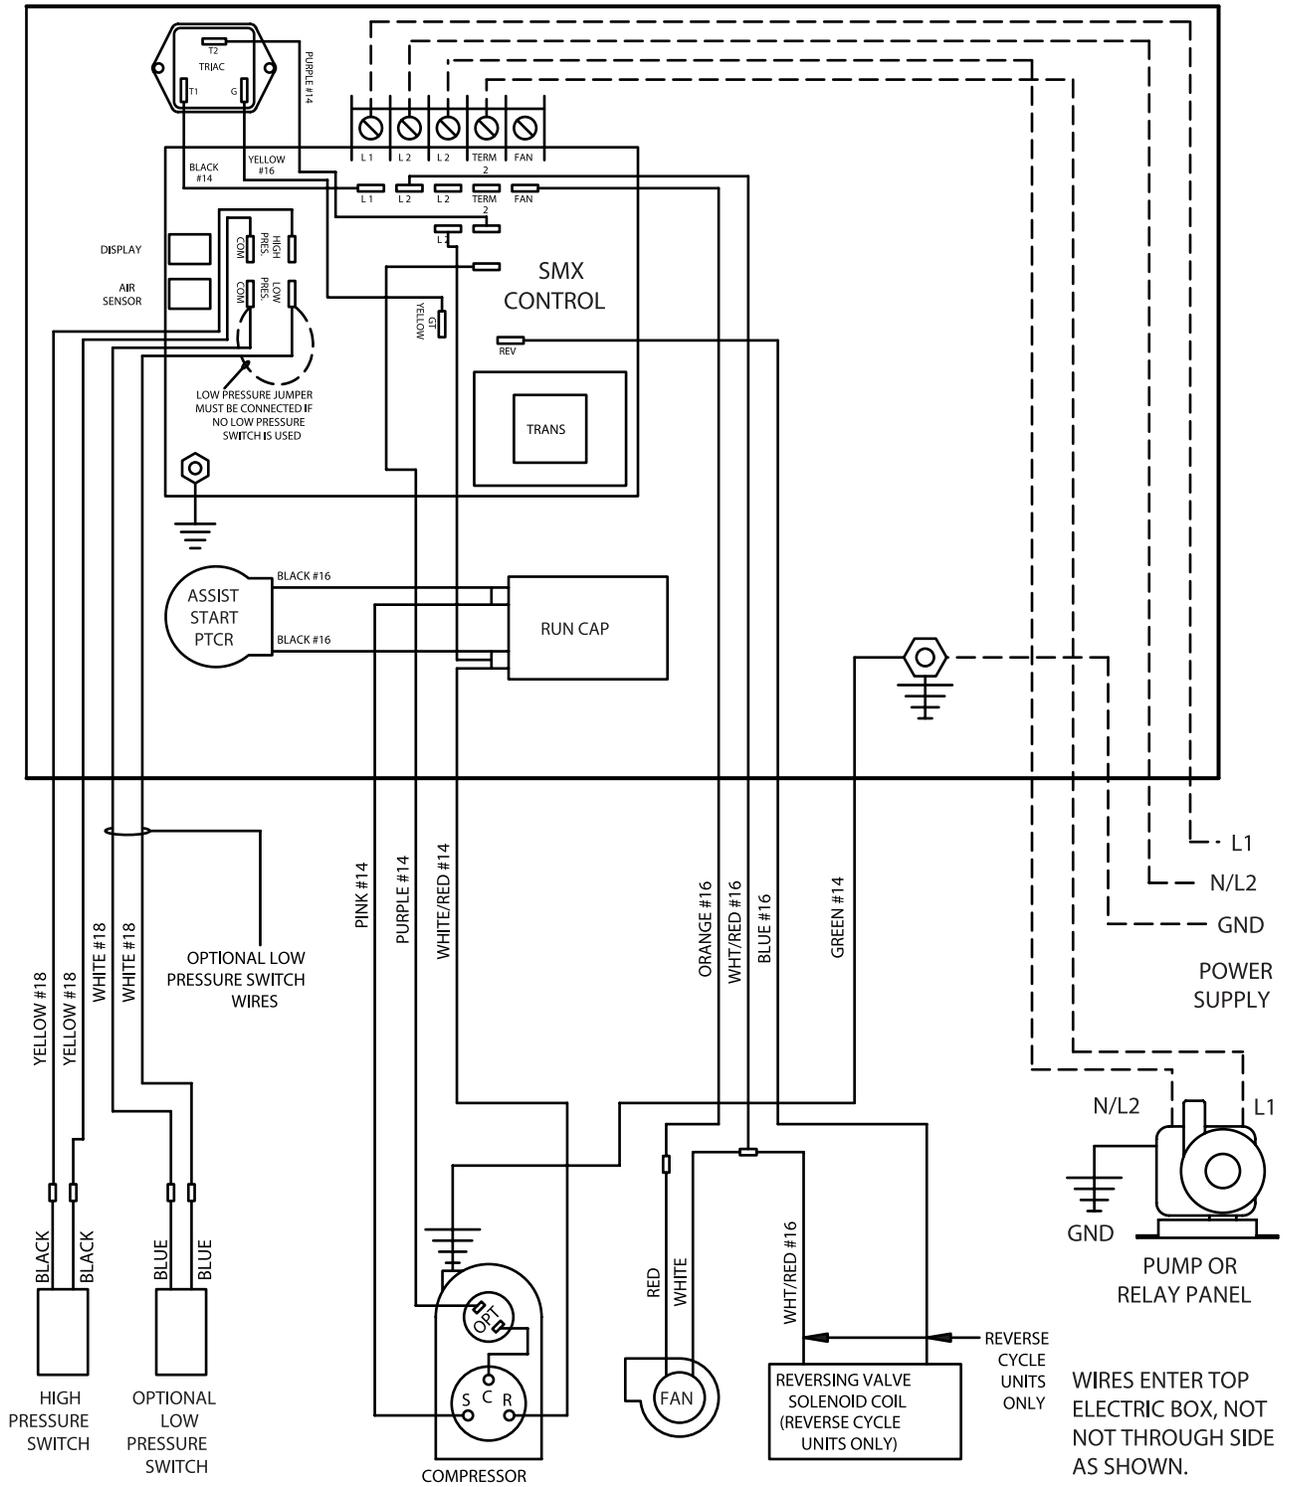


STOWAY COMPACT AIR CONDITIONER WIRING DIAGRAM


HRNS HOOKUP DETAIL

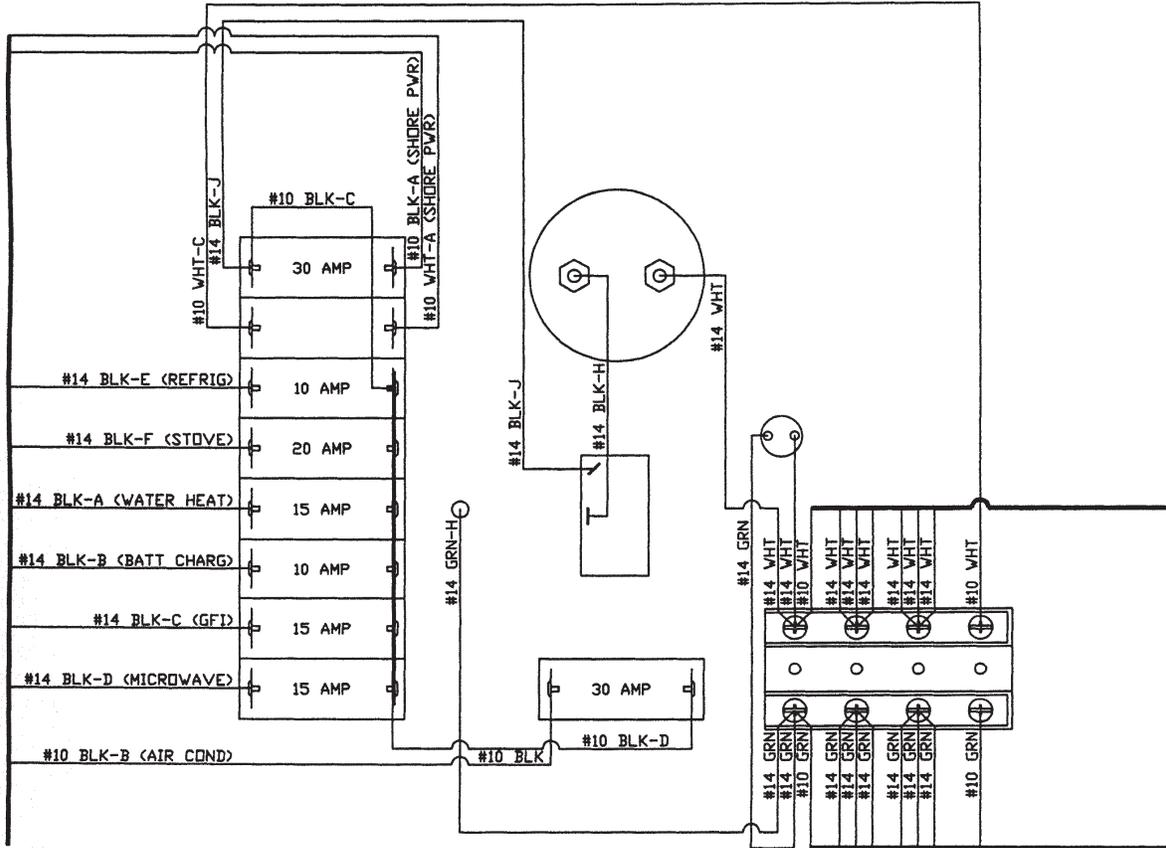


245 AC DISTRIBUTION PANEL

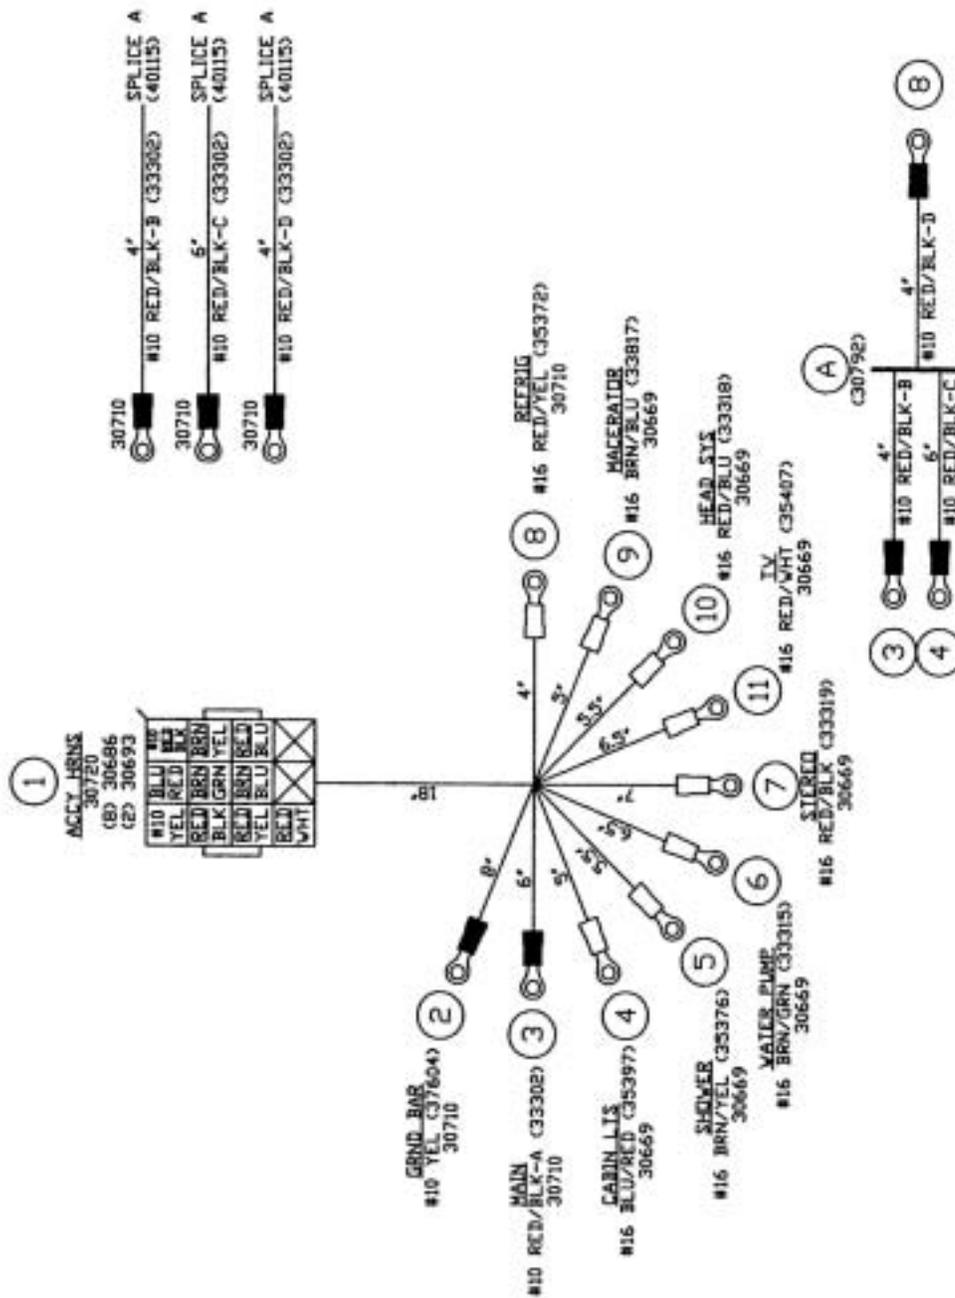


245 DC DISTRIBUTION PANEL

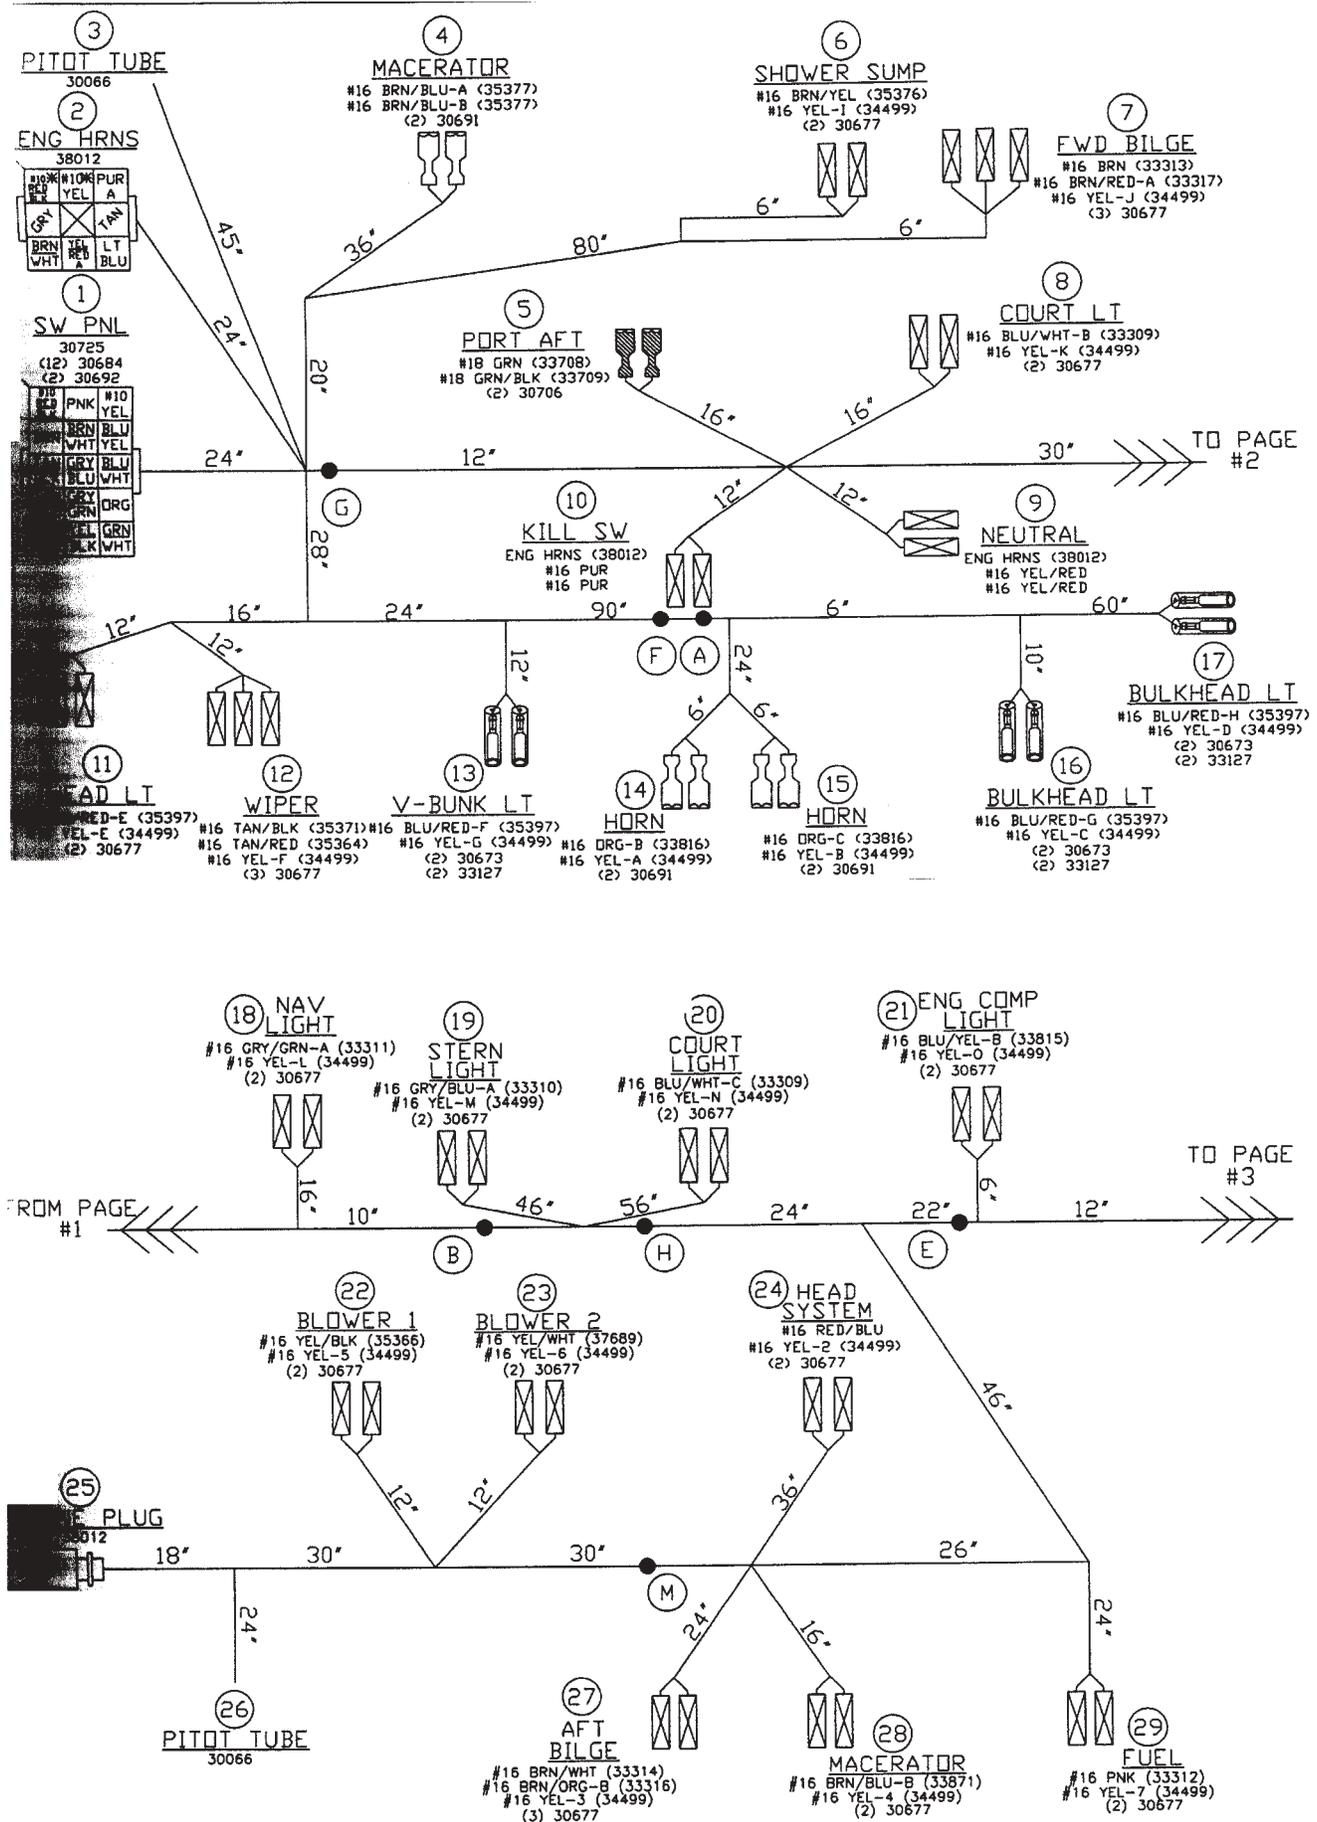



245 DC WIRING HARNESS (1 OF 2)

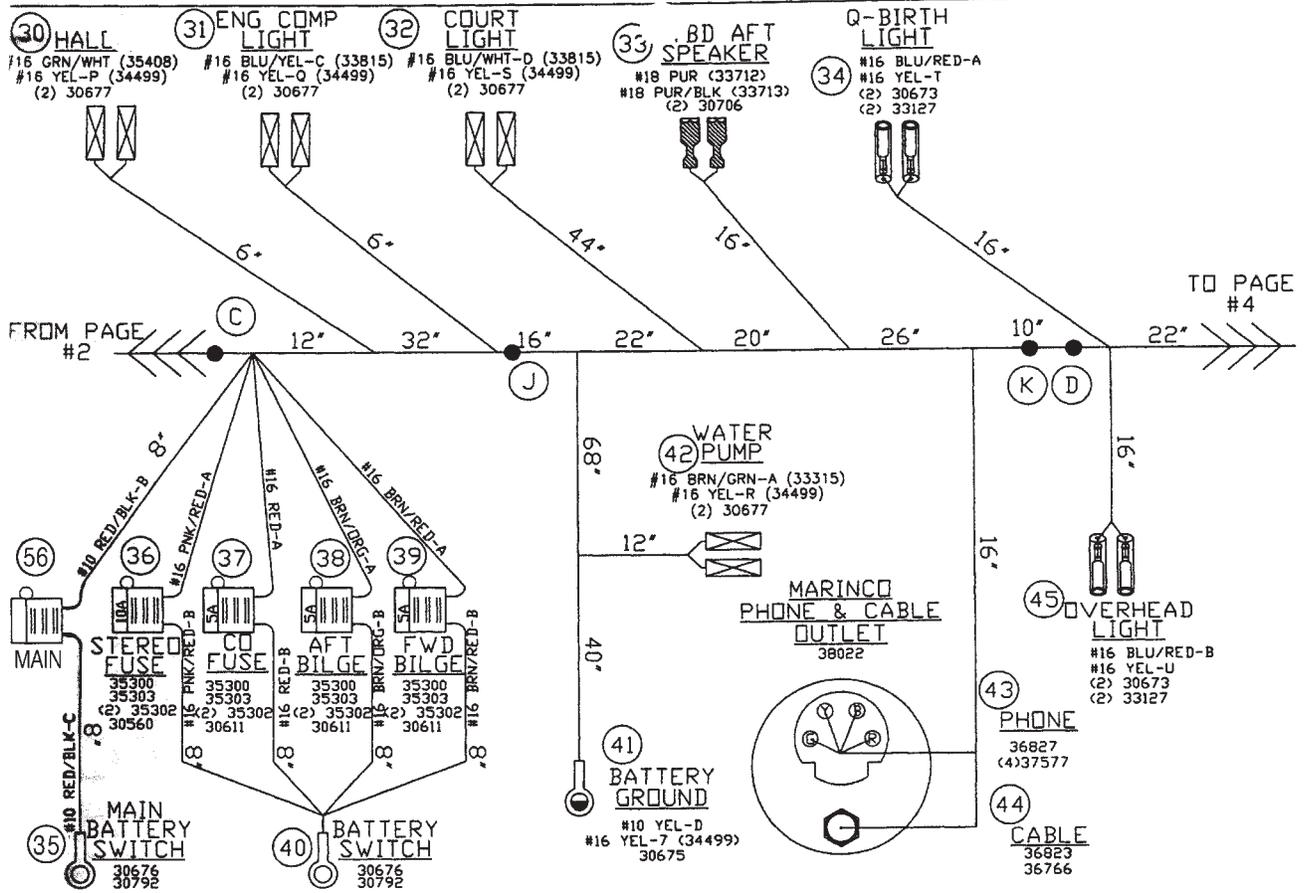


245 DC WIRING HARNESS (2 OF 2)

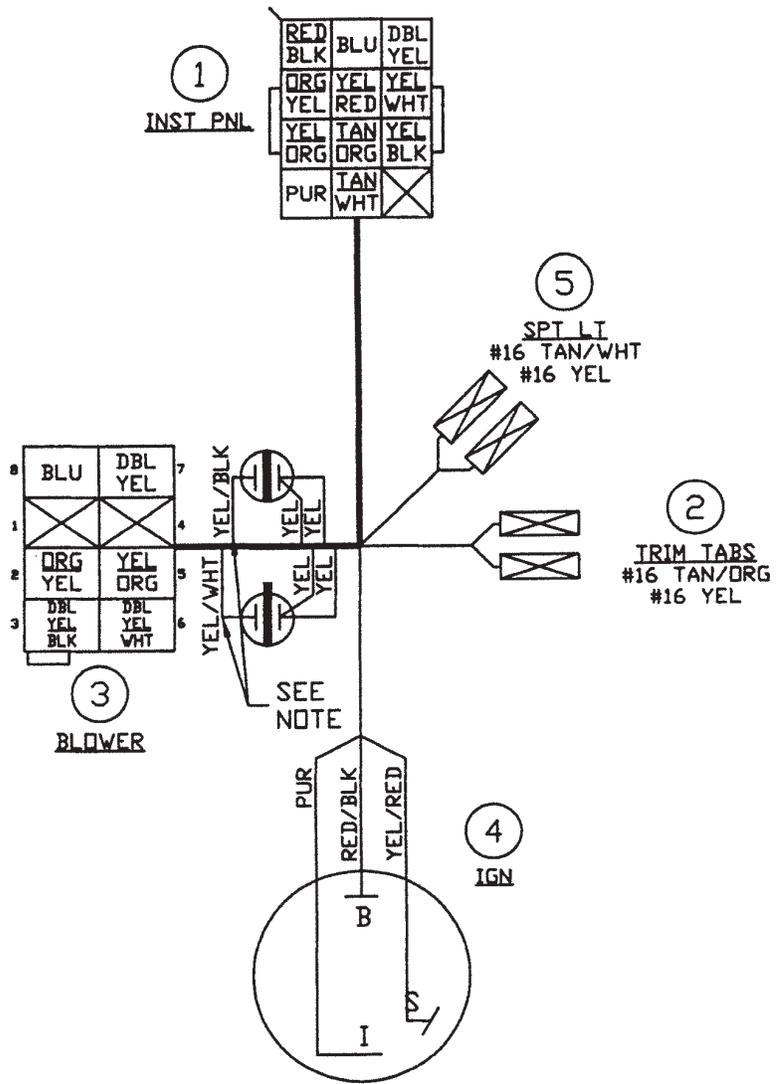



245 IGNITION PANEL HARNESS

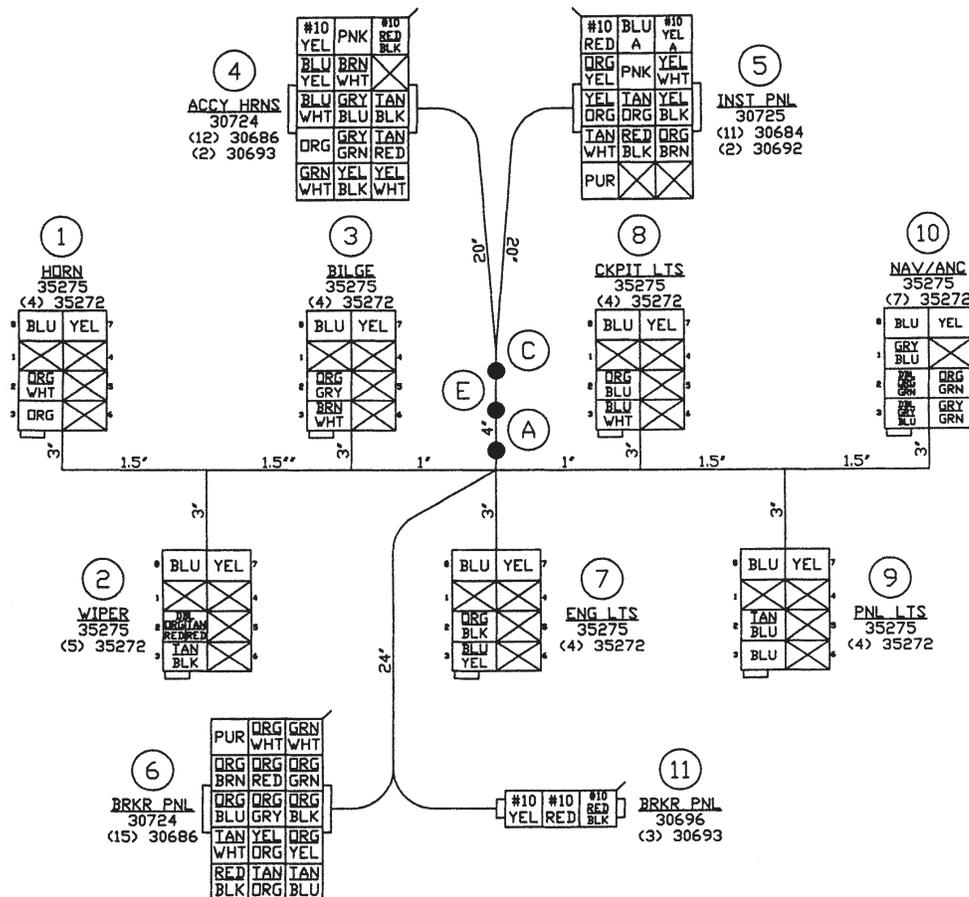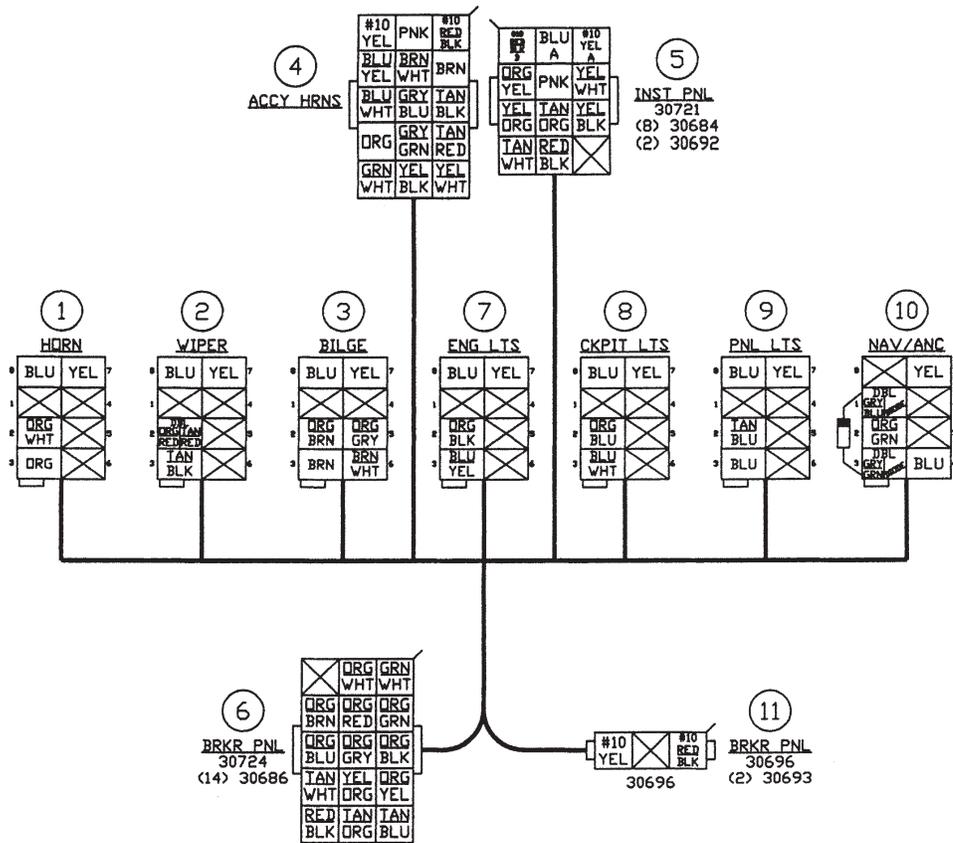

245 SWITCH PANEL HARNESS

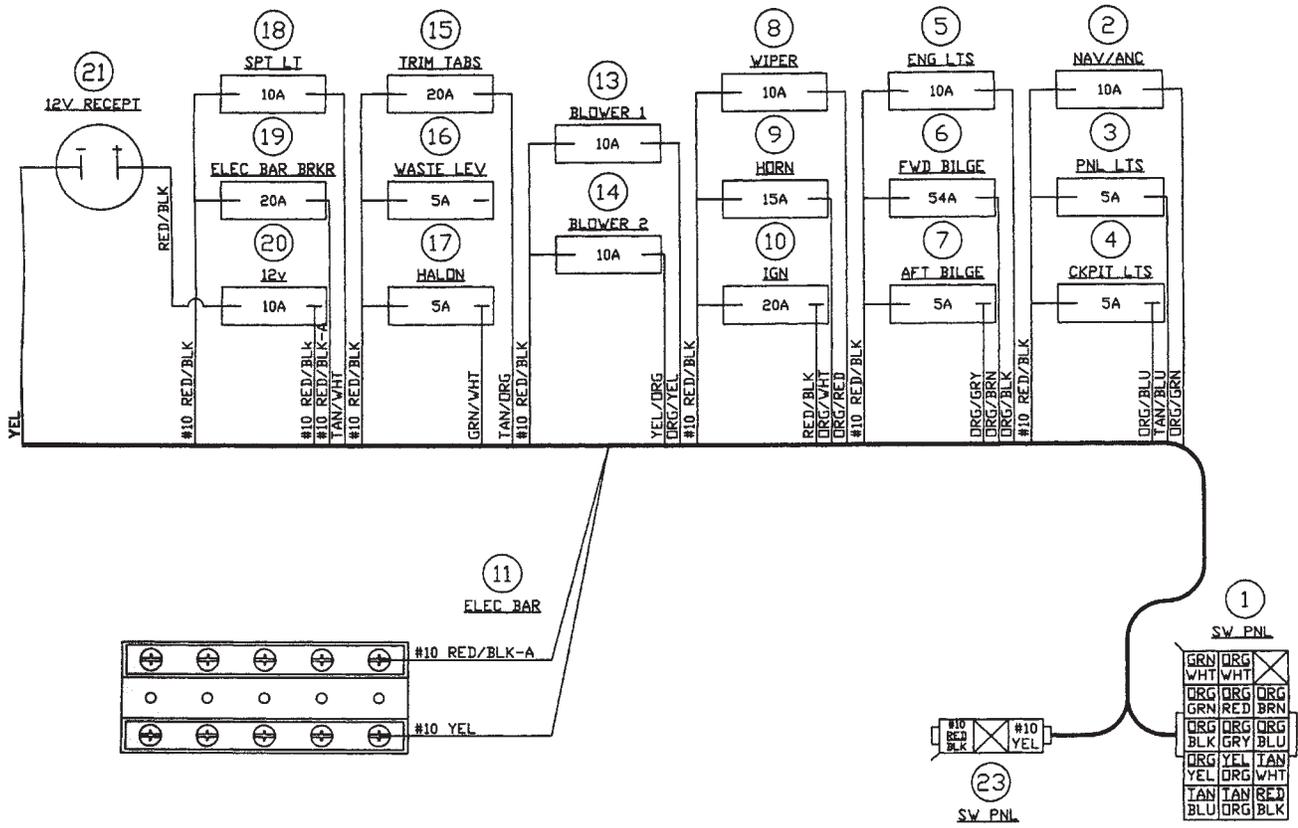



245 DC BREAKER PANEL HARNESS

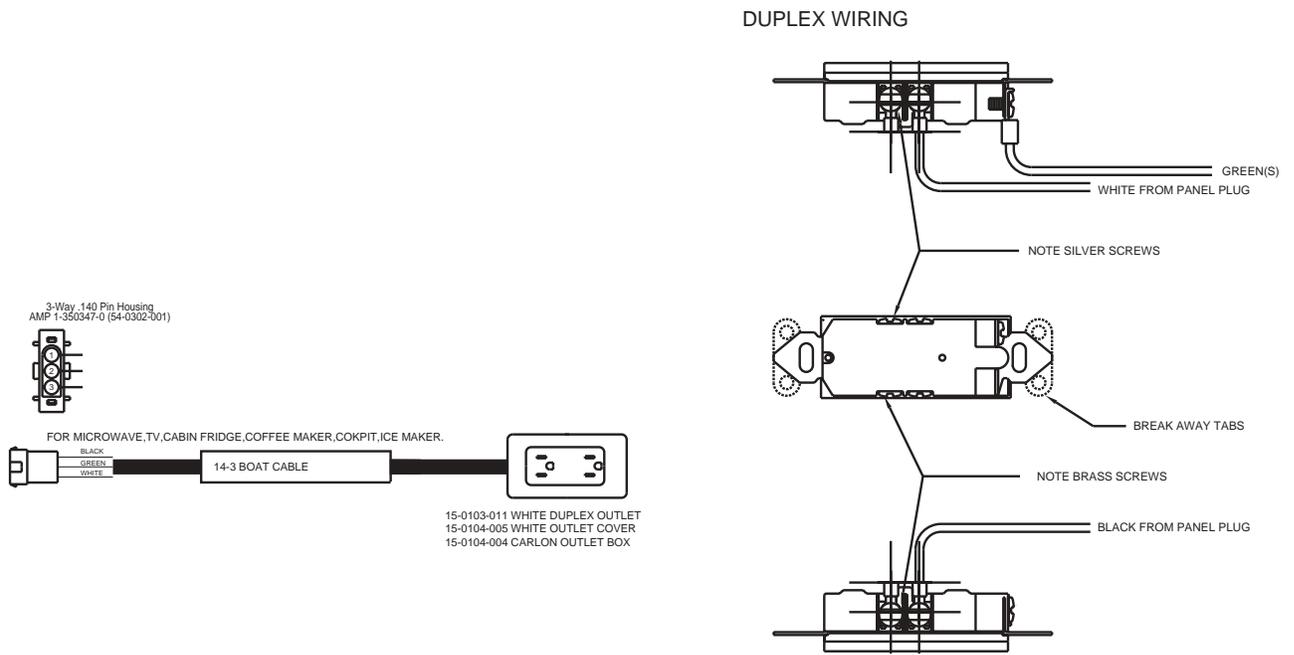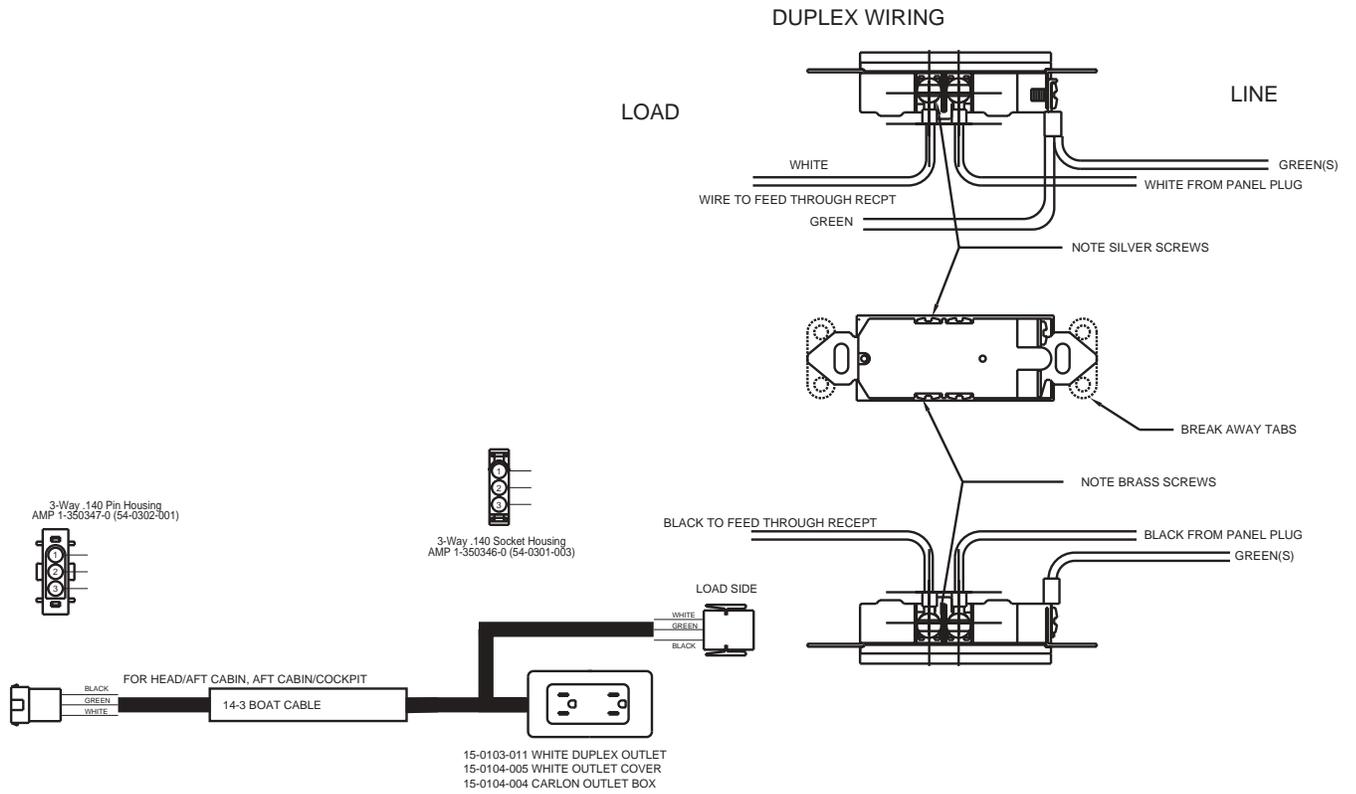

GALLEY ONLY


GFCI OUTLETWIRING

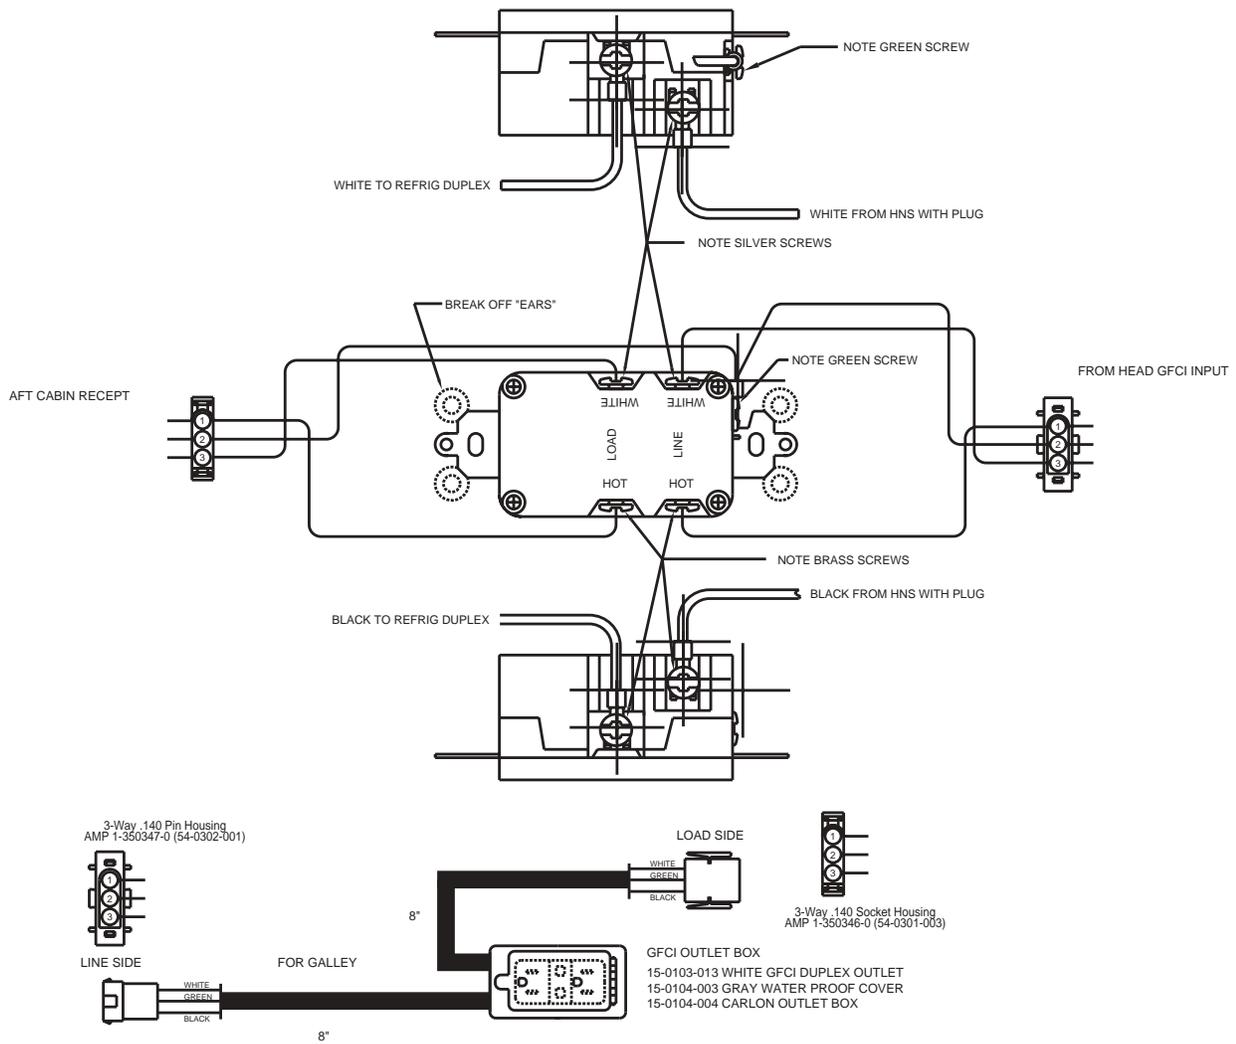


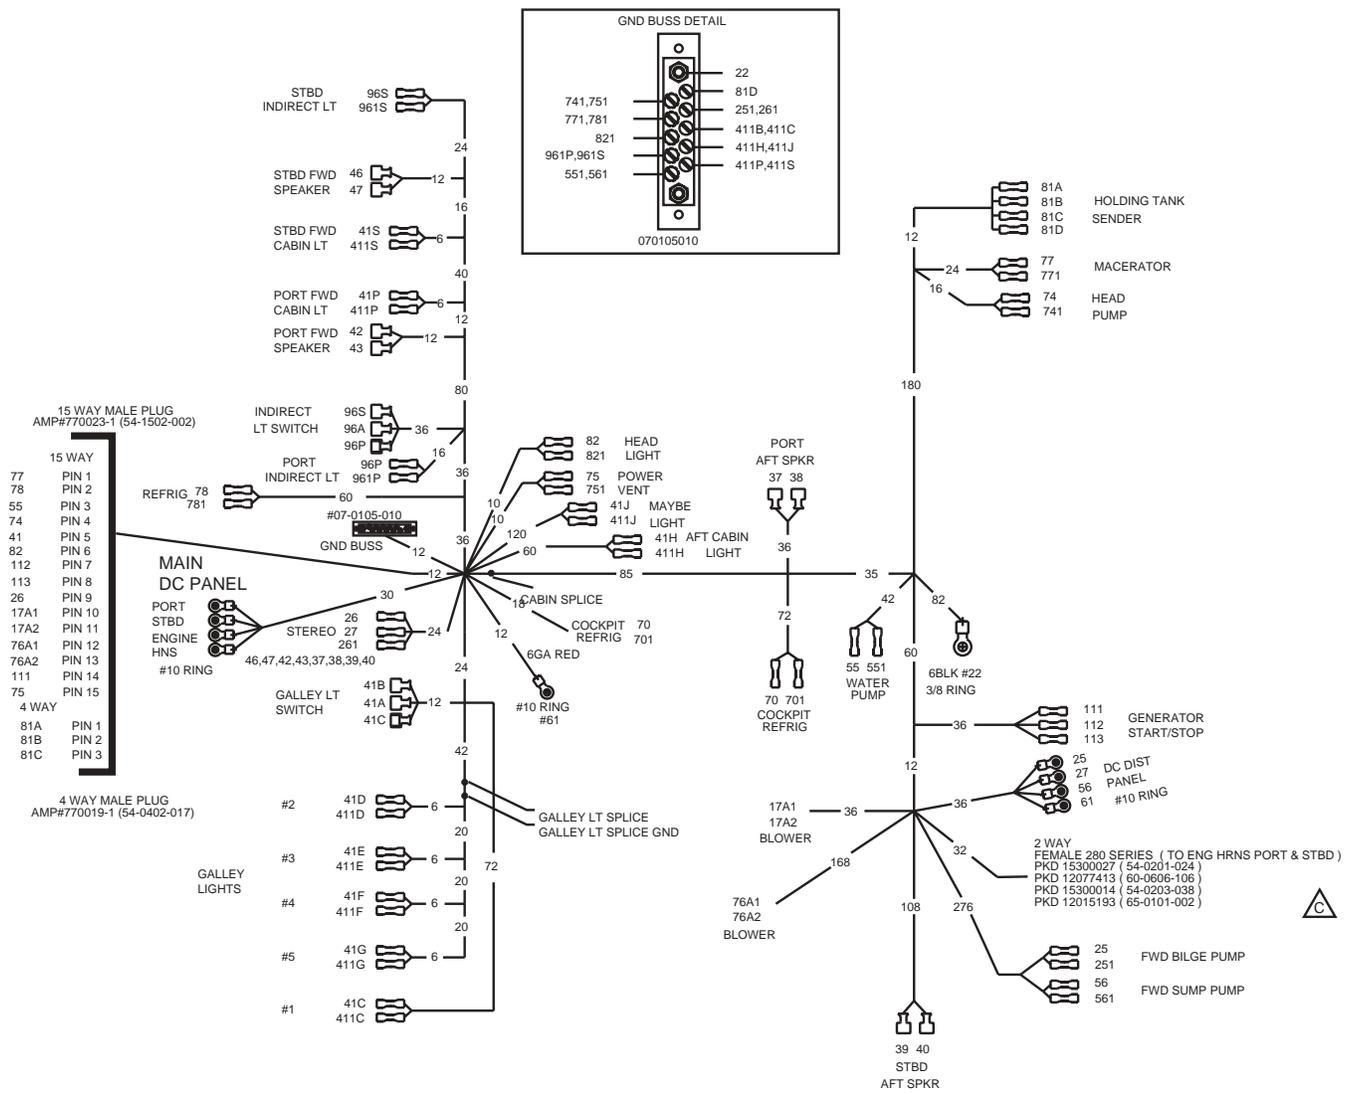


282 DC MAIN WIRING DIAGRAM

2 WAY
 MALE 280 SERIES (TO ENGRNS PORT & STBD)
 PKD 1530002 (54-0202-038)
 PKD 12048254 (60-0909-078)
 PKD 15300014 (54-0203-038)
 PKD 12015193 (65-0101-002)

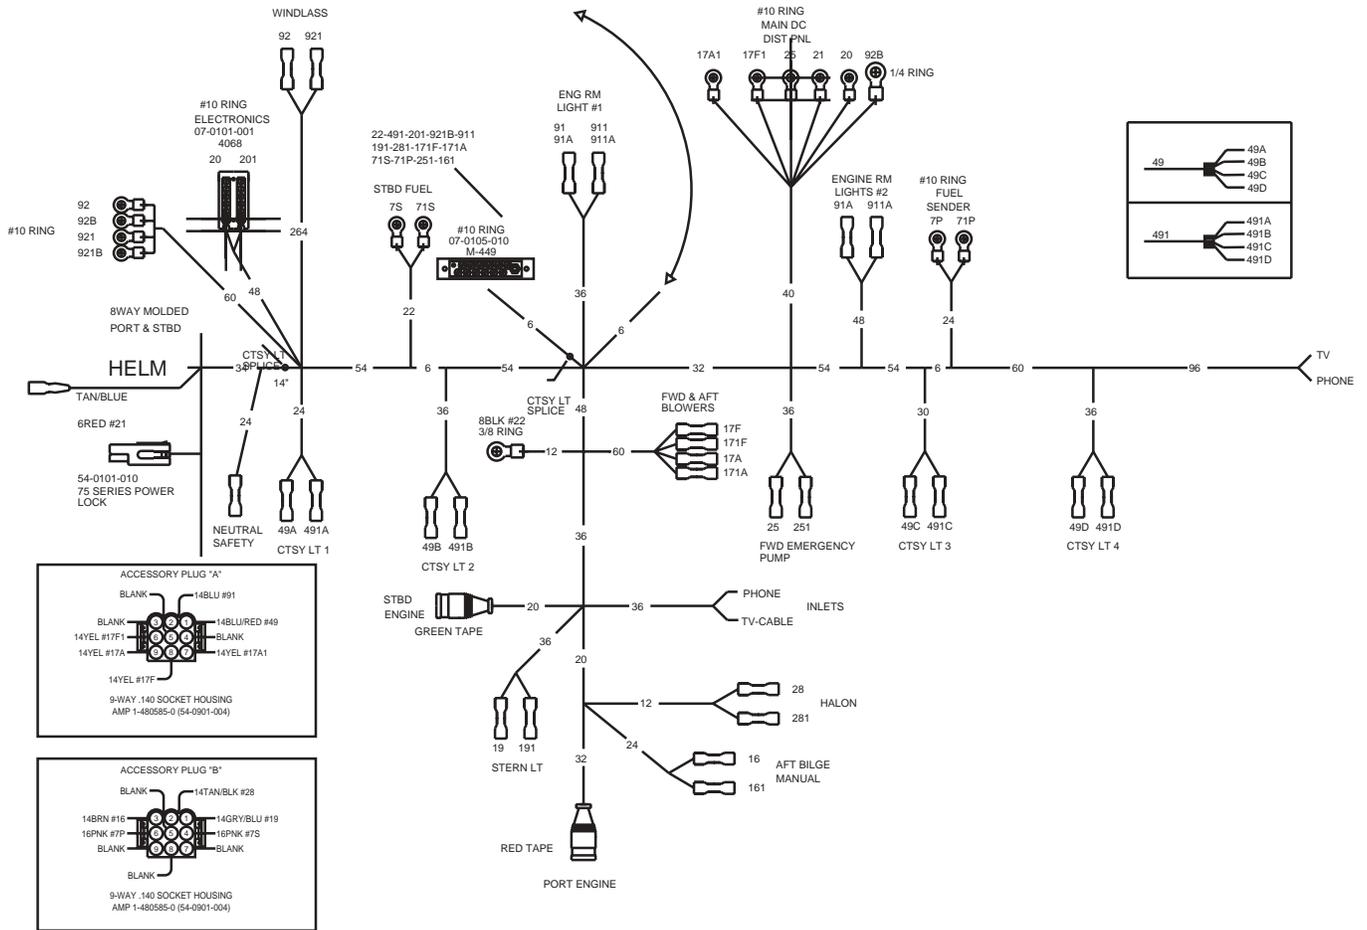



282 DC ENGINE ROOM WIRING DIAGRAM

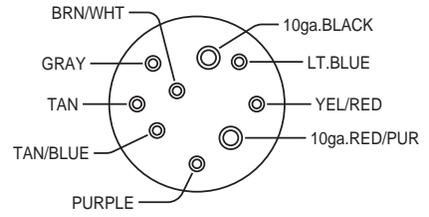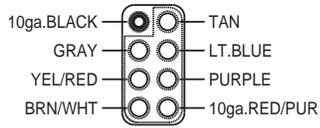

IGNITION BREAKOUT
2 WAY
MALE 280 SERIES (TO ENG HRNS PORT & STBD)
PKD 15300002 (54-0202-038)
PKD 12048254 (60-0909-078)
PKD 15300014 (54-0203-038)
PKD 12015193 (65-0101-002)




DOES NOT MAKE A DIFFERENCE ON HOW YOU
PLUG THE RED/PUR WIRES

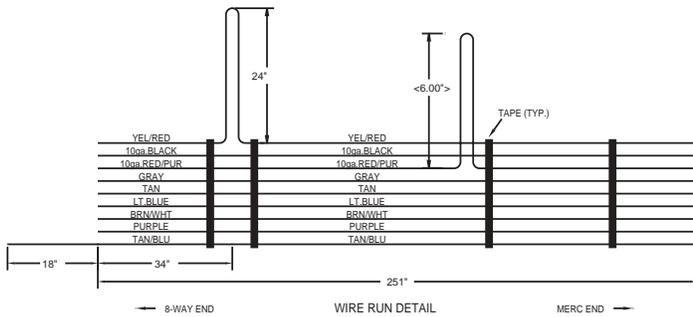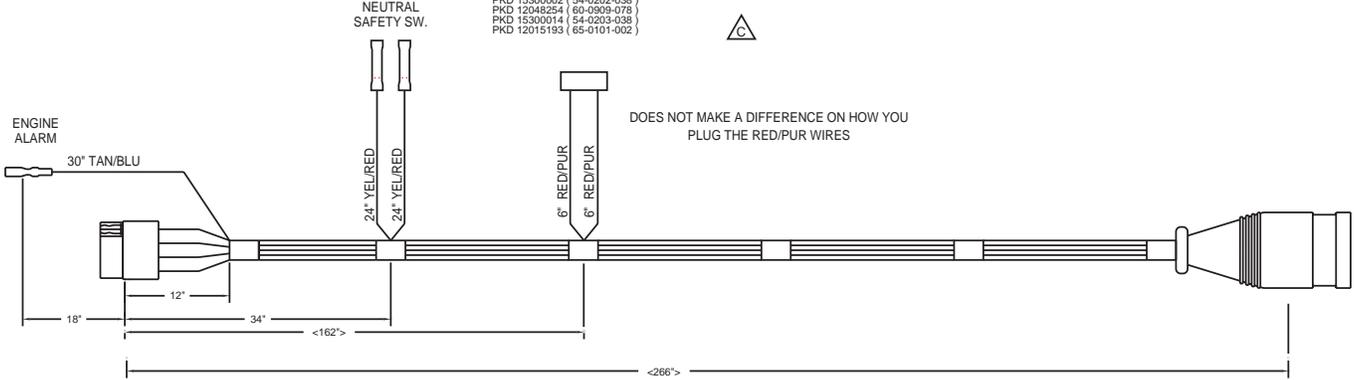


NOTES:

- 1) BREAK-OUT YEL/RED WIRE 34" FROM 8-WAY END AND LOOP 24".
- 1) BREAK-OUT RED/PUR WIRE 162" FROM 8-WAY END AND LOOP 6".
- 2) FOLLOW WIRE RUN DETAIL CLOSELY TO ENSURE THAT WIRES ARE TAPED AND TERMINATED PROPERLY.


282 ENGINE EXTENSION HARNESS WIRING DIAGRAM

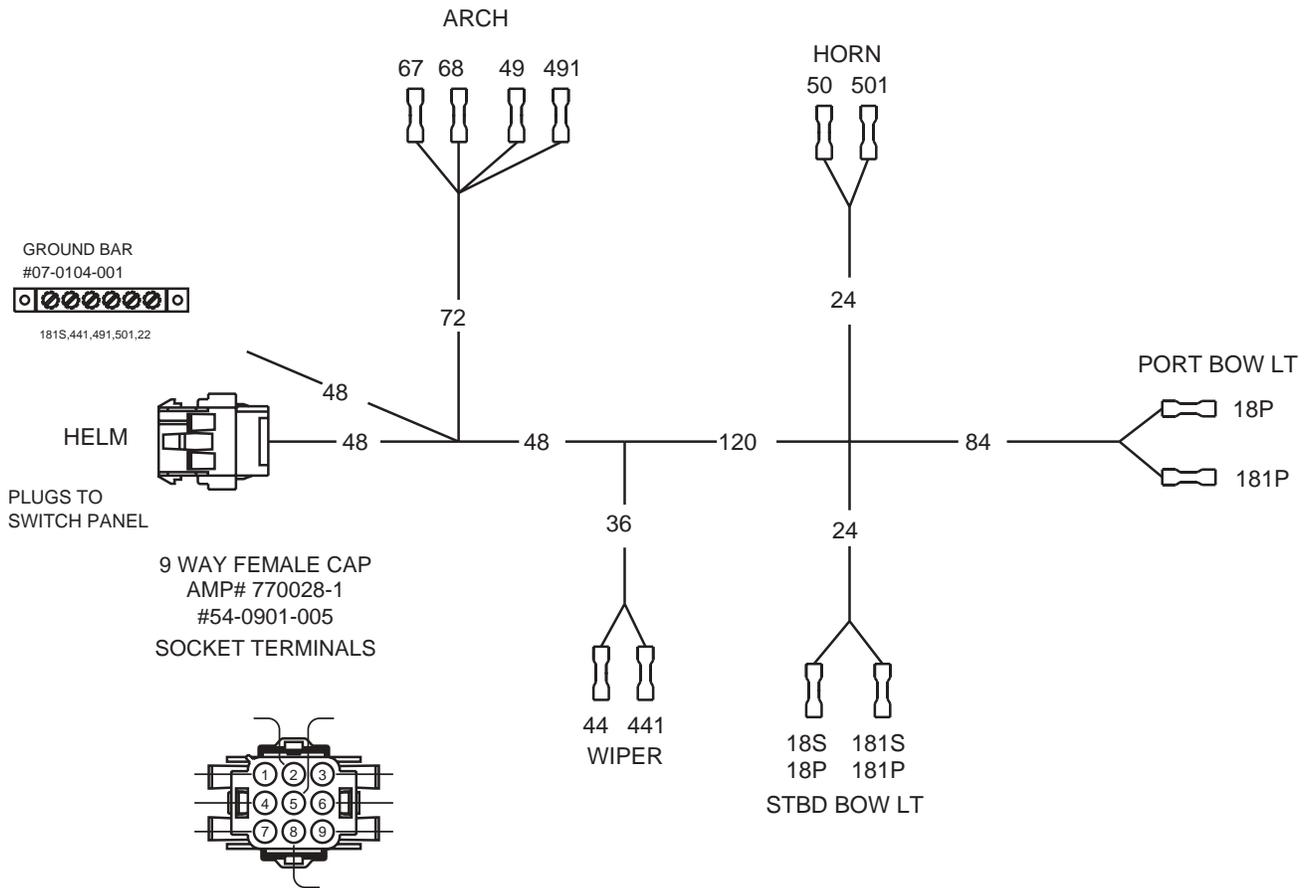

282 DC FORWARD WIRING DIAGRAM

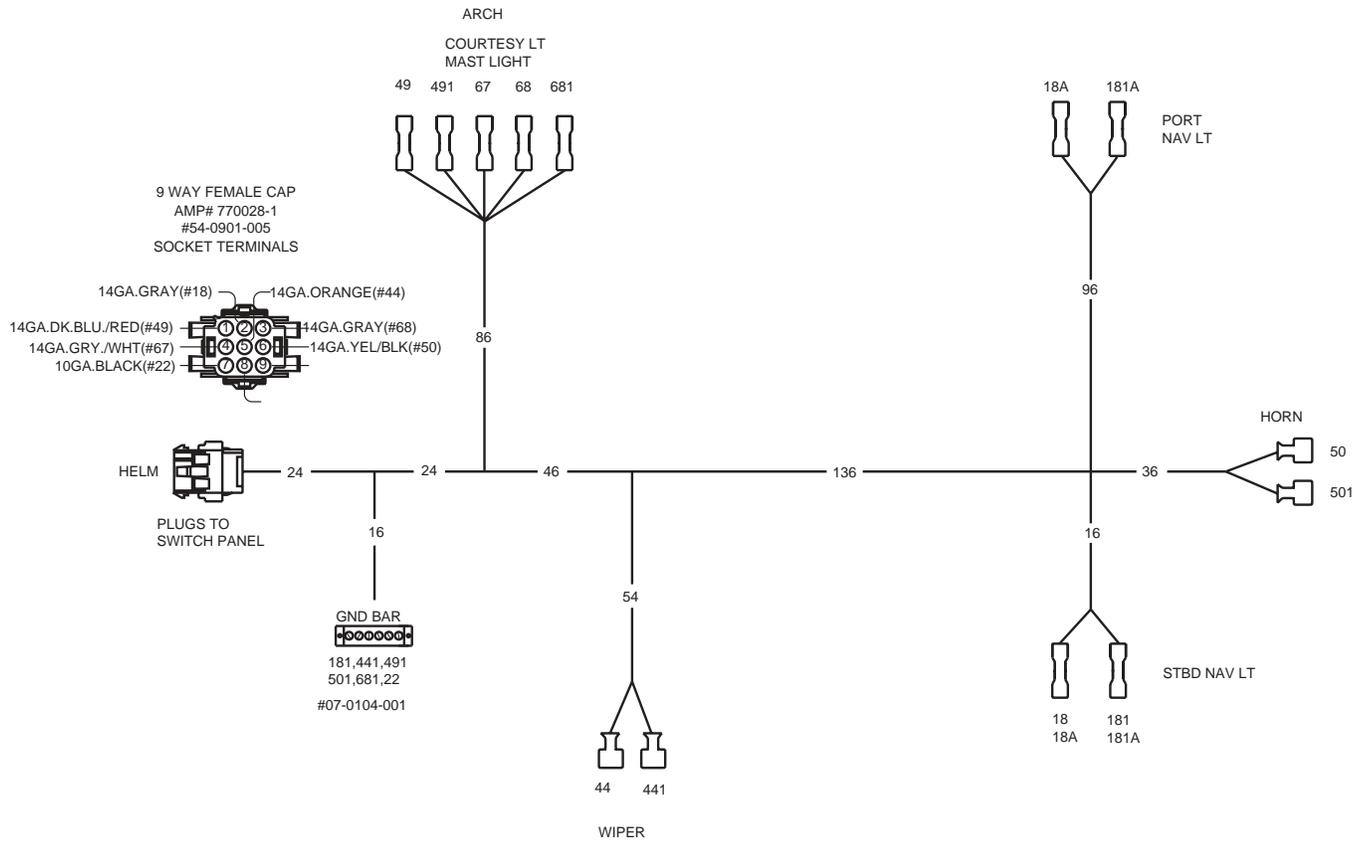


302 DC HELM WIRING DIAGRAM

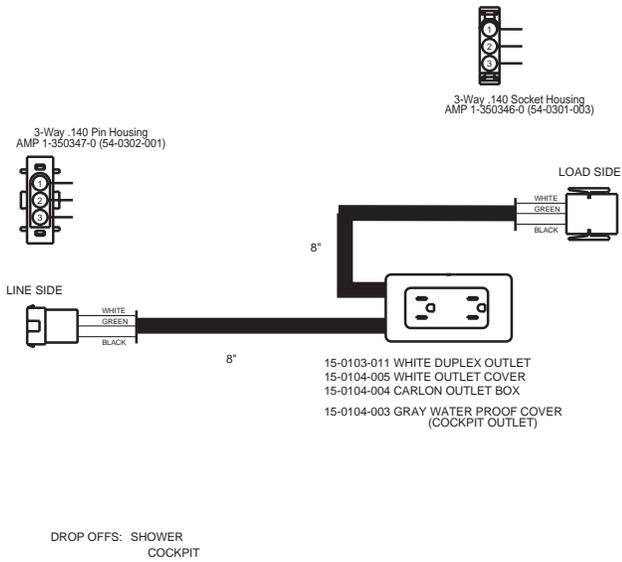


ASSEMBLY IN:

STRAIN RELIEF OF BOX MUST BE ON JACKET OF CABLE
(NOT ON INDIVIDUAL WIRES)

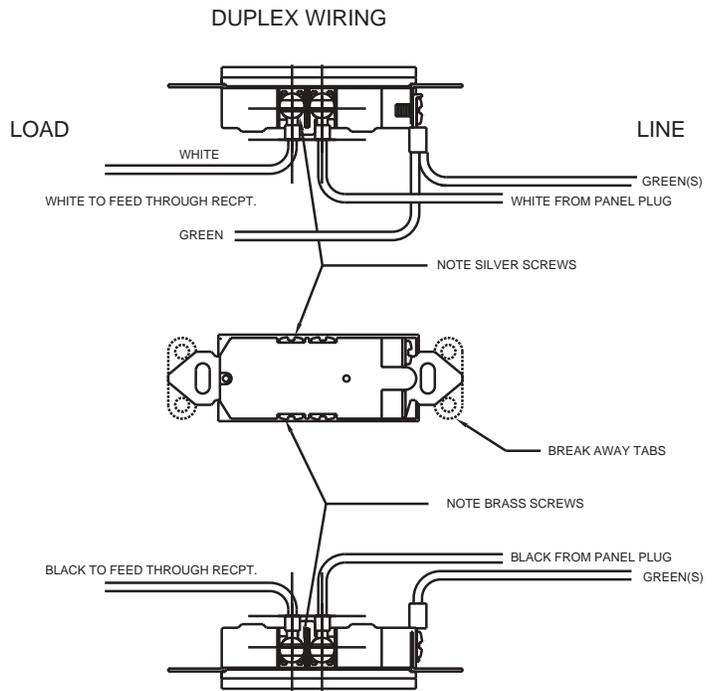

302 WIRING DIAGRAM


GFCI OUTLETWIRING

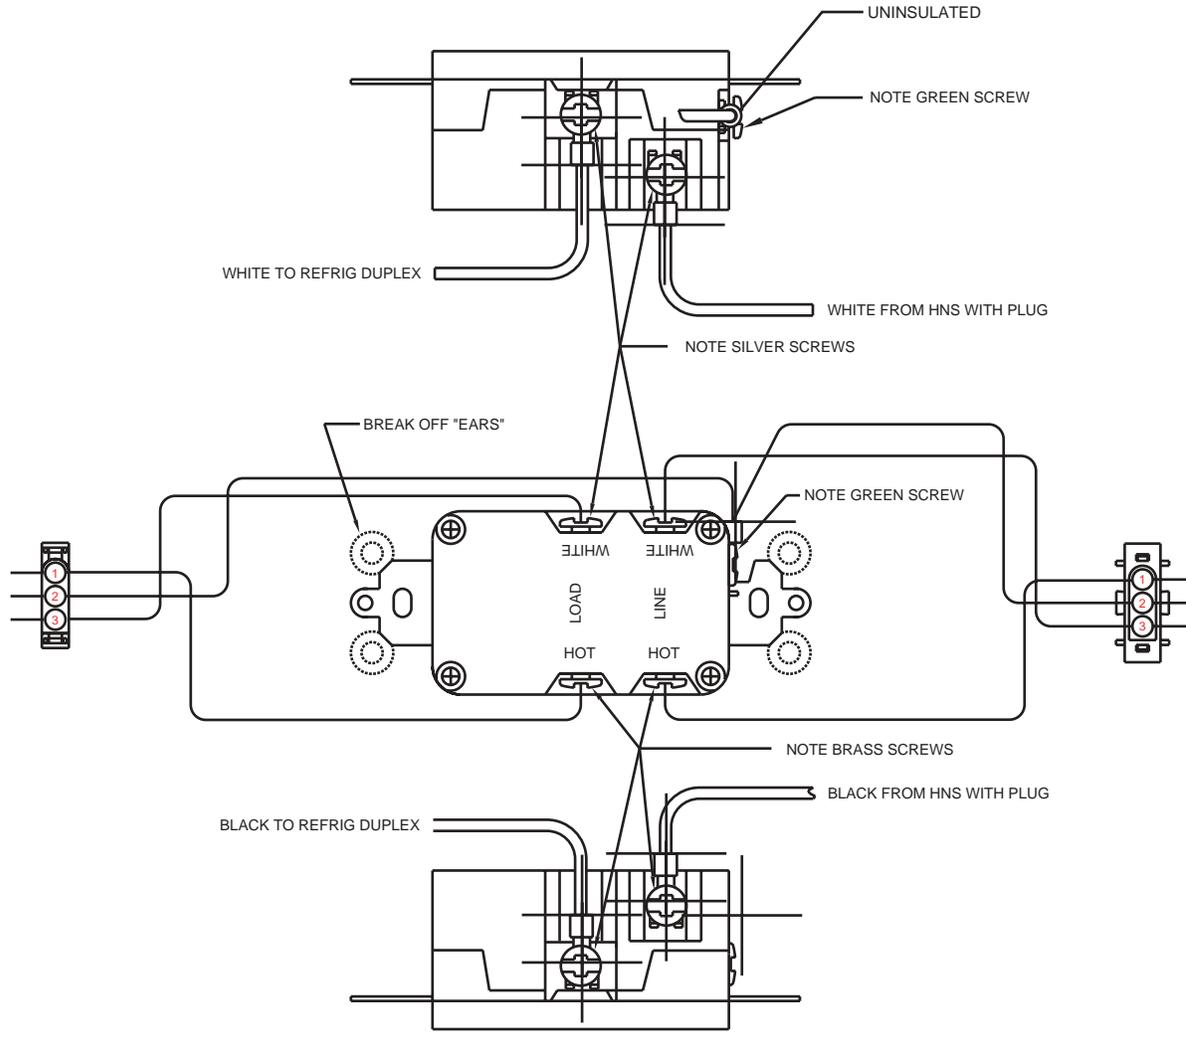


3-Way .140 Pin Housing
AMP 1-350347-0 (54-0302-001)




LINE SIDE

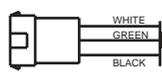

LOAD SIDE

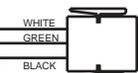

3-Way .140 Socket Housing
AMP 1-350346-0 (54-0301-003)

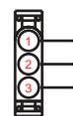


8"

8"


- GFCI OUTLET BOX
 15-0103-013 WHITE GFCI DUPLEX OUTLET
 15-0104-003 GRAY WATER PROOF COVER
 15-0104-004 CARLON OUTLET BOX


302 WIRING DIAGRAM

DUPLEX WIRING

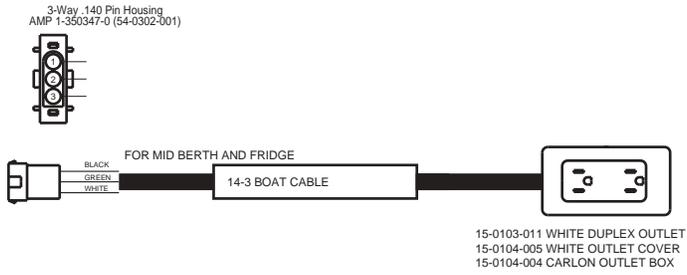


DROP OFF:
ICEMAKER
MID BERTH
COFFEE MAKER
TV
FRIDGE

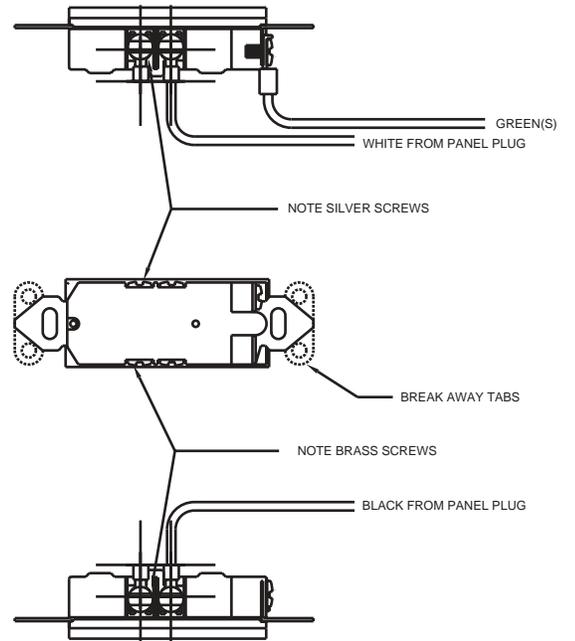


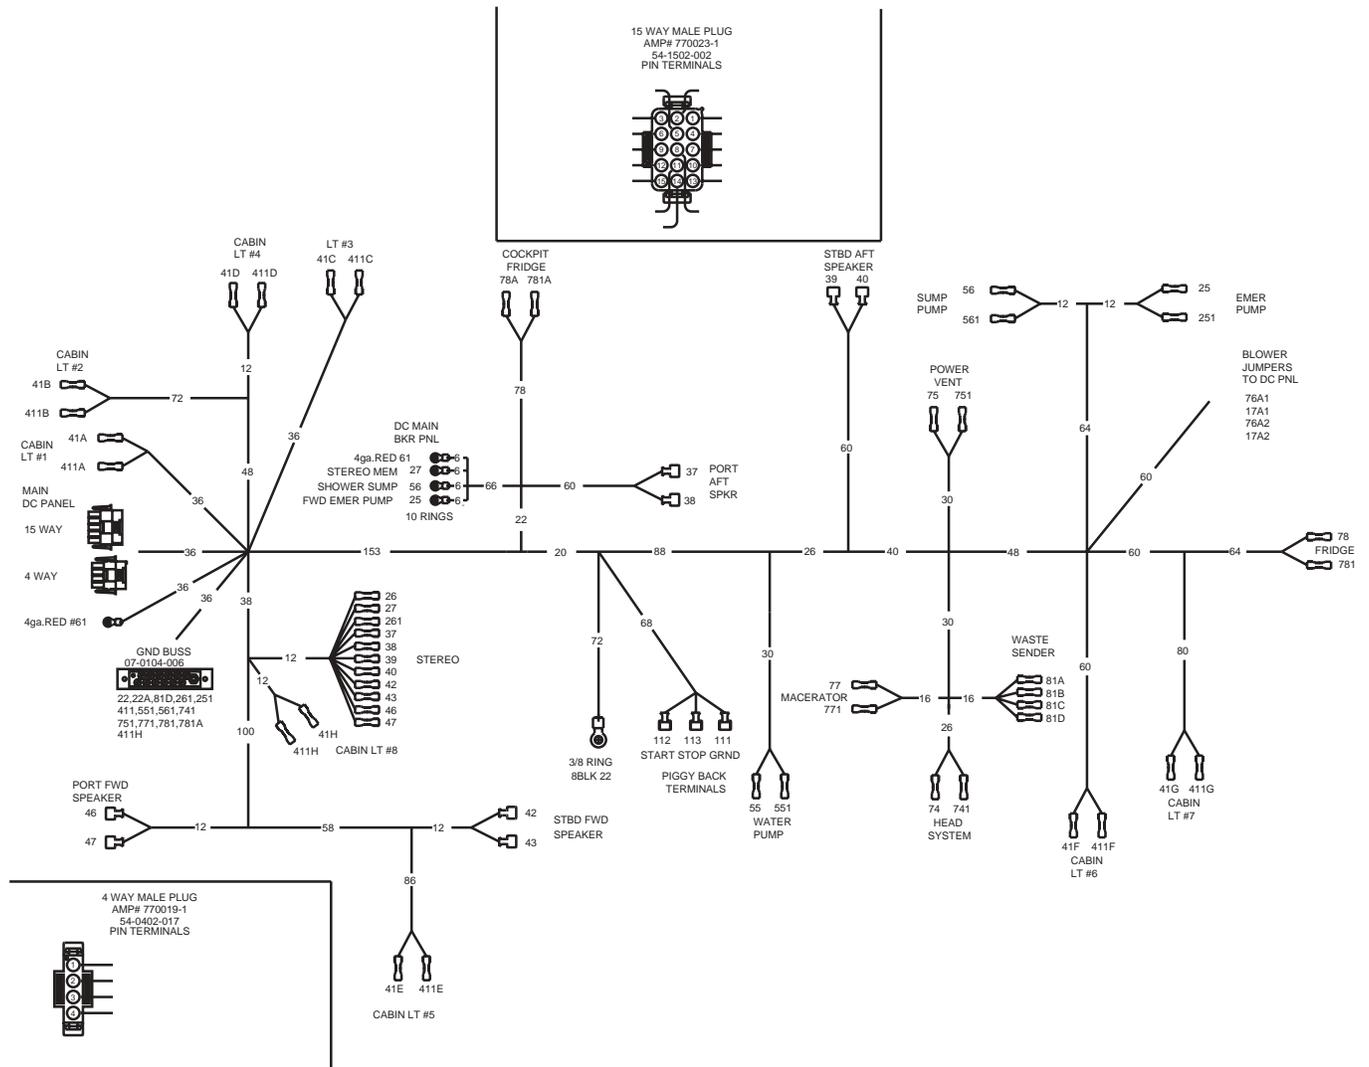



302 DC MAIN WIRING DIAGRAM

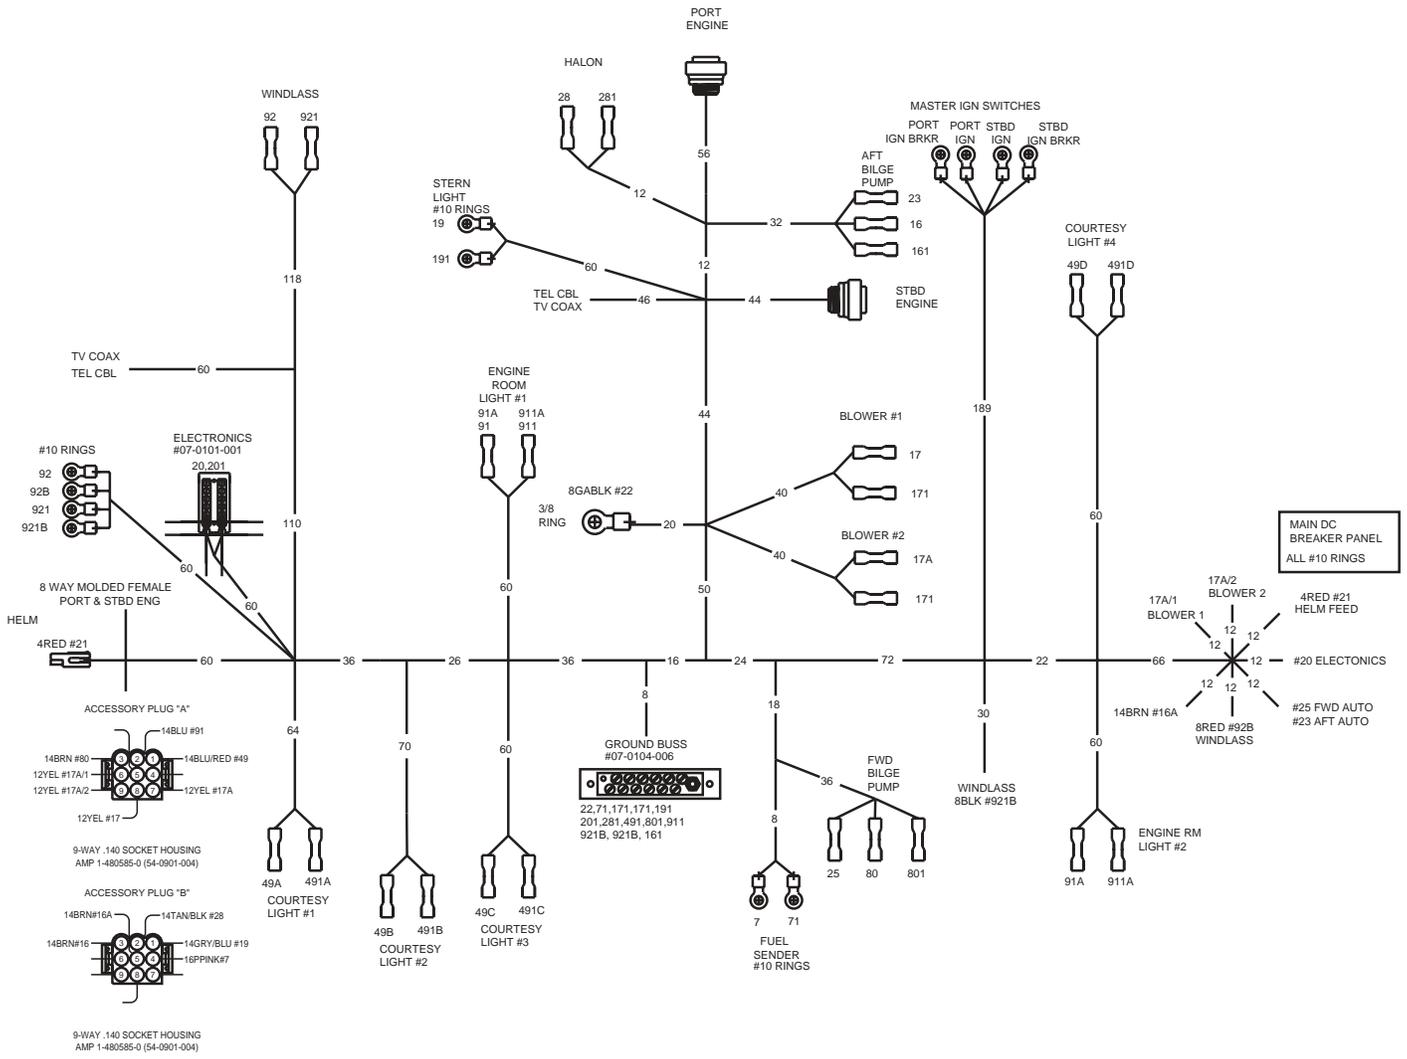





302 DC ENGINE ROOM WIRING DIAGRAM

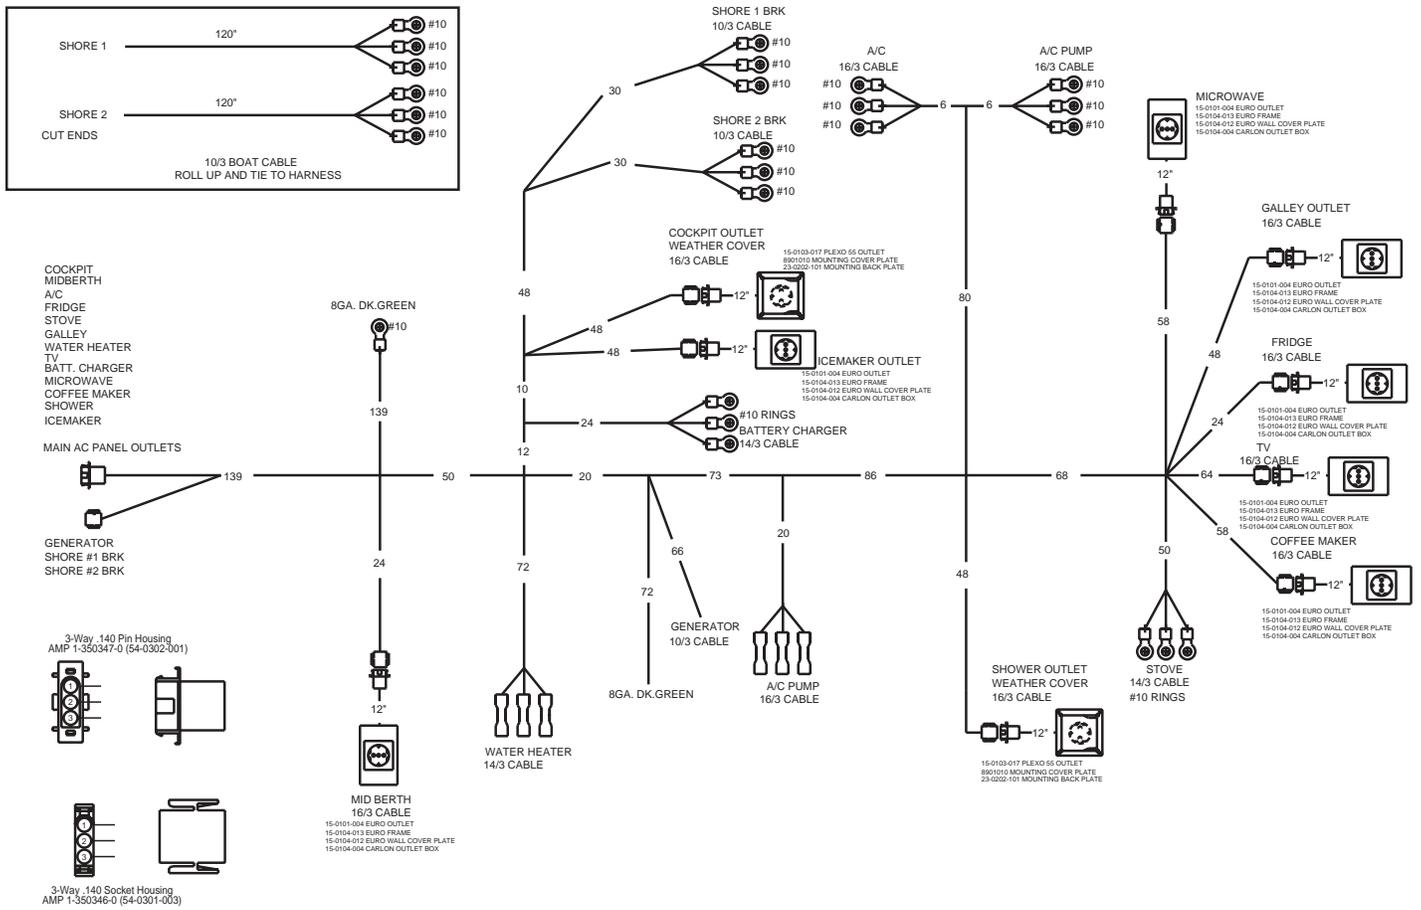

302 WIRING DIAGRAM

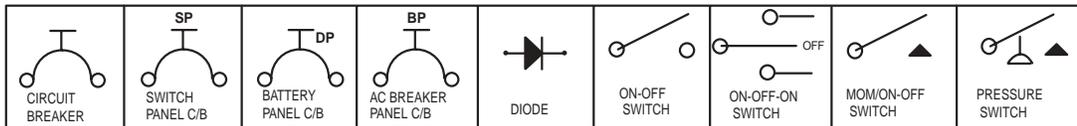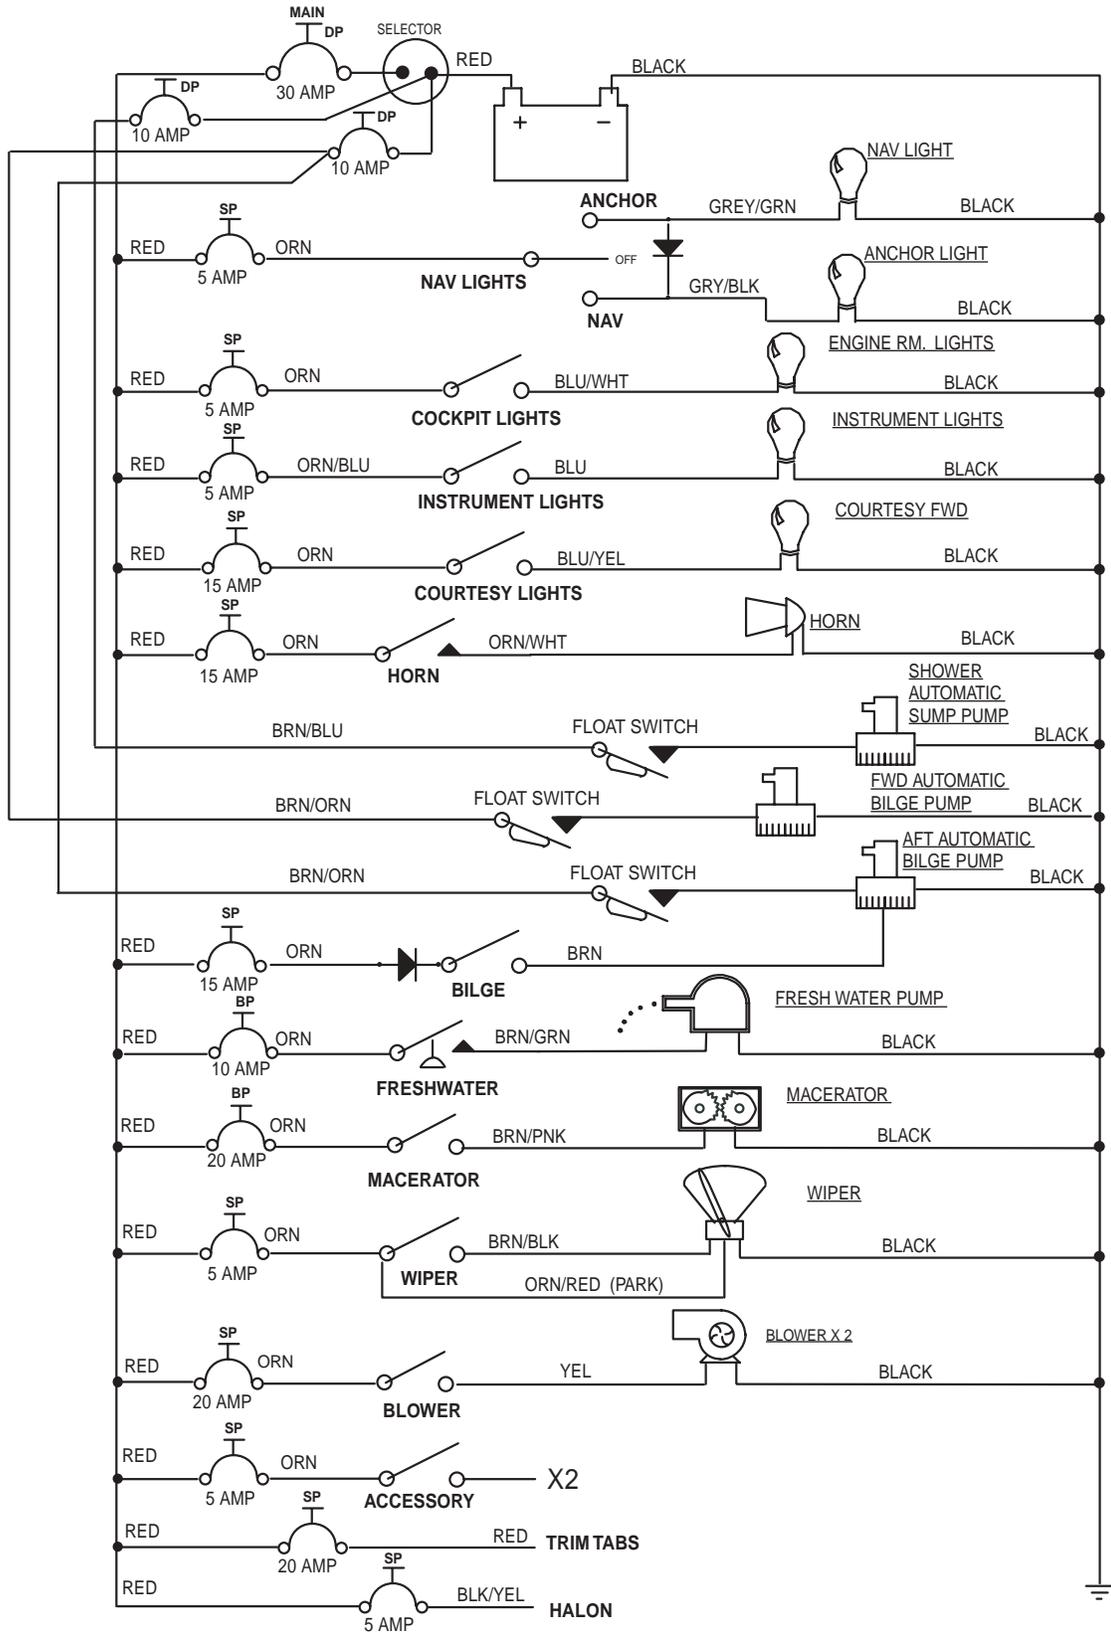

322 DC ELECTRICAL SCHEMATIC

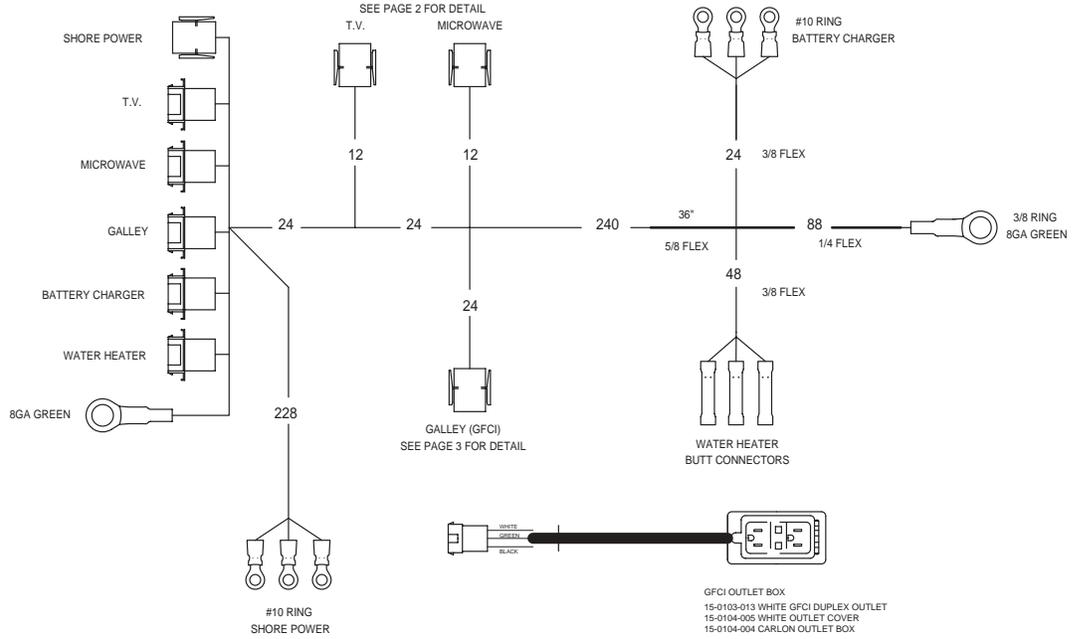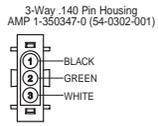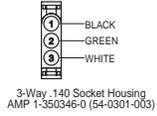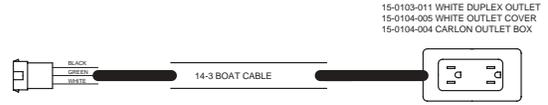

298 BOWRIDER AC WIRING DIAGRAM MAIN (1 OF 3)



GALLEY ONLY

GFCI OUTLET WIRING


3-Way, .140 Pin Housing
AMP 1-350347-0 (54-0302-001)

BLACK
GREEN
WHITE

LINE SIDE

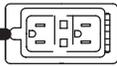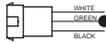

GFCI OUTLET BOX
15-0103-013 WHITE GFCI DUPLEX OUTLET
15-0104-005 WHITE OUTLET COVER
15-0104-004 CARLON OUTLET BOX

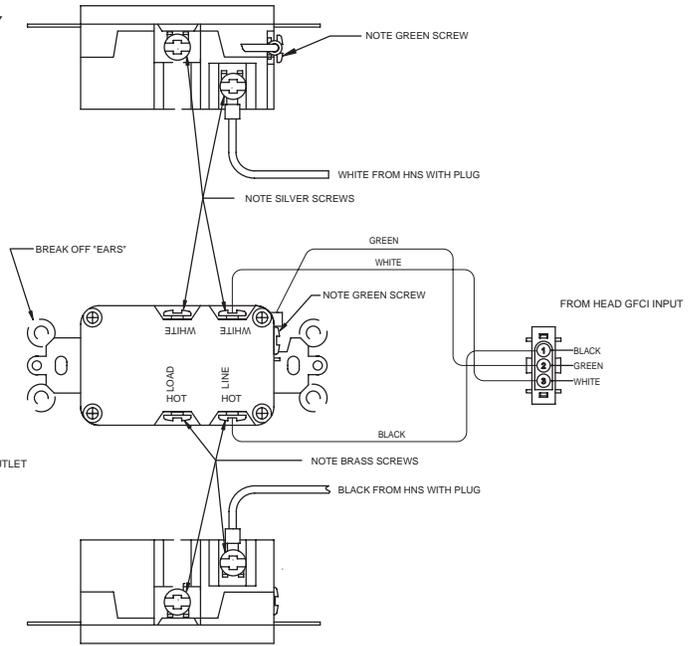


**298 BOWRIDER AC WIRING DIAGRAM
GALLEY (2 OF 3)**


DUPLEX WIRING

3-Way, .140 Pin Housing
AMP 1-350347-0 (54-0302-001)


BLACK
GREEN
WHITE

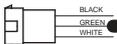

14-3 BOAT CABLE

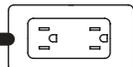


DUPLEX WIRING
15-0103-011 WHITE DUPLEX OUTLET
15-0104-005 WHITE OUTLET COVER
15-0104-004 CARLON OUTLET BOX

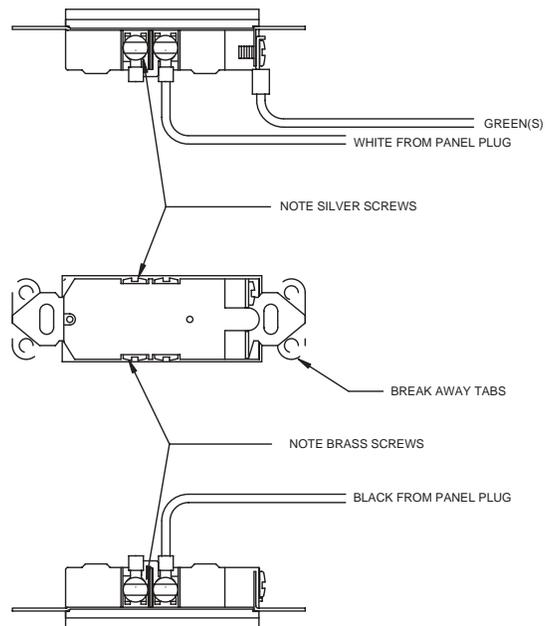


**298 BOWRIDER AC WIRING DIAGRAM
DUPLEX (3 OF 3)**


<u>ITEM</u>	<u>PART #</u>	<u>DESCRIPTION</u>
1	1119-0815	MALE ELBOW 1/2 NPT X 15MM
2	3079-0808	FEMALE CPLG 1/2 X 1/2 NPT
3	1110-0815	1/2 FEMALE SWIVEL
4	1133-1515	STACKABLE TEE 15MM
5	1120-0815	FEMALE ELBOW 1/2 X 15MM
6	2122-1515	U-BEND 15MM
7	1235-0815	STEM CHECK VALVE
8	1117-1515	UNION ELBOW 15MM
9	1123-1515	UNION TEE 15MM
10	50241	BLUE SEAPEX 15MM
11	50237	RED SEAPEX 15MM


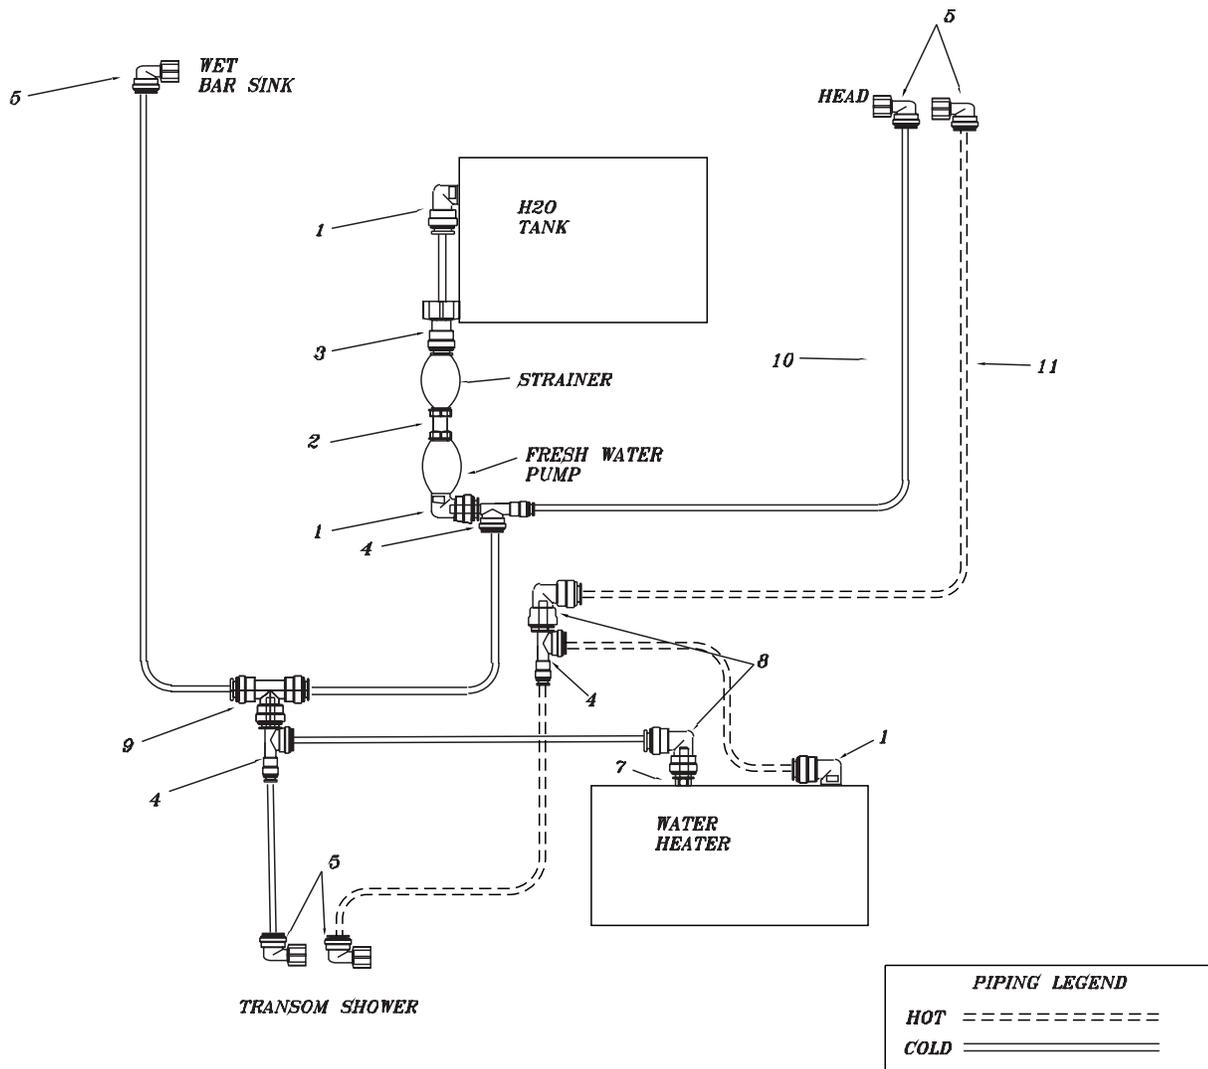


298 BOWRIDER WATER SYSTEM


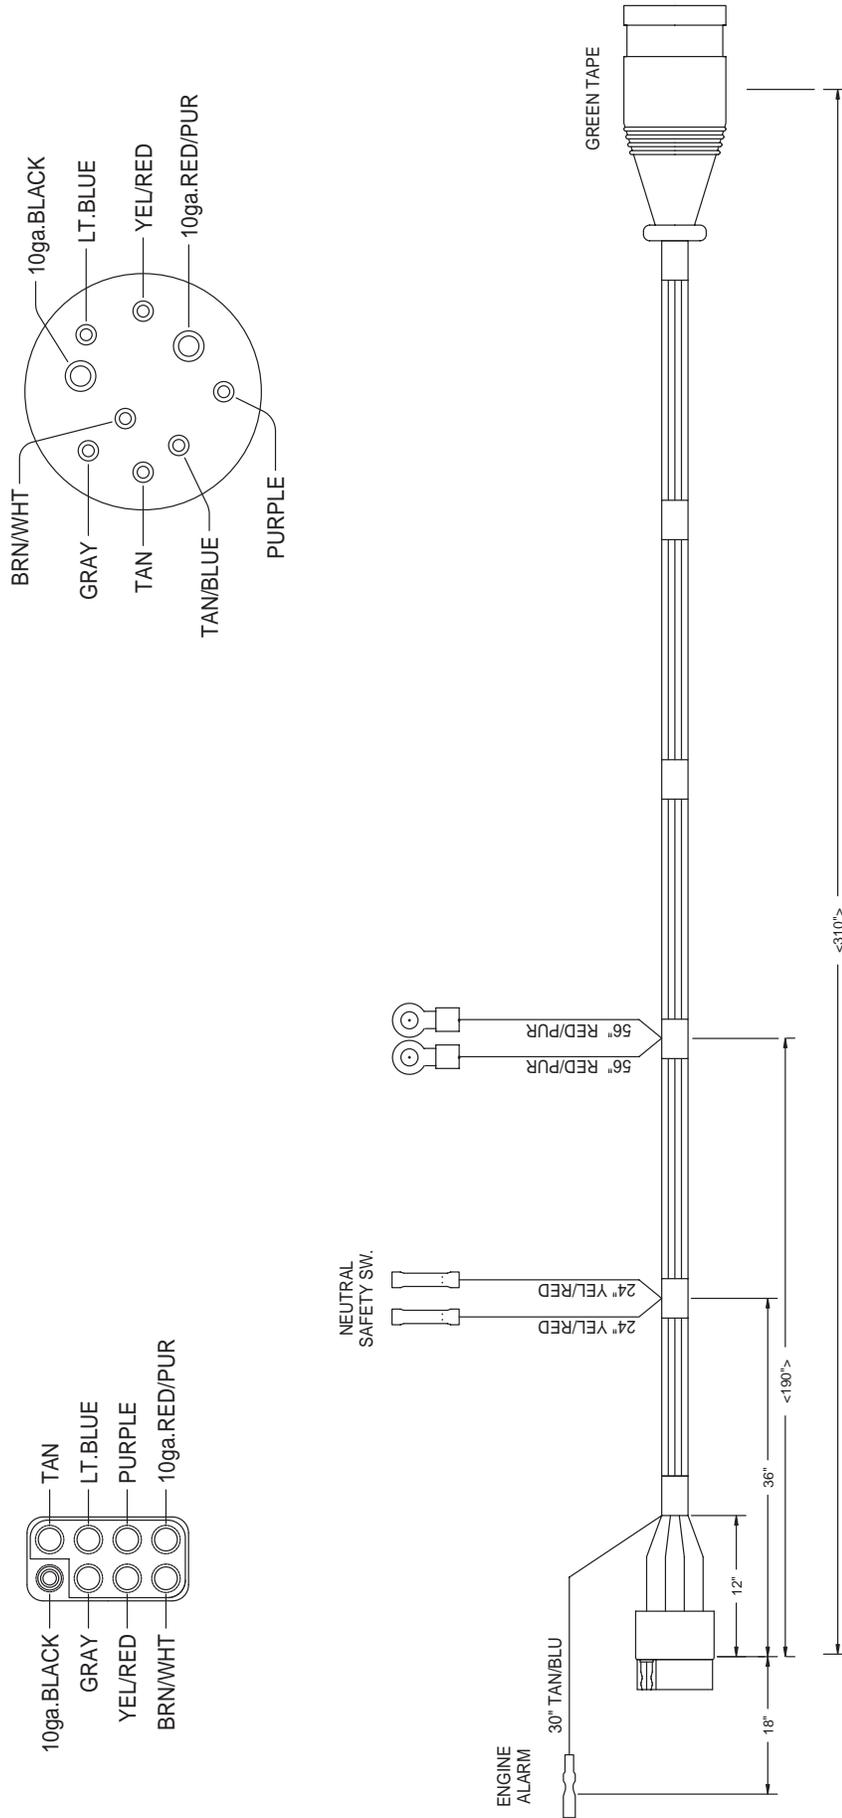


**298 BOWRIDER DC WIRING DIAGRAM
STBD EXTENSION HARNESS (2 OF 4)**

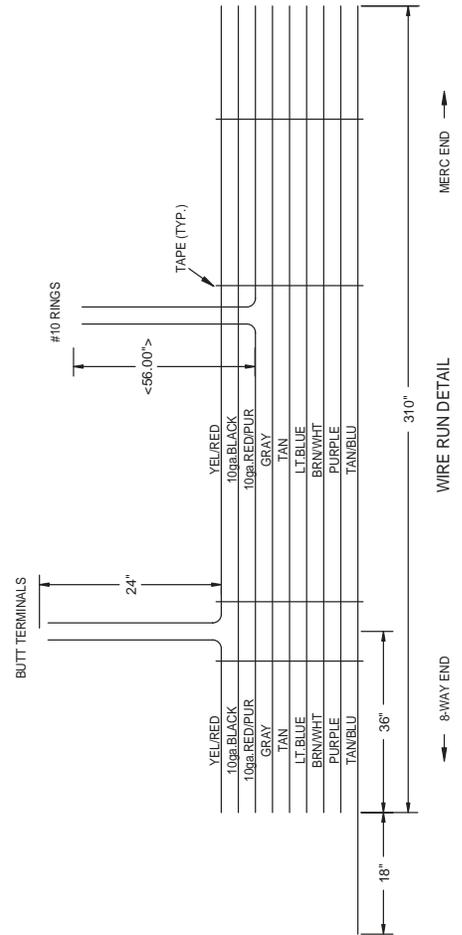

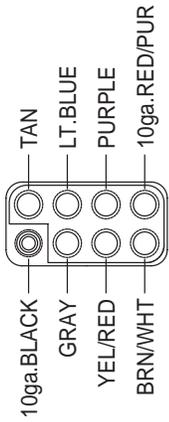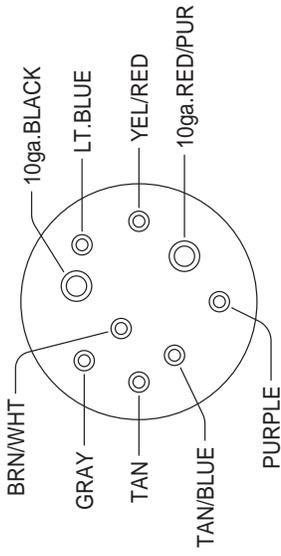


NEUTRAL SAFETY SW.

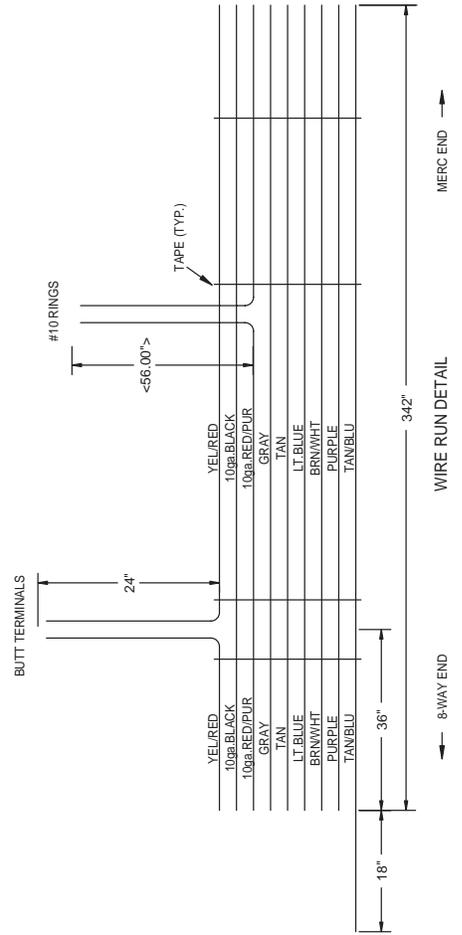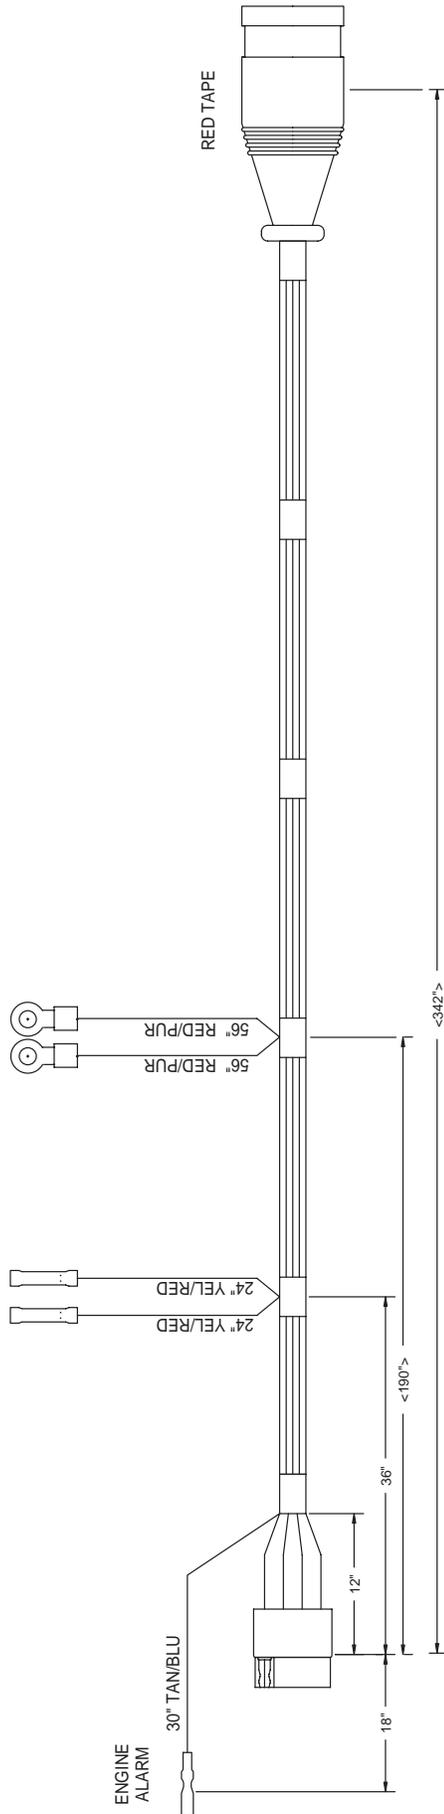


**298 BOWRIDER DC WIRING DIAGRAM
PORT EXTENSION HARNESS (3 OF 4)**


BLOCK "C"

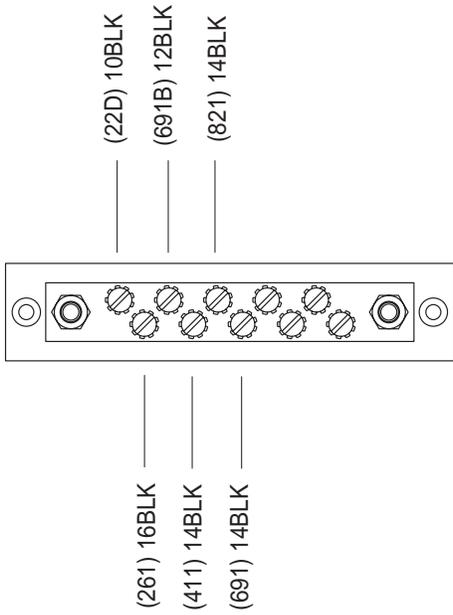

BLOCK "B"

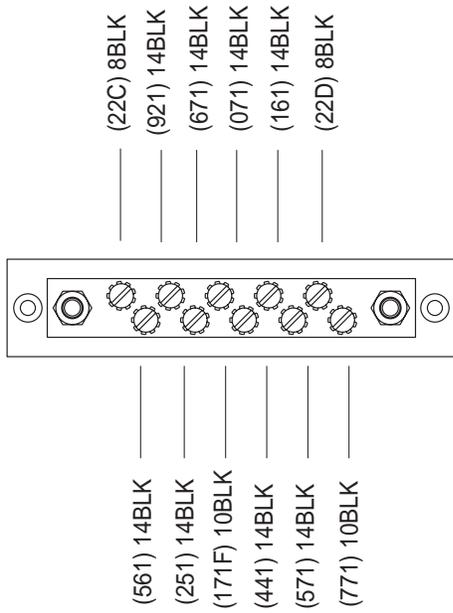


BLOCK "A"

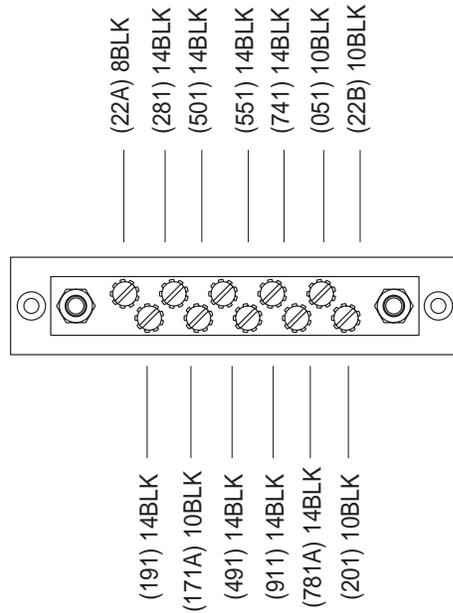


GROUND BLOCK #070105010


**298 BOWRIDER DC WIRING DIAGRAM
GROUND BLOCK DETAIL (4 OF 4)**

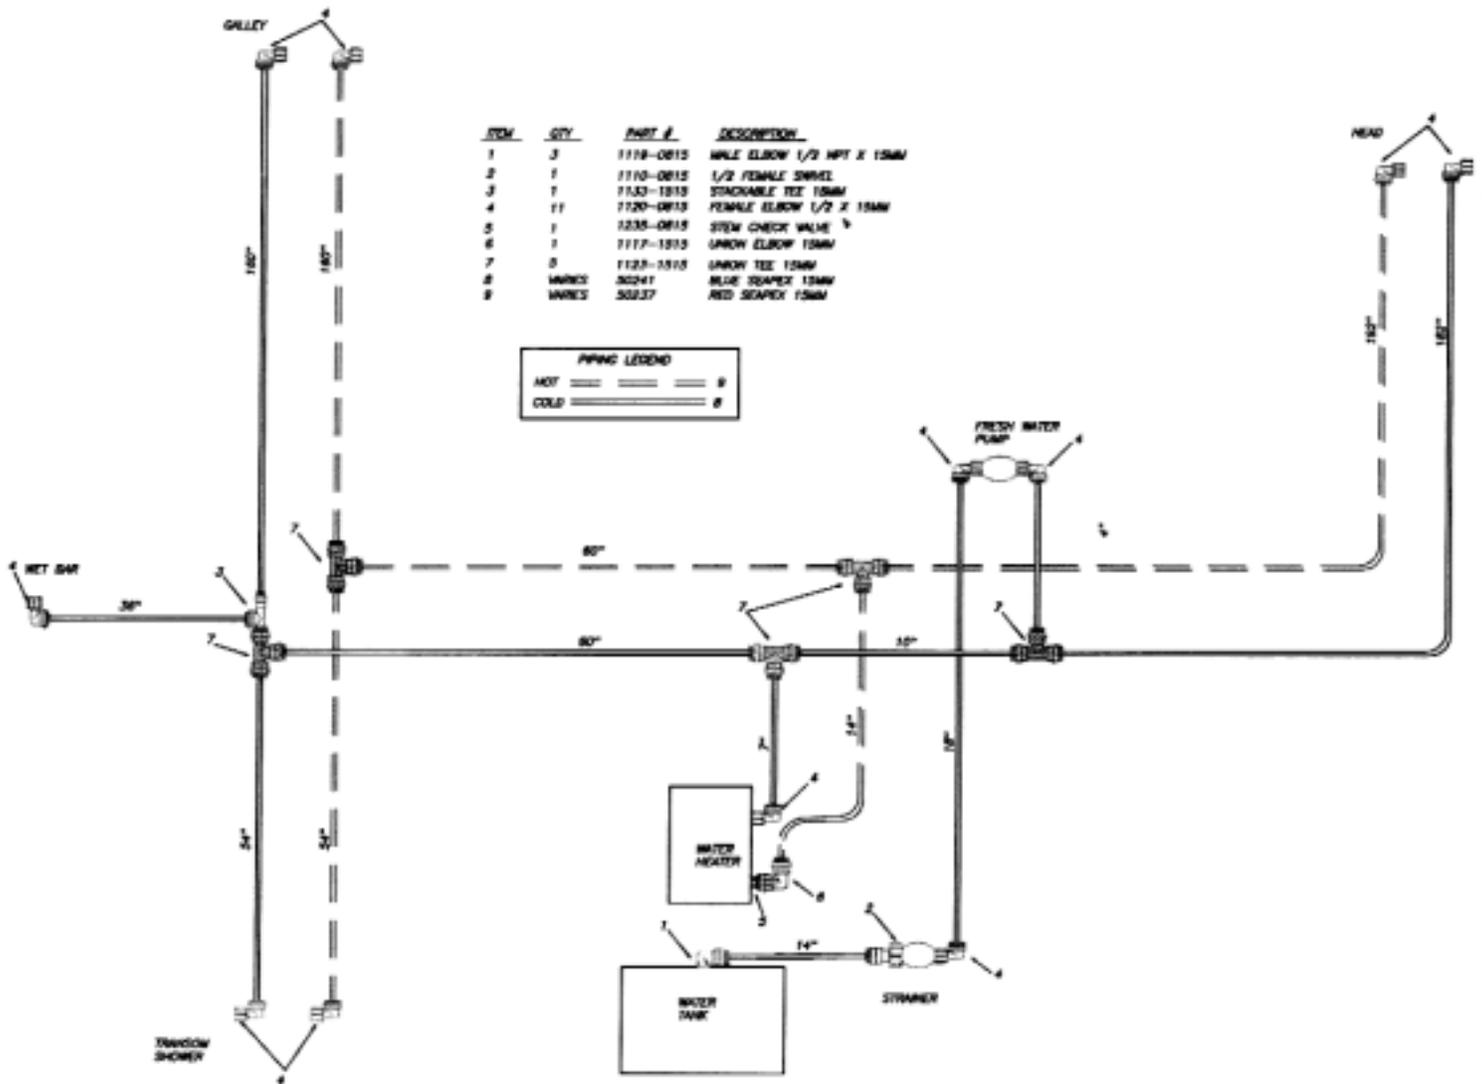


MONTEREY 265 WATER SYSTEM CONNECTION DIAGRAM
(Similar for the 245)

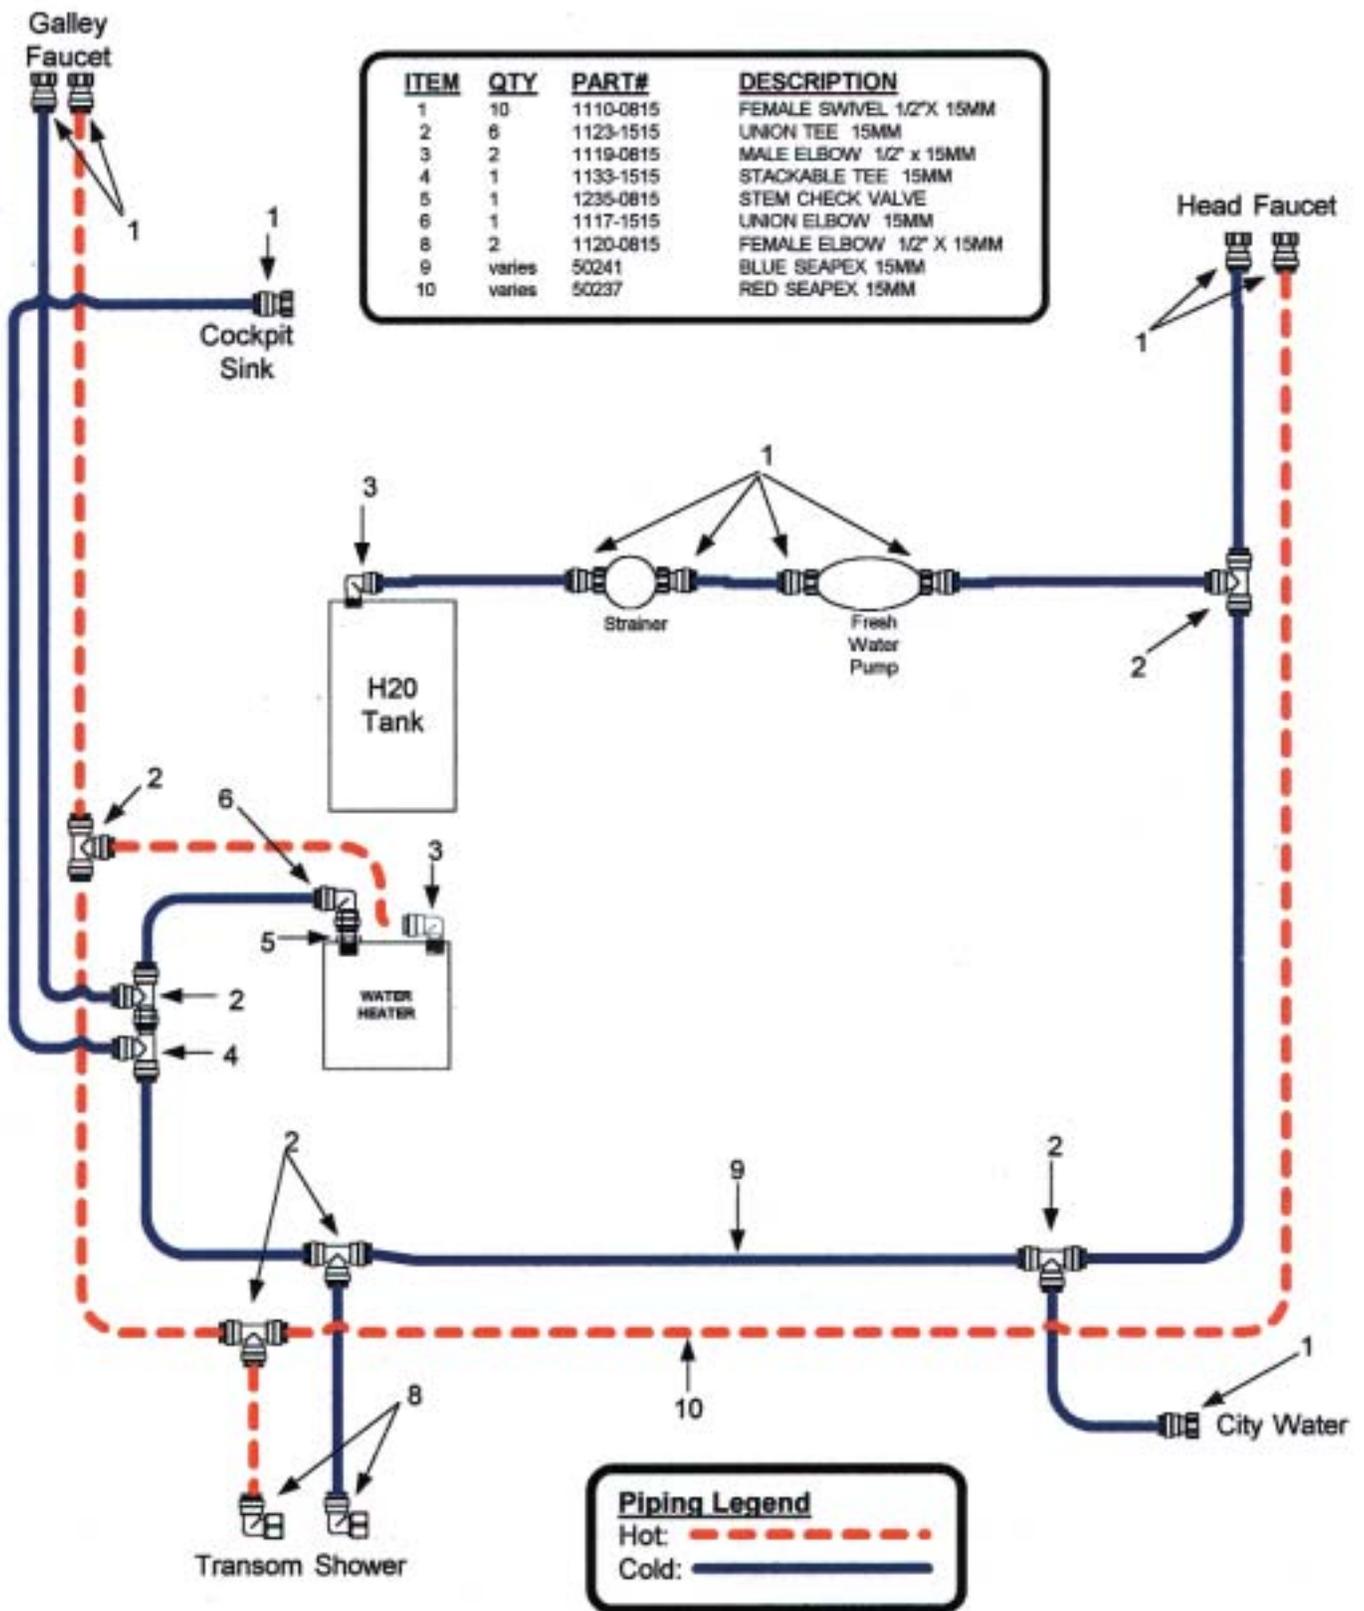

MONTEREY 282 WATER SYSTEM (CONNECTION DIAGRAM)

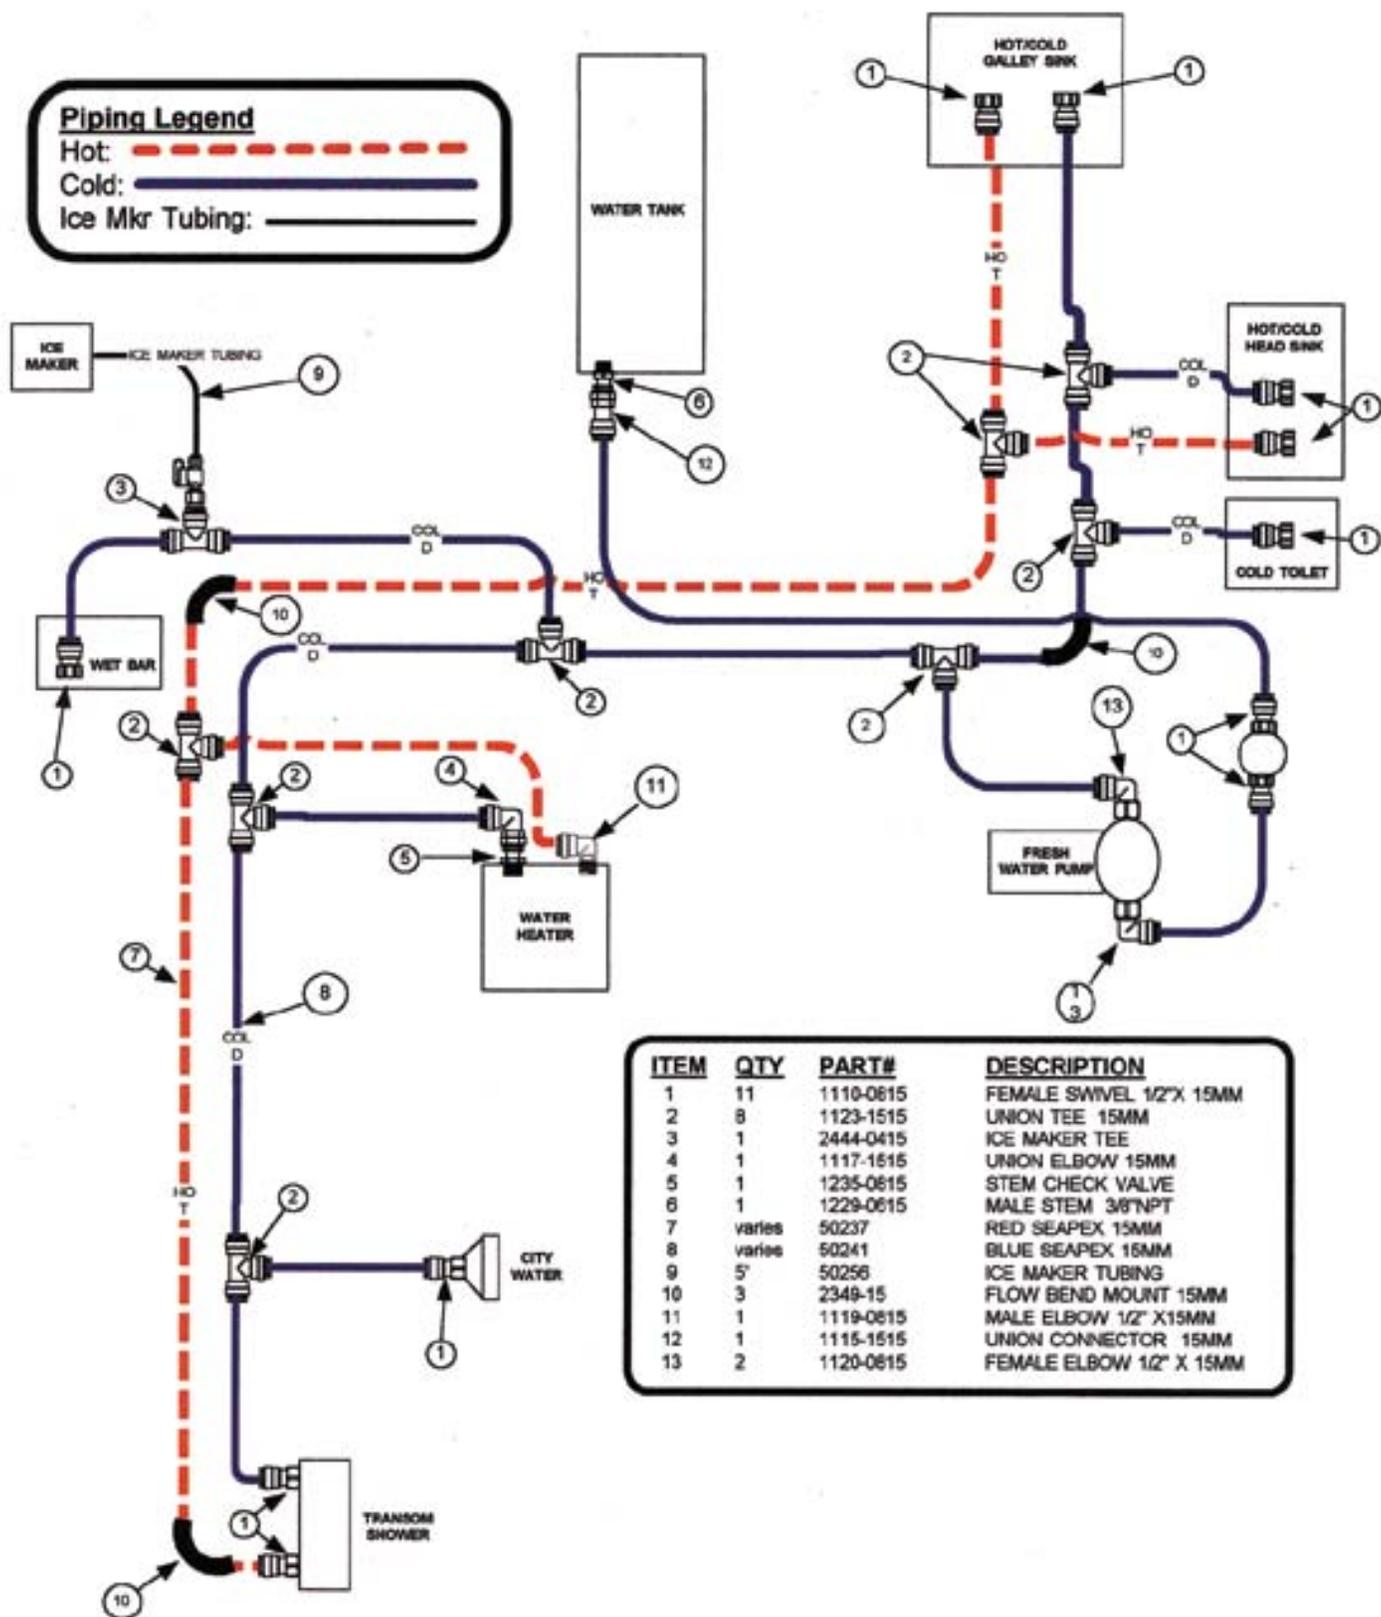


MONTEREY 302 WATER SYSTEM (CONNECTION DIAGRAM)

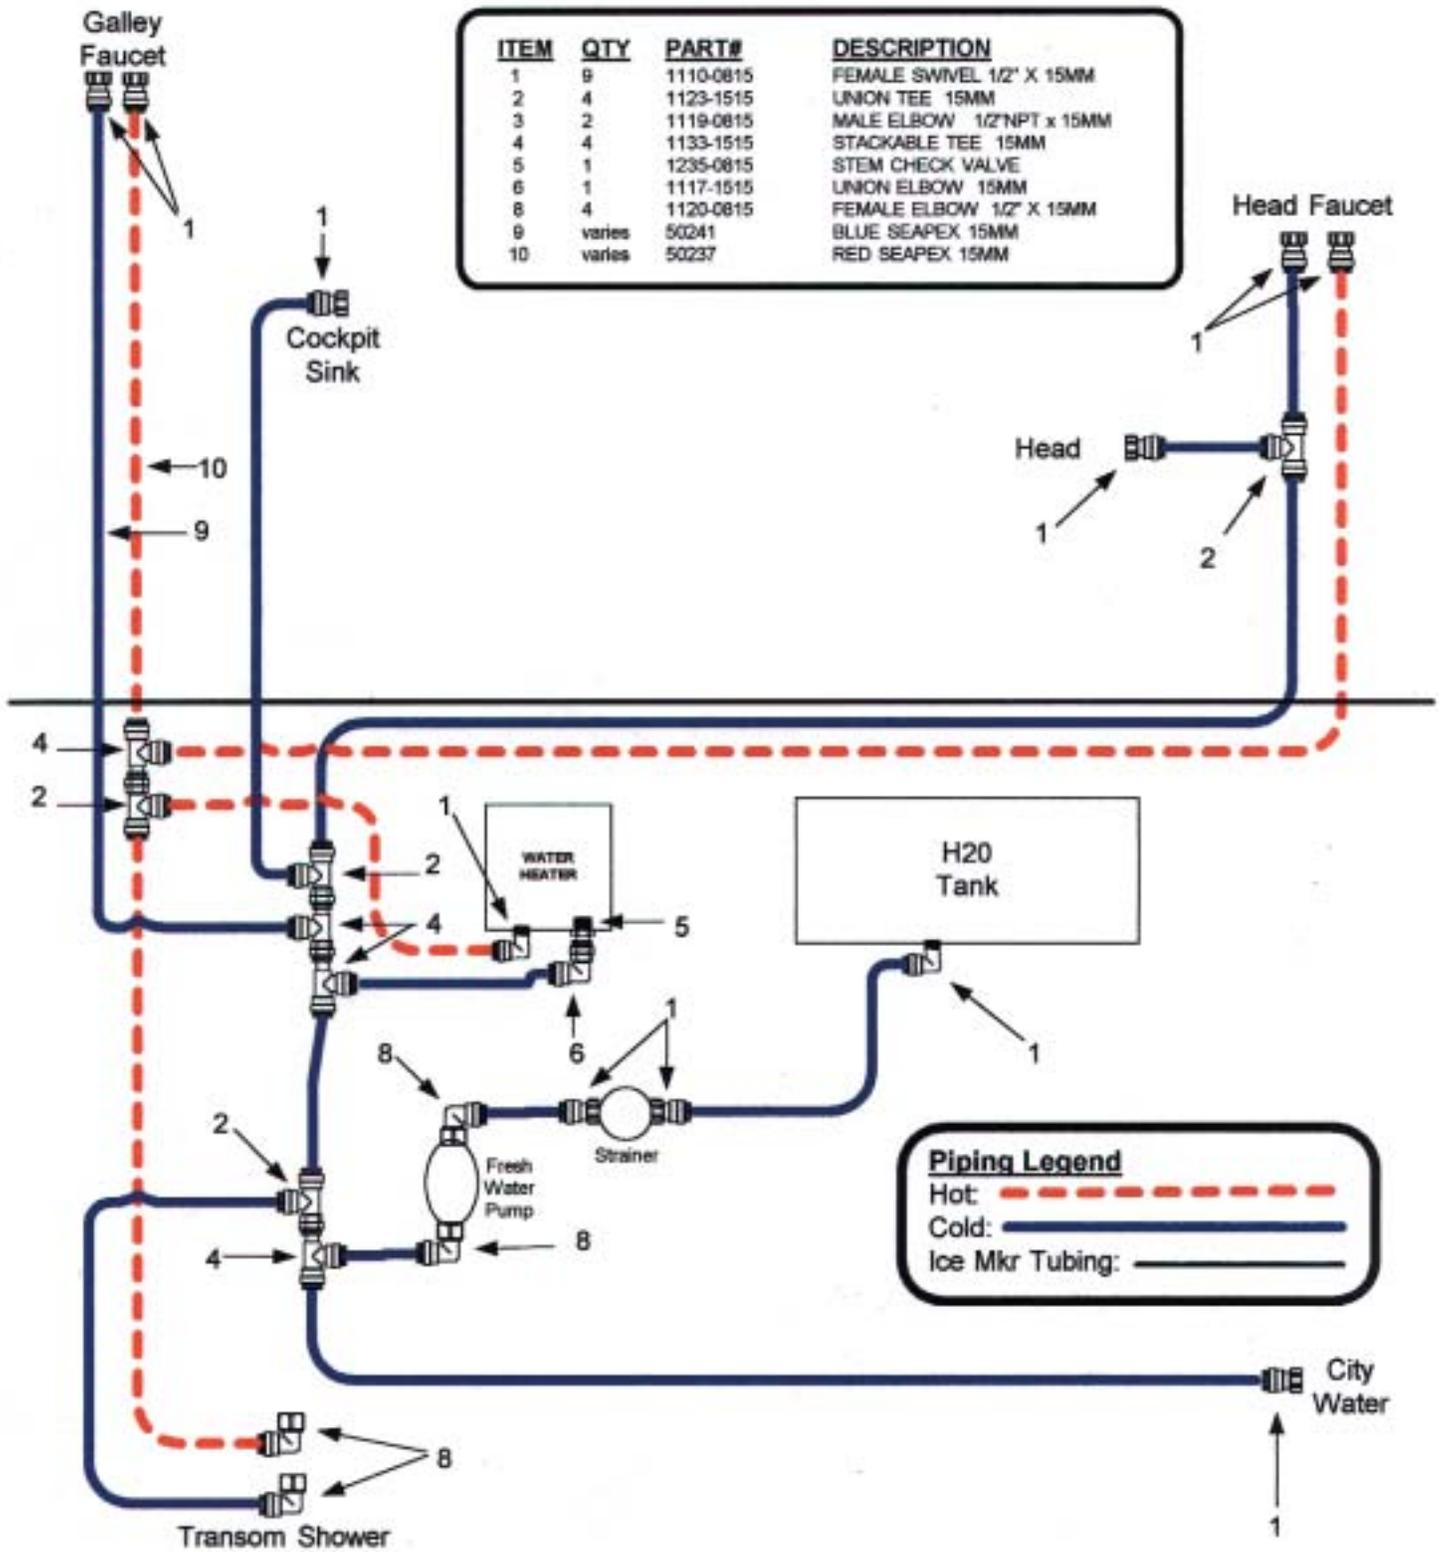

MONTEREY 322 WATER SYSTEM (CONNECTION DIAGRAM)



BOATING SAFETY

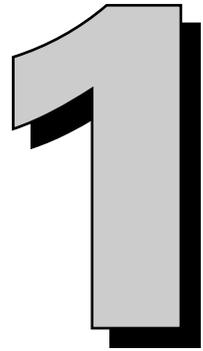

The popularity of boating and other water sports has undergone an explosion of growth in the past few years. Because of this, safety is an important issue for everyone who shares in the use of our waterways.

This section covers general boating safety information. Throughout this manual specific precautions and symbols identify safety related information.



The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!



DANGER



Indicates the presence of a hazard which **WILL** cause **SEVERE** injury, death or substantial property damage.



WARNING



Indicates the presence of a hazard which **CAN** cause **SEVERE** injury, death or substantial property damage.



CAUTION

Indicates the presence of a hazard which **WILL** or **CAN** cause **MINOR** or **MODERATE** personal injury or property damage.

The precautions listed in this manual and on the boat are not all-inclusive. If a procedure, method, tool or part is not specifically recommended, you must satisfy yourself that it is safe for you and others, and that the boat will not be damaged or made unsafe as a result of your decision. **REMEMBER – ALWAYS USE COMMON SENSE WHEN OPERATING!**



BOATING SAFETY

BOATING REGULATIONS

The U.S. Coast Guard is the authority of the waterways; they are there to help the boating public. State boating regulations are enforced by local authorities. You are subject to marine traffic laws and “Rules of the Road” for both federal and state waterways; you must stop if signaled to do so by enforcement officers, and permit to be boarded if asked.

There are many pamphlets, prepared by the Coast Guard, available to you. These pamphlets explain “Rules of the Road”, signal lights, buoys, safety, international and inland regulations and much more than is presented in this manual. For more information contact your local U.S. Coast Guard Unit or call the Coast Guard Boating Safety Hotline at 1-800-368-5647.

BOAT SAFETY LABELS

Your boat is affixed with various safety labels at the time of manufacture. These labels appear at specific locations on the craft where safety is of particular concern. Safety labels must remain legible. If you suspect a label is missing or one becomes damaged, contact your dealer for immediate replacement.

BOATER RESPONSIBILITIES

Registration

The U.S. Coast Guard requires that all power boats operated on the navigable waters of the United States must be registered in the state of main use; also, many States require registration in that state whenever boating on waters within their state boundary. Always contact your state boating authorities (and neighboring states) for registration information on boats and trailers. Your dealer can supply you with the appropriate forms.

Education

This manual is not intended to provide complete training on all aspects of boat operation. We strongly recommend that all operators of this boat seek additional training on boat handling and safety. Some states require youths 16 years of age and younger to complete a boating safety course before operating any watercraft. Many others require operators under the age of 18 to be licensed in small boat operation.

The following is a listing of some of the agencies and organizations that offer safety training or information. To find boating safety courses in your area, call your state’s local boating agency or the Coast Guard boating safety CourseLine at 1-800-336-2628 (1-800-245-2628 in Virginia).

- American Red Cross
- U.S. Power Squadrons
- U.S. Coast Guard Auxiliary
- State Boating Offices

Insurance

You must get insurance before operating your new boat. Loss by fire, theft or other causes, and liability protection against accidents is a must for responsible boaters. The boat owner is legally responsible for any damage or injury caused when he, or someone else operating the boat, is involved in an accident. Many states have laws detailing minimum insurance needs. Your insurance agent and your dealer can supply you with more information.



REQUIRED SAFETY EQUIPMENT

Your boat has been equipped at the factory with most federally required Class 1 [4.8 m (16 ft.) to less than 7.9 m (26 ft.)] safety equipment. **As the owner, it is your responsibility to obtain other mandatory safety equipment not provided by the boat manufacturer, and to ensure all equipment is kept in good, serviceable condition.**

MINIMUM REQUIRED SAFETY EQUIPMENT			
EQUIPMENT	CLASS 1 4.8 to less than 7.9 m (16 to less than 26 ft.)	CLASS 2 7.9 to less than 12.2 m (26 to less than 40 ft.)	CLASS 3 12.2 to not more than 19.8 m (40 to not more than 65 ft.)
PERSONAL FLOTATION DEVICES (PFDs)	One approved Type I, II, III or V (if used according to Coast Guard requirements) device aboard for each person on board or being towed on water skis, etc.; and, in addition, one throwable Type IV device.		
FIRE EXTINGUISHER (Must say Coast Guard Approved.)	At least one B-I type approved hand portable fire extinguisher (Not required on outboard motorboats less than 26 feet in length and not carrying passengers for hire if the construction of such motorboats will not permit entrapment of explosive or flammable gasses or vapors and if fuel tanks are not permanently installed.)	At least two B-I type approved portable fire extinguishers; OR at least one B-II type approved portable fire extinguisher.	At least three B-I type approved portable fire extinguishers; OR at least one B-I type plus one B-II type approved portable fire extinguisher.
DAY AND NIGHT VISUAL DISTRESS SIGNALS	Orange flag with black square-and-disk (day); and an S-O-S electric light (night); or three orange smoke signals, hand held or floating (day); or three red flares of hand held, meteor, or parachute type (day/night). Required only on coastal waters, the Great Lakes, territorial seas, and those waters connected directly to them, up to a point where a body of water is less than two miles wide.		
WHISTLE/HORN, BELL	Every vessel less than 12 meters (39.4 ft.) in length must carry an efficient sound producing device.	Every vessel 12 meters (39.4 ft.) but less than 20 meters (65.6 ft.) in length must carry a whistle or horn and a bell. The whistle or horn must be audible for 1/2 nautical mile. The mouth of the bell must be at least 200 mm (7.87 inches) in diameter.	

KC-0081.2

NOTICE

Many state equipment requirements go beyond Coast Guard requirements. Contact your state boating office for further information.

Equipment requirements for coastal and inland waters differ. Check with local authorities or the Coast Guard for further information about coastal water requirements.

Personal Floatation Devices

Federal law also requires at least one Type I, II, III or V Personal Floatation Device (PFD) for each person on board or being towed, and at least one Type IV throwable PFD in the boat.

PFDs are intended to help save lives. Therefore, you and your passengers should wear a PFD whenever boating. It is especially important that children and non-swimmers wear a PFD at all times. Make certain all passengers know how to put on and properly adjust their PFDs. Also, selecting the proper type PFD for your kind of outing helps ensure your time on the water can be the safest possible. There are four types of PFDs to wear and one type used for throwing in emergency situations.



BOATING SAFETY



TYPE I
LIFE PRESERVERS
KC-0041



TYPE II
BUOYANT VESTS
KC-0051



TYPE III
FLOTATION AIDS
KC-0042



TYPE IV
THROWABLE DEVICES
KC-0071



TYPE V HYBRID PFD
MUST BE WORN
WHEN UNDERWAY
KC-0043

- Type I: Most buoyant PFD and effective on all waters, especially open, rough water.
- Type II: Good for calm water near shore on most inland waters where quick rescue is likely.
- Type III: Good for most inland water applications where quick rescue is likely. Come in various styles and some are designed for watersport activities.
- Type IV: Intended for heavy traffic inland waters where help is always available. Designed to be thrown to a person in the water and should never be worn.
- Type V: Inflatable design for special use activities and may be used instead of a Type I, II, or III PFD if used in accordance with the approval conditions on the label *and if worn when the boat is underway*. Some Type V PFDs provide increased protection against hypothermia.

NOTICE

- If a Type V PFD is to be counted toward the minimum carriage requirements, it must be worn.
- Special PFDs are available for skiing and other watersports. These PFDs are constructed with materials suitable for high impact falls.

Keep the following PFD points in mind:

- Set an example and wear your PFD. Require your passengers to wear them also.
- Make sure the PFD fits properly; this is especially important for children and non-swimmers.
- At the beginning of each season, check PFDs for damage and test for proper flotation.



Fire Extinguisher




U.S. Coast Guard approved fire extinguishers are generally required on all Class I-III boats. Extinguishers should be mounted in readily accessible areas away from the engine compartment and alcohol stove (if equipped). All passengers should know the location and operating procedure of each extinguisher.

Any marine fire extinguisher must be classified to extinguish type B fires (gasoline, oil, or grease).

The size and number of required fire extinguishers depend on the size of your boat. Check pressure gauge regularly for proper pressure; have extinguisher filled if necessary.

Visual Distress Signals

Federal law also requires boats 4.8 m (16 ft.) and longer to carry day and night visual distress signals when operating on coastal waters, the Great Lakes, territorial seas or those waters directly connected to them, up to a point where the body of water is less than two miles wide. Carry several types of signaling devices to handle a variety of conditions.

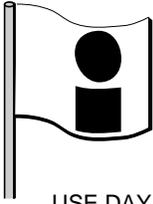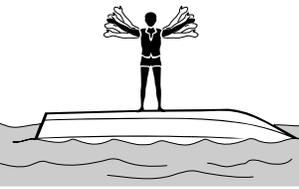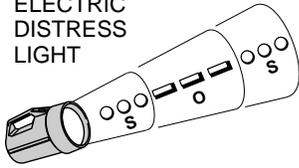 <p>ORANGE FLAG</p> <p>USE DAY ONLY</p>	<p>RED DISTRESS FLARE (HAND)</p>  <p>USE DAY AND NIGHT</p>
 <p>ARMS SIGNALS (USE BRIGHT CLOTH)</p> <p>USE DAY ONLY</p>	<p>USE DAY ONLY</p>  <p>ORANGE SMOKE SIGNAL (HAND)</p>
<p>ELECTRIC DISTRESS LIGHT</p>  <p>USE NIGHT ONLY</p>	<p>RED METEOR FLARE</p> <p>USE DAY AND NIGHT</p> 
<p>DYE MARKER</p> <p>USE DAY ONLY</p> 	

KC-0082




WARNING



Pyrotechnic signaling devices can cause injury and property damage if not handled properly. Follow manufacturer's directions. Stow devices so they are inaccessible to children.

NOTICE

- Some pyrotechnics are restricted from use on certain bodies of water, so always check with local authorities.
- All signaling devices must be in serviceable condition, readily accessible, and in compliance with Coast Guard requirements.

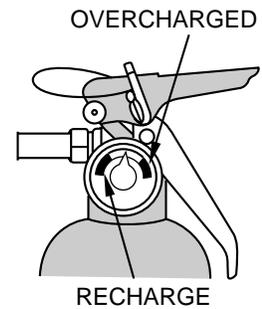


KC-0083



BOATING SAFETY

Recommended Equipment

As a precaution, a good boater will avoid potential problems on an outing by having additional equipment on board. Normally, this equipment is dependent on the body of water and the length of the trip; your dealer can assist you:

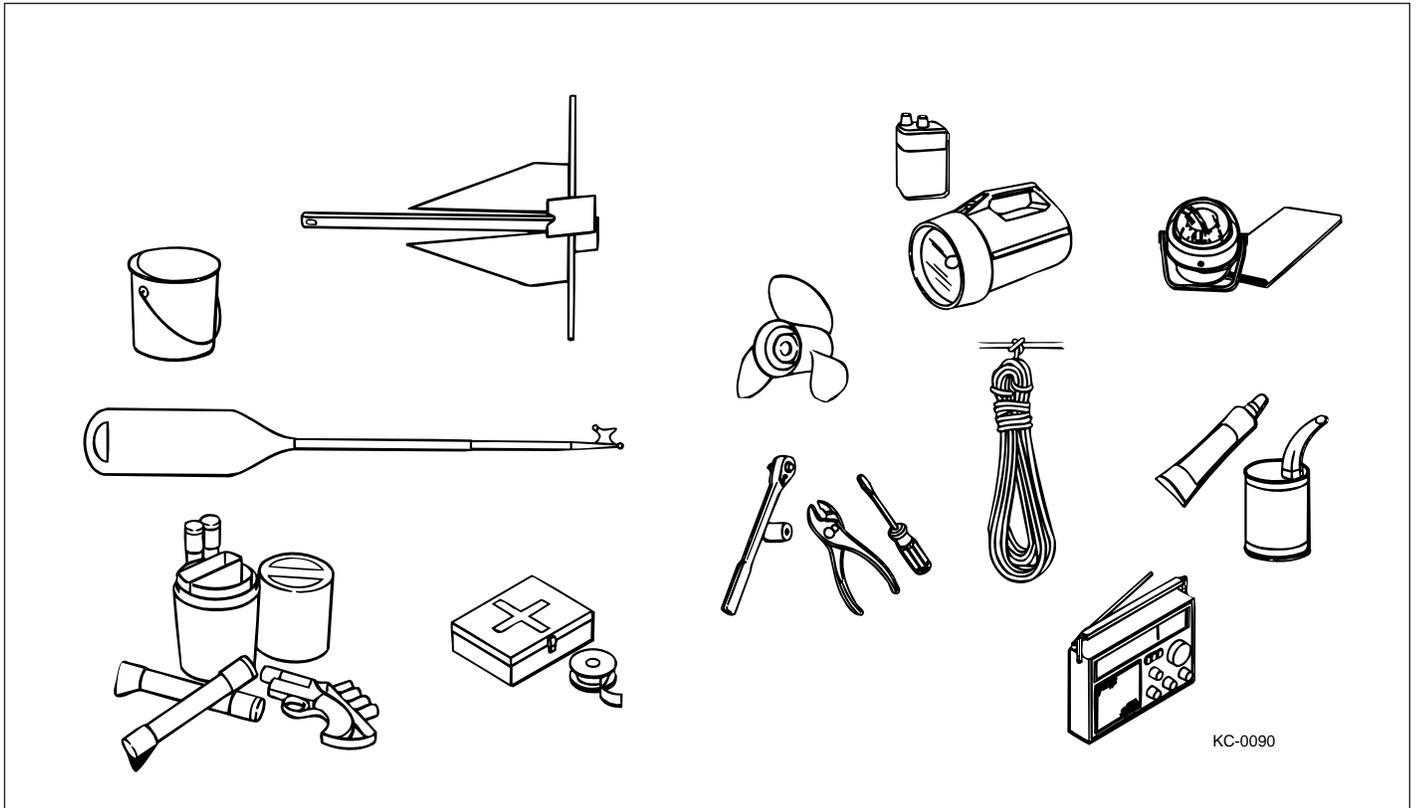

KC-0090

- First aid kit and manual
- Anchor with sufficient line
- Mooring lines and fenders
- Bailing device (bucket, hand pump, etc.)
- Combination oar/boat hook
- Day/night visual distress signal
- Lubricant
- Tool kit
- Spare propeller, nut and washer
- Spare fuses and bulbs
- Local charts, compass and GPS
- Waterproof flashlight
- Portable AM/FM radio with weather alert
- Spare flashlight and radio batteries
- Sunglasses and sun block
- Tow line
- Cellular Phone
- Emergency Position Indicating Radio Beacon (EPIRB)
- Spare keys
- Binoculars
- Spare Fuel
- Food and water provisions (extended cruise)
- Auxiliary starting battery



EMERGENCIES

Be prepared to deal with emergencies before they happen. Try to formulate a plan for each type in advance so that decisions can be made quickly and without hesitation. Precious moments lost can mean the difference between losing and saving a life.

Reporting Accidents

The U.S. Coast Guard requires the owner or operator of a boat involved in an accident to report the incident to the proper marine law enforcement agency for the State in which the accident occurred. Immediate notification to the nearest State boating authority is required if a person dies or disappears as a result of a recreational boating accident. If a person dies or injuries requiring more than first aid are involved, a formal report must be filed within 48 hours of the accident. A formal report must be filed within 10 days for accidents exceeding \$500 in property damage or complete loss of boat.

Giving Assistance

If you see a distress signal or suspect a boat is in trouble, you must assume it is a real emergency and render assistance immediately. By law, the operator in charge of the craft is obligated to provide assistance to any individual in danger if such assistance can be provided safely. Failure to render assistance can result in a fine and/or imprisonment.

The 1971 Boating Safety Act grants protection to a “Good Samaritan” boater providing good faith assistance, and absolves a boater from any civil liability arising from such assistance.

Fires


Most fires are the result of gasoline and oil accumulating in the bilge from careless fueling practices. Use the fire extinguisher at the base of the flames using a sweeping motion. Prudent and accurate use of the available chemicals should contain all but the worst fires. Verify that the fire has been extinguished. If so, check damage and get assistance immediately. If not, get out and swim at least 23 meters (25 yards) upwind from the boat and use the visual distress signals to get assistance.

On board fires involving the fuel system usually result in either an explosion that completely destroys the boat, or the boat burning to the waterline and self extinguishing. Deciding on abandoning the boat or staying to fight the fire is difficult and depends on many factors. Try to formulate a fire plan in advance to make that decision quickly and without hesitation.

Capsizing/Swamping

A boat may capsize or swamp when least expected. Like fires, try to formulate a plan in advance on what to do if it should happen. Keep in mind the following guidelines:

- Try to turn the engine OFF to prevent damage.
- If others were on board, try to locate them, make sure they're conscious and that they can swim.
- **Stay with the boat, it will float!** Climb up on the hull and try to get assistance.
- Don't try to swim to shore. It's usually further than it looks.

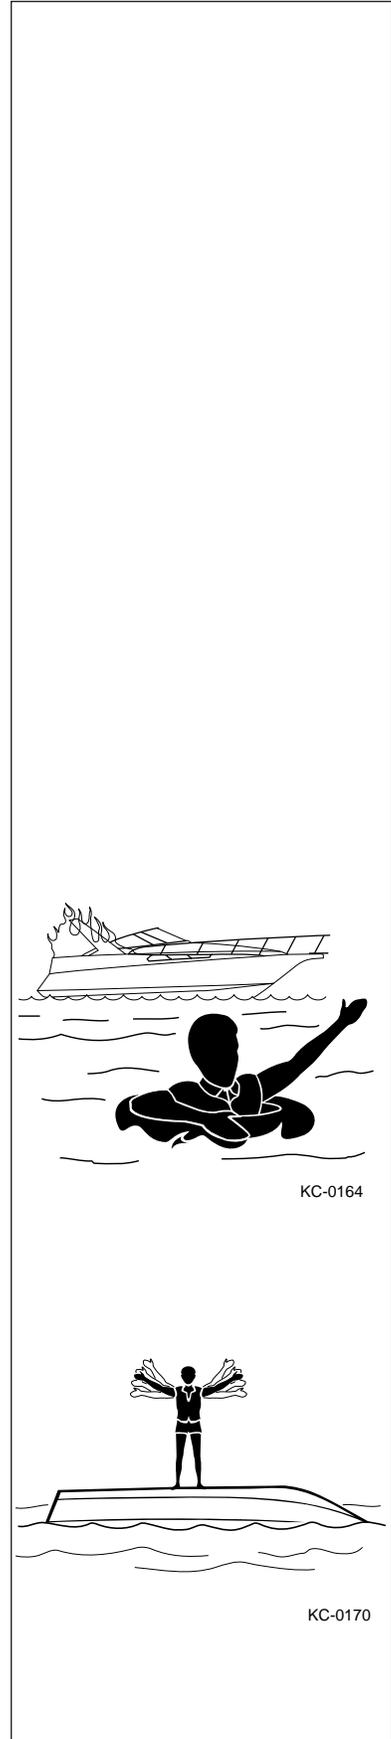



BOATING SAFETY

DAYTIME WARNING	NIGHTTIME WARNING
Small Craft Advisory - Winds greater than 18 knots, sustained for two hours or more or hazardous wave conditions. Following a storm, hazardous wave conditions can persist long after the high winds have subsided.	
Gale Warning - Sustained winds (2 or more hours), of 34-47 knots.	
Storm Warning - Sustained winds of 48 knots or greater.	
Hurricane Warning - Forecast winds of 64 knots and above. Displayed only in connection with a hurricane.	

KC-0371

■ Actual Signal in red

HAZARDOUS CONDITIONS

Every waterway poses hazards that you should avoid; shallow water, tree stumps, sand bars, etc. Ask local boaters for information and consult a marine chart when boating on unfamiliar waters. As the operator of the boat, you should try to avoid all hazards, known and unknown. The following information does not contain all possible water hazards.

Weather

Getting caught in severe weather is hazardous. Check with local weather stations, the U.S. Coast Guard, or Weather service broadcasts (162.55 or 162.40 Megahertz) for the latest conditions. It is recommended to check the weather not only before but periodically while you are boating.

Storms – Take common sense precautions if you are forced to operate your boat in stormy conditions:

- Wear PFDs
- Stow gear below and lash equipment on deck.
- Reduce speed and head for place of refuge you can reach most easily.
- If you lose power, keep boat headed into the waves by rigging a sea anchor off the bow.

Fog – It is best to avoid operating your boat in foggy weather. When fog sets in take bearings and log courses and speeds. You are required to emit a five second blast from your horn or whistle once every minute. Additionally, have passengers wear PFDs and observe for oncoming vessels.

Dam Spillways

The water around a dam spillway is a hazardous area. It is subject to rapid changes. Boaters must keep clear of the spillway areas below dams.

Shallow Water Operation

Operating in shallow water presents a number of hazards. If the engine strikes an underwater hazard, check for boat and engine damage. If the engine vibrates excessively after striking an underwater obstruction, it may indicate a damaged propeller.

Sand bars in narrow inlets are constantly shifting, making it difficult to mark them with buoys. Sometimes, sand bars are indicated by waves as they form into breakers when passing over the sand bar. If you ground the boat on a sand bar, seek help from another boater or radio for help.


In coastal areas, tides can affect water level as much as 9 m (30 ft.) Check with local marinas or Coast Guard stations for tide tables and current charts.



Warning Markers

It is a good idea to ask local authorities if there are hazardous areas and how they are marked. Boaters must also recognize the flag designs which indicate that skin divers are present and keep well clear of the area.

Watch for swimmers. Swimming areas may not be marked. Steer clear from the area and always remain alert.

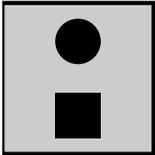

DISTRESS

KC-0942

Distress flags indicate a fellow boater is in need of assistance.

Navigation markers serve as a means of identifying navigable routes, and indicate water hazards. Boaters should become familiar with navigation markers and stay within marked boundaries and clear of hazards.

BOATING UNDER THE INFLUENCE



Federal and state laws prohibit operating a boat under the influence of alcohol and other drugs. These regulations are actively enforced. Impaired operation may result in severe personal injury or death.



KC-0153


Boating, alcohol and the use of other drugs just doesn't mix. These substances reduce your reaction time and affect your better judgment. Combined with the sun, wind, waves, and noise of other watercraft, the effects of drugs are increased and will significantly reduce your reaction time. As the owner/operator, you are responsible for the alcohol/drug use and on-board behavior of your passengers.

NOTICE


If the operator's blood alcohol content is 0.10% (0.08% in some states) or above, violators are subject to a civil penalty up to \$1,000 or criminal penalty up to \$5,000, one year imprisonment or both. Operating a boat under the influence can also result in a loss of motor vehicle driving privileges.

CARBON MONOXIDE

Carbon Monoxide (CO) is a colorless and odorless gas produced by all engines and fuel burning appliances. Even with the best boat design and construction, plus the utmost care in inspection, operation, and maintenance, hazardous levels of CO may still be present in accommodation spaces under certain conditions. To reduce CO accumulation, always ventilate the boat interior by opening the deck hatches, windows or canvas to provide adequate ventilation.

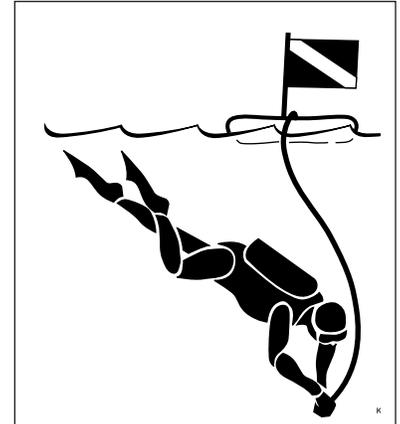


DIVERS FLAG

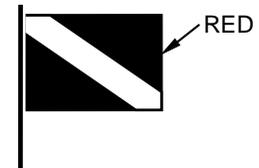

USED BY RECREATIONAL DIVERS - INDICATES DIVER'S POSITION

ALPHA FLAG

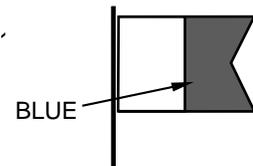

WORLDWIDE VESSELS ENGAGED IN DIVING OPERATIONS - DOES NOT INDICATE DIVER'S POSITION

KC-0372



KC-0260




BOATING SAFETY


! DANGER !

EXTREME HAZARD – Carbon monoxide gas (CO) is colorless, odorless and extremely dangerous. All engines and fuel burning appliances produce CO as exhaust. Direct and prolonged exposure to CO will cause **BRAIN DAMAGE** or **DEATH**. Signs of exposure to CO include nausea, dizziness and drowsiness. Sources of CO include:

- 1** Blockage of boat exhausts by obstruction.

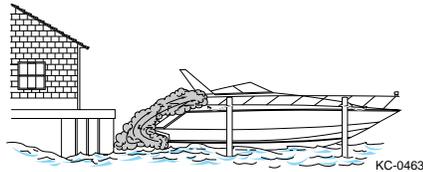


Exhausts traveling along obstruction.

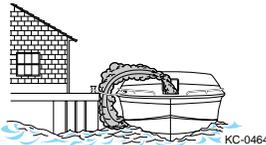


- 3** Operating at slow speed or while dead in the water.




- 4** Operating with high bow angle.

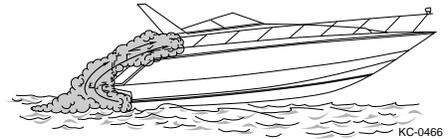

- 5** Exhausts from other vessels in confined areas.

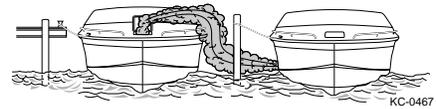

- 6** Operating with canvas tops and side curtains in place without ventilation.

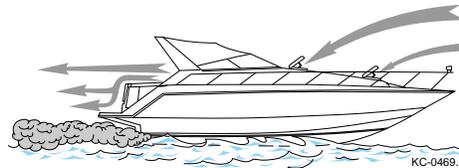

ENSURE ADEQUATE VENTILATION FOR CORRECT AIR MOVEMENT THROUGH BOAT!

OPERATION BY MINORS

Minors must always be supervised by an adult whenever operating a boat. Many states have laws regarding the minimum age and licensing requirements of minors. Be sure to contact the state boating authorities for information.



PASSENGER SAFETY

Whenever you are going for an outing, make sure that at least one passenger is familiar with the operation and safety aspects of the boat in case of emergency. Show all passengers the location of emergency equipment and explain how to use it. Don't allow passengers to drag their feet or hands in the water, or sit on the bow, bow pulpit, deck, or gunwale while the engine is running.

WATER SPORTS

Larger boats produce a wake too big for skiers. Only boats that are equipped with a ski-tow eye should be used to pull water skiers.

NOTICE

It is unlawful to participate in water sports while under the influence of alcohol or other drugs.

When participating in water sports, be safe and courteous and follow these guidelines:

- Be considerate to fishermen and others you share the water with.
- Do not perform water sports in congested areas.
- Stay away from navigation markers.
- Stay away from other boats and water sports participants.
- Return immediately to a fallen water sport participant.
- Regularly inspect water sport equipment to ensure it is safe.



WARNING



- **Water sport participants must wear a USCG approved flotation device. A type III water ski vest is an approved and practical PFD.**
- **Keep at least 30 m (100 ft.) away from all other objects.**
- **When water sporting have an experienced driver and aft facing observer in the boat.**
- **Never water sport in shallow water or at night.**
- **Never jump from a moving boat.**
- **Always keep a downed water sporter in sight.**
- **Turn the motor OFF before you get close to someone in the water.**



BOATING SAFETY



CIRCLE



TURN LEFT



TURN RIGHT

CUT MOTOR



SKIER O.K.



SKIER IN WATER



BACK TO DOCK



SPEED FASTER



SPEED SLOWER



STOP



SPEED OK

KC-0270

WATER SPORT
HAND SIGNALS

GENERAL PRECAUTIONS

Your safety, the safety of your passengers, and other boaters are among your responsibilities as operator of this boat. Your boat must be in compliance with U.S. Coast Guard safety equipment regulations. You should know how to react correctly to adverse weather conditions, have good navigation skills, and follow the “rules of the road” as defined by the Coast Guard and state/county/local regulations.



WARNING



Read and understand this manual and the engine manual, and be sure that you understand all controls and operating instructions before attempting to operate the boat. Improper operation can be extremely hazardous.


Before each outing you should check all safety equipment, such as fire extinguishers, PFDs, flares, distress flags, flashlights, engine stop switch, etc. They should be operable, in good condition, readily visible, and easily accessed.

Tell someone of your travel plans. Check local weather reports before casting off; do not leave the dock area when strong winds and electrical storms are in the area or predicted to be in the area.

Know the weight capacity of your boat. Do not overload your boat.

OUR ENVIRONMENT

As a boater, you already appreciate nature’s beauty and the peace of the great outdoors. It is a boater’s responsibility to protect the natural environment by keeping waterways clean.

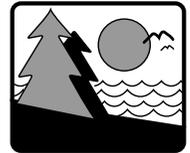

Don’t put anything in the water you wouldn’t want to eat or drink!

Conserve Fishery Resources

There is a tremendous drain on our fishery resources. Over-fishing and pollution have strained the fish population. Do your part by keeping only what you will eat by practicing catch-and-release.

Foreign Species

If you trailer your boat from lake to lake, you may unknowingly introduce a foreign aquatic species from one lake to the next. Thoroughly clean the boat below the water line, remove all weeds and algae, and drain the bilge and livewells before launching the boat in a new body of water.



Fuel and Oil Spillage

The spilling of fuel or oil into our waterways contaminates the environment and is dangerous to wildlife. Never discharge or dispose fuel or oil into the water; it is prohibited and you could be fined. There are two common, accidental types of discharge:

- Overfilling the fuel tank
- Pumping contaminated bilge water



WARNING



Fumes from rags can collect in bilge and be extremely hazardous. Never store rags used to wipe-up fuel or solvent spills in the boat. Dispose of rags properly ashore.

Discharge and Disposal of Waste

Waste means all forms of garbage, plastics, recyclables, food, wood, detergents, sewerage and even fish parts in certain waters - in short, nearly everything. We recommend you bring back everything you take out with you for proper disposal ashore.

If you have a marine sanitation device (head or marine toilet) installed, use an approved pump-out facility at your marina. Many areas prohibit the discharge of sewerage overboard or even an operable overboard waste discharge.

Excessive Noise

Noise means engine noise, radio noise or even yelling. Many bodies of water have adopted noise limits. Don't use thru-transom exhaust unless you're well off shore. Music and loud conversation can carry a considerable distance on water, especially at night.

Wake and Wash

Be alert for NO WAKE zones. You may be responsible for any damage or injury caused by your wake/wash. Prior to entering a NO WAKE zone, come off plane to the slowest steerable speed.

Exhaust Emissions

Increased exhaust (hydrocarbon) emissions pollute our water and air. Keep your engine tuned and boat hull clean for peak performance. Consult your dealer and engine manual for information.




BOATING SAFETY

Paints

If your boat is kept in water where marine growth is a problem, the use of anti-fouling paint may reduce the growth rate. Be aware of environmental regulations that may govern your paint choice. Contact your local boating authorities for information.

Cleaning Agents

Household cleaners should be used sparingly and not discharged into waterways. Never mix cleaners and be sure to use plenty of ventilation in enclosed areas. **DO NOT** use products which contain phosphates, chlorine, solvents, non-biodegradable or petroleum based products. Citrus based cleaners are excellent for marine cleaning purposes and are safe for you and the environment. Refer to MAINTENANCE for more information.

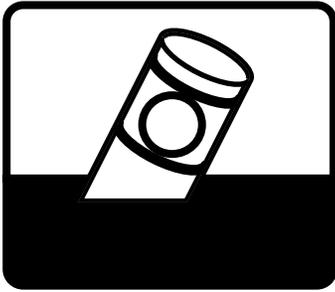

BASIC RULES OF THE ROAD

2



WARNING



The nautical rules of the road must be followed to prevent collisions between vessels. Like traffic laws for automobiles, the operator is legally required to follow safe operating rules.

The following information outlines only the most basic of the nautical rules of the road. For more information, contact your local U.S. Coast Guard Auxiliary.

AIDS TO NAVIGATION

Learn to recognize the different buoys and day markers; they are the signposts of the waterway. There are 2 primary marking systems in use in the U.S.; the Uniform State Waterway Marking System (USWMS) used on inland waters and maintained by each state, and the Federal Waterways Marking System (FWMS) used on coastal waters and rivers and maintained by the U.S. Coast Guard (USCG). In addition, the FWMS has two modified systems; Western River Buoyage, and Intracoastal Waterway Buoyage. Be sure to check with local authorities on the buoyage system in use.

The only buoys you are permitted to moor to are mooring buoys. Mooring to a navigation buoy or other navigational aid or regulatory marker is illegal.

The type of hazard/warning buoys and markers depend on the area of jurisdiction. Check with boating authorities for information on local marking systems.

USWMS System


In the USWMS Lateral System, well defined channels are marked with red and black buoys. Lateral means the sides of the channel are marked and the boat should pass between them.

The USWMS Cardinal System is used when there is no well defined channel or where an obstruction may be approached from more than one direction. With the cardinal system:

- Pass north or east of BLACK-TOPPED WHITE buoy.
- Pass south or west of RED-TOPPED WHITE buoy.
- RED and WHITE VERTICALLY STRIPED buoy indicates boat should pass outside of the buoy (away from shore).




NAVIGATE TO SOUTH OR WEST

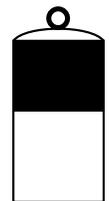


NAVIGATE TO NORTH OR EAST



NAVIGATE TO STARBOARD FACING UPSTREAM

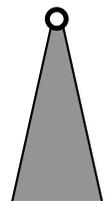

NAVIGATE TO PORT FACING UPSTREAM

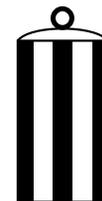

MID-CHANNEL



KC-0411

USWMS BOUYS



BASIC RULES OF THE ROAD

Uniform State Regulatory Markers

USWMS regulatory markers are white with international orange geometric shapes; you must obey regulatory markers.

FWMS System

The FWMS Lateral System is for use on navigable waters except Western Rivers and Intracoastal Waterways.

The markings on these buoys are oriented from the perspective of being entered from seaward (the boater is going towards the port). This means that red buoys are passed on the starboard (right) side when proceeding from open water into port, and black buoys to port (left) side.

The right side (starboard) of the channel is marked with RED, even numbered buoys. The left (port) side of the channel is marked with GREEN, odd numbered buoys.

The middle of the channel is marked with RED and WHITE vertically striped buoys; pass close to these buoys.

Obstructions, channel junctions, etc. are marked with RED and GREEN horizontally striped buoys.

A RED band at the top means the preferred channel is to the left of the buoy; a GREEN top band means the preferred channel is to the right of the buoy.

Day markers are colored and numbered the same as buoys. RED, triangular day markers with even numbers mark the starboard side of the channel. GREEN, square day markers with odd numbers mark the port side of the channel.

CONTROLLED AREA

DANGER

DO NOT PASS BETWEEN SHORE AND BUOY

SPECIAL PURPOSE

BOATS KEEP OUT

INFORMATION

KC-0411

STARBOARD DAY MARKER

PORT DAY MARKER

KC-0440

MOORING BUOY

WHITE WITH BLUE BAND

MAY SHOW WHITE REFLECTOR OR LIGHT










KC-0412

USWMS REGULATORY MARKERS

BASIC RULES OF THE ROAD



Lights, bells and horns are used on buoys for night or poor visibility conditions. Buoys with unique light flashing characteristics are identified on nautical charts with the specific flashing pattern.

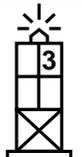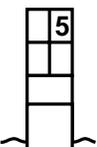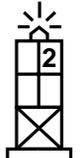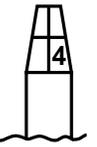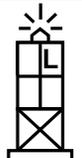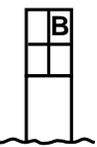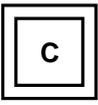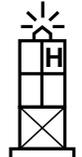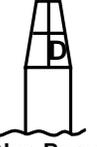Federal Waterways Marking System (FWMS)				
Lateral Aids Marking the Sides of Channels as seen When Entering From Seaward	Port Side Odd Numbers (Green)	 Lighted Buoy (Green Light)	 Can Buoy	 Daymark
	Starboard Side Even Numbers (Red)	 Lighted Buoy (Red Light)	 Nun Buoy	 Daymark
Safe Water Aids Marking Mid-Channels and Fairways (No Numbers—May be Lettered)	(Red)	 Lighted (White Light)	 Spherical Buoy	 Daymark
Preferred Channel Aids (No Numbers—May be Lettered)	Preferred Channel to Starboard (Green and Red)	 Lighted Buoy (Green Light)	 Can Buoy	 Daymark
	Preferred Channel to Port (Green and Red)	 Lighted Buoy (Red Light)	 Nun Buoy	 Daymark

KC-0441



Light Structures

Maneuvering a boat at night can be dangerous and confusing. To aid boaters with navigation and warn of hazards, the U.S. Coast Guard and state and local authorities maintain a variety of light structures. Some light structures may be equipped with radio beacons, radar reflectors, and/or fog signals.

Minor Lights – are colored according to the buoyage marking system in use. They are similar to lighted buoys, except they are usually higher and on more stable platforms to increase visibility. Most minor lights are part of a series to mark a channel, river, or harbor.



BASIC RULES OF THE ROAD

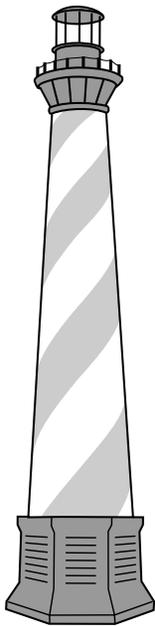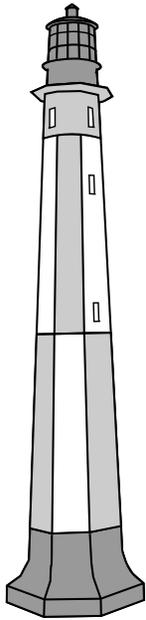


KC-0443

Lighthouses – can be found at harbor entrances, prominent headlands, isolated danger areas, and along the coasts. These striped or patterned structures have unique flashing characteristics to help identify them.

Range Lights – are usually visible in one direction and help a boat operator navigate in a generally safe direction. Steering a course to keep range lights arranged in a line (one on top of the other) will help guide a boat through a channel.

RANGE LIGHTS

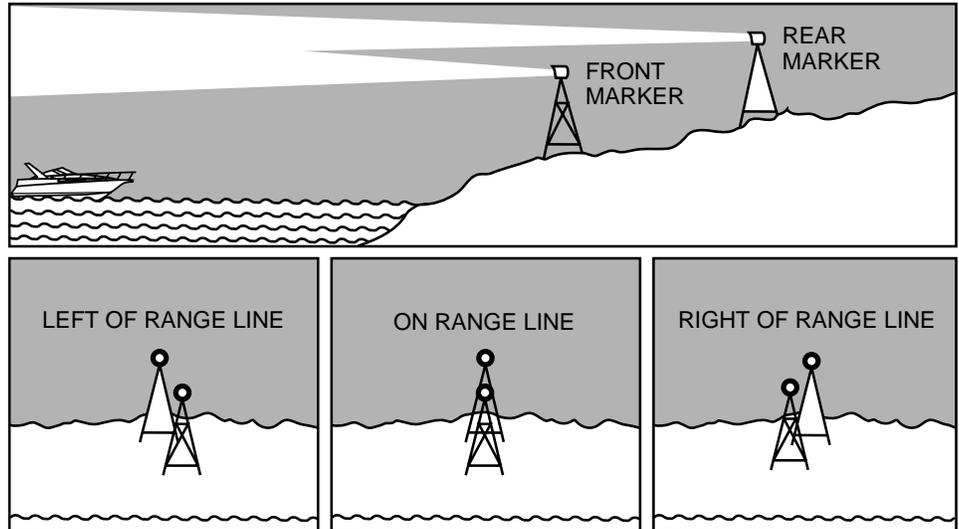

KC-0442

RIGHT-OF-WAY



CAUTION

In general, boats with less maneuverability have right-of-way over more agile craft. Likewise, smaller boats should give-way to larger ones. You must stay clear of the vessel with right-of-way and pass to his stern.

Whistle/Horn Signals

Signaling other boats with a whistle is similar to using turn signals on an automobile. It is not necessary to use a whistle signal every time a boat is nearby. In general, boat operators should signal their intention to avoid potentially confusing or hazardous situations.

It is customary for the privileged boat to signal first, and the give-way boat to return the same signal to acknowledge she understands and will comply. Use the danger signal (five or more short and rapid blasts) if intent is not clear.

Use the following whistle blasts early enough to be noticed and understood by other boaters:

- One long blast: Warning signal (coming out of slip or passing astern)
- One short blast: Pass on my port side
- Two short blasts: Pass on my starboard side
- Three short blasts: Engines in reverse
- Five or more short and rapid blasts: Danger Signal!

BASIC RULES OF THE ROAD



Privileged Boats

Privileged boats have right-of-way and can hold course and speed. Sailboats and boats paddled or rowed have the right-of-way over motor boats. Sailboats under power are considered motorboats. Small pleasure craft must yield to large commercial boats in narrow channels.

Burdened Boats



The burdened boat is the boat that must make whatever adjustments to course and speed necessary to keep out of the way of the privileged boat.

Crossing Situation

In crossing situations, the boat to the right from the 12 o'clock to the 4 o'clock position has the right-of-way. It must hold course and speed. The burdened boat keeps clear and passes behind the privileged boat. Boats going up and down a river have the privilege over boats crossing the river.

Meeting Head-On


Neither boat has the right-of-way in this situation. Both boats should decrease speed, should turn to the right, and pass port-to-port. However, if both boats are on the left side of a channel, each vessel should sound two short horn blasts and pass starboard to starboard.

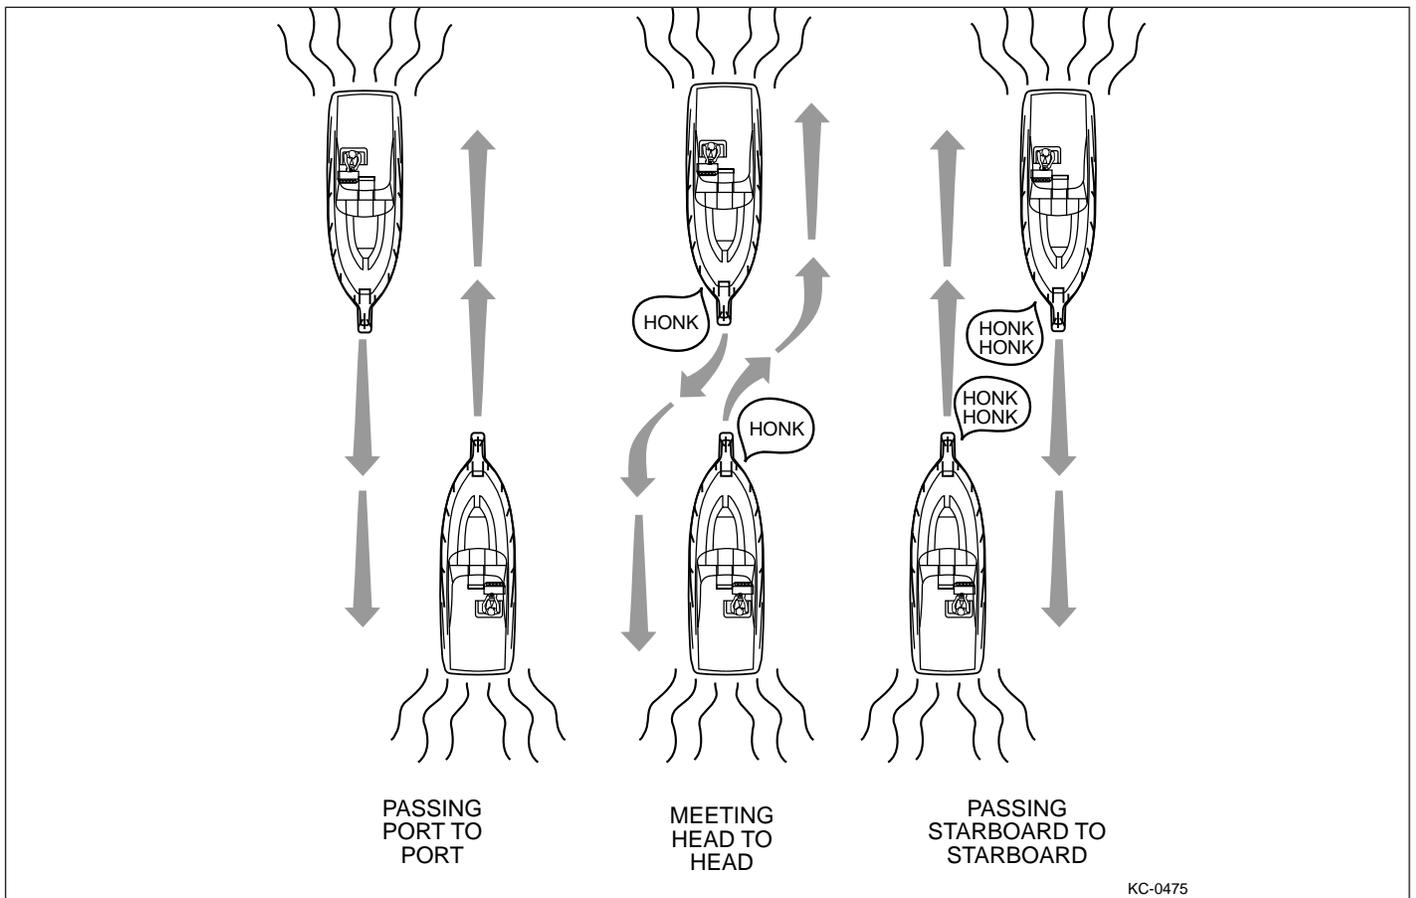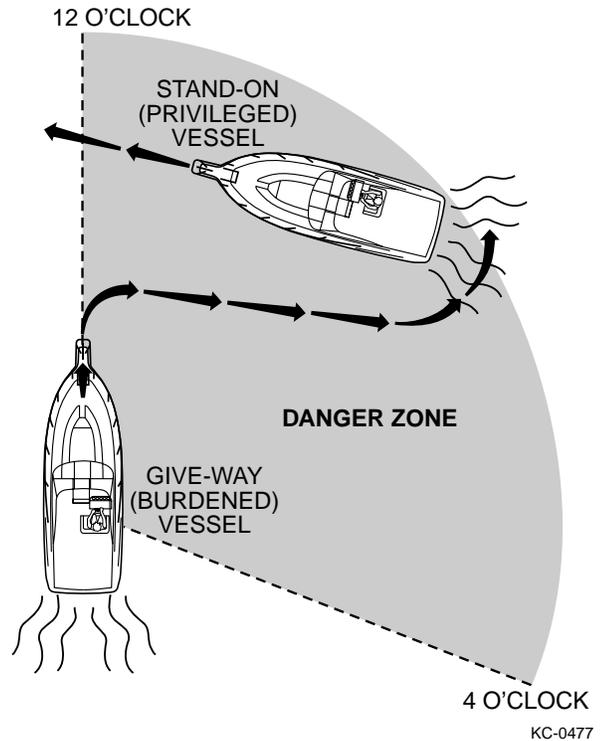



BASIC RULES OF THE ROAD

STAND-ON
(PRIVILEGED)
VESSEL BEING
OVERTAKEN

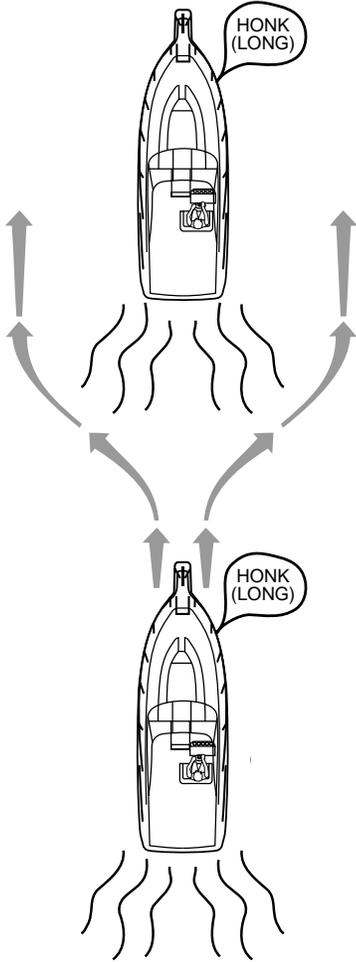

GIVE-WAY
(BURDENED)
VESSEL
OVERTAKING

KC-0476

Overtaking

The boat that is overtaking one ahead of it is the give-way boat and must make any adjustments necessary to keep out of the way of the stand-on boat. The stand-on boat should hold its course and speed.

The General Prudential Rule


The general prudential rule regarding right-of-way is that if a collision appears unavoidable, neither boat has right-of-way. As prescribed in the Rules of the Road, both boats must act to avoid collision.

Night Running

Boats operating between sunset and sunrise (hours vary by state) must use navigational lights. Nighttime operation, especially during bad weather or fog can be dangerous. All Rules of Road apply at night, but it is best to slow down and stay clear of all boats, regardless of who has right-of-way.

Protect your night vision by avoiding bright lights and have a passenger, if possible, help keep watch for other boats, water hazards, and aids to navigation.

The size, speed, and direction of other vessels are determined at night from the running lights. A green light indicates the starboard side of the boat, and a red light indicates the port side. Generally, if you see a green light, you have the right-of-way; if you see a red light, give-way to vessel.

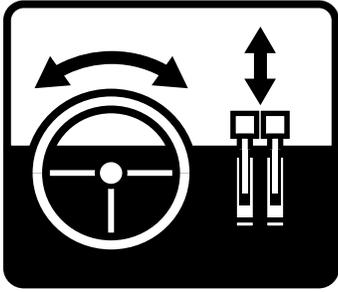

CONTROLS AND INDICATORS

3

Knowing the controls and indicators on your boat is essential for safe and proper operation. The controls and indicators shown in this section may be optional or slightly different than those on your boat.

SHIFT/THROTTLE CONTROLS



WARNING



Improperly maintained controls are hazardous and may cause sudden loss of control. Make sure all shift/throttle hardware and cables are regularly inspected and maintained. Improper maintenance may result in a loss of control, resulting in serious injury or death.

The shift/throttle control on your boat differs from model to model and may depend on the engine used. The following shift/throttle controls are typical of the operation of most controls used. Be sure to consult the engine or control manual for specific operational differences.




CAUTION


Never shift too quickly from forward to reverse. Stay in neutral, or idle position until the boat has lost most of its headway before completing the shift to reverse or engine damage may occur.

NOTICE

All shift/throttle controls are equipped with a safety switch for “start in neutral only” operation. Be sure the control is in neutral before attempting to start the engine.

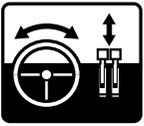


CONTROLS AND INDICATORS

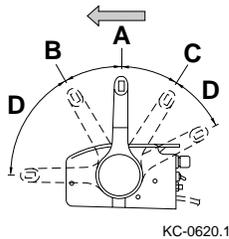


KC-0620.1


PORT CONTROL LEVER
STARBOARD CONTROL LEVER

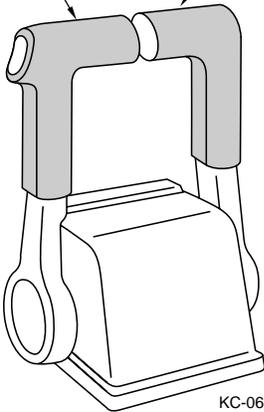

KC-0651

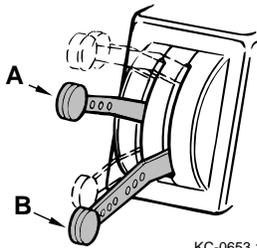

KC-0653.1

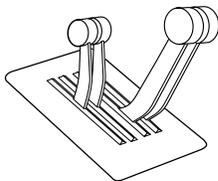

KC-0654.1

Single Lever Controls

Single lever controls operate as both a gear shifter and a throttle for a select engine. The lever is detented in the neutral position for starting. Shifting is accomplished by moving the lever into the first 15° of travel; push the lever for forward, and pull the lever back for reverse. By advancing the lever beyond 15°, you move from the shifting range to the throttle range. Never attempt to shift without the engine running. For engine warm-up, a separate lever or button on the control is used for throttle advance while the transmission remains in neutral.

- A.** Neutral Position - Safety switch will allow starting in this position only.
- B.** Forward Position - Press release button under handle to allow shifting to forward (or reverse) position.
- C.** Reverse Position - Do not shift quickly from forward to reverse.
- D.** Throttle Position - Pushing in forward or pulling in reverse increases engine speed.

Twin engine boats equipped with single lever controls have two levers, a left lever for port engine control and a right lever for the starboard engine. This makes it possible to operate one engine in forward and the other in reverse for easier maneuvering in tight quarters.

Dual Lever Controls

Dual lever controls have individual levers for transmission shift and engine throttle. For the shift lever(s), neutral is the detent position in the middle of the lever's travel. Pushing the lever(s) up or ahead shifts the transmission(s) into forward and pulling the lever(s) down or back shifts the transmission(s) into reverse. For the throttle lever(s), full throttle position is all the way up or forward and idle position is all the way down or back.

For engine warm-up, the shift lever(s) are positioned in neutral and the throttle lever(s) are advanced as needed. For maneuvering at slow speed, it is sometimes desirable to operate one engine in forward and the other in reverse.


- A.** Shift Lever - Neutral is in center detent position; push for forward, pull for reverse.
- B.** Throttle Lever - Full throttle is all the way up, idle is all the way down.

Dual lever controls on twin engine boats have individual levers for transmission shift and engine throttle for each engine, left levers for the port engine and right levers for the starboard engine. Twin engine controls are usually arranged with shift levers (all one size and color) grouped together and throttle levers (all the same size and color, but usually larger than the shift levers) grouped together.

INSTRUMENTS

All instruments are illuminated for night operation. Their type, number, and location vary; some may not appear on your model. If your boat is equipped with twin-engines, there may be two sets of some of the instruments described in this section; one set for each engine. Typically, instruments for the port side engine will be found on the port side of the helm control panel; likewise for the starboard engine instruments.

CONTROLS AND INDICATORS

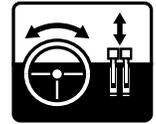

If an instrument reading is outside of normal or recommended ranges, investigate cause immediately or see your dealer. Consult the engine operator's manual for the normal recommended ranges.

Tachometer

Registers engine speed in revolutions per minute. Use this gauge to keep the engine within the proper operating range. Consult the engine manual for the proper RPM operating range for your engine.

Speedometer

Registers forward boat speed relative to the water in miles per hour. Use this gauge to monitor fuel consumption and propeller performance. Since most marine speedometers are operated by water pressure, accuracy is only approximate.

Fuel Gauge

This gauge registers approximate fuel level in the gas tanks. Since the accuracy of your gauge varies with the attitude of your boat (trim and list), and the fuel pick-up tube cannot withdraw all of the fuel in the tank, it is wise to observe the One Third Rule. Use one third of your gas to go out, one third to come back, and one third as a reserve.

Water Pressure Gauge

Registers the water circulated by the water pump in pounds per square inch (PSI). Use this gauge to observe that the engine cooling system is operating properly. Consult the engine manual for the normal operating PSI range.

Engine Trim Gauge


Shows the position of the outdrive unit and indicates the relative position of the bow, from a horizontal plane. Use this gauge to monitor boat trim.

Engine Sync Gauge


Indicates synchronization of engine speeds. Adjust throttles so that needle is centered. Excessive noise and vibration can occur if engines are not properly synchronized to each other

Voltmeter

Indicates the condition of the main or cranking battery in volts DC. Normal operating range is 12+ volts.

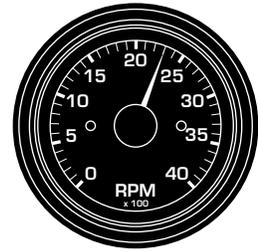

KC-0700

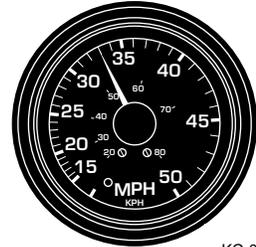


KC-0710




KC-0720




KC-0730

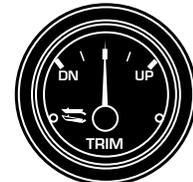


KC-0740

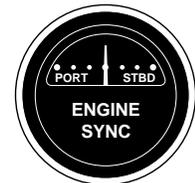

KC-0702

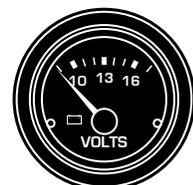

KC-0750

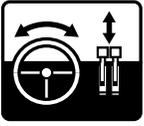


CONTROLS AND INDICATORS




KC-0760




KC-0770

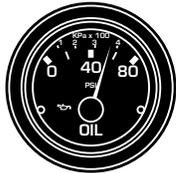


KC-0780

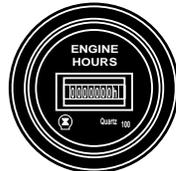


KC-0782

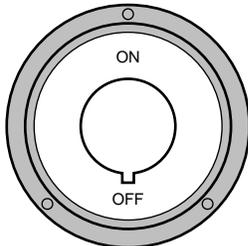

TYPICAL BATTERY SWITCH
KC-0704

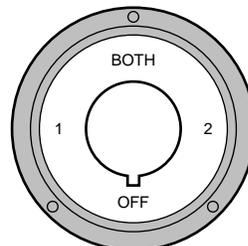

TYPICAL BATTERY SELECTOR SWITCH
KC-0705

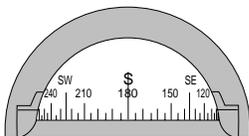

KC-0703

Ammeter

Measures the charging current in the electrical system. Consult the engine manual for the normal operating range.

Engine Water Temperature Gauge

Indicates the engine water/coolant temperature inside the engine. Consult the engine manual for the normal operating range.

Engine Oil Pressure Gauge

Indicates the pressure of the lubricating oil inside the engine. Consult the engine manual for the normal operating range.

Engine Hourmeter

Registers accumulated engine operating time, and is activated when the ignition switch is in the "ON" position. Be aware that time will be logged whenever the ignition switch is "ON", even when the engine is not running. Use the hourmeter to keep accurate logs for scheduled maintenance.

SWITCHES

Each electrical circuit on your boat is equipped with a control switch. Some switches may have an LED indicator for easy ON/OFF identification. Most switches will have a fuse holder, or circuit breaker adjacent to the switch.

Master Power Switch – Disconnects the boat electrical systems from the batteries. When not using the boat, keep this switch in the OFF position.

Battery Switch – Connects the battery(ies) to the electrical system. Provides isolation and positive disconnect of battery(ies) to protect against tampering, electrical fire hazards, and battery run-down. Rotate switch to the OFF position when the boat is not in use.



WARNING




Never turn switch to the OFF position while the engine(s) is running or serious alternator/electrical system damage could occur.

Battery Selector Switch – Operates as a battery switch and provides the additional ability to connect two batteries in parallel for starting in case one battery is low. Allows emergency starting of either engine with the opposite battery. May be used in conjunction with an isolator and third battery. Refer to Ship Systems for more information.

Windshield Wiper Switch – Controls operation of windshield wipers.

Compass – Aids with navigation by indicating where NORTH is located. The compass must be adjusted for the area you are in and

CONTROLS AND INDICATORS

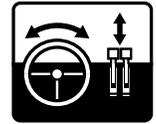

can be affected by instruments installed adjacent to it. The compass must be compensated (corrected) for deflections caused by magnets and electrical wiring in its vicinity.

After all optional equipment has been installed in the helm area, the compass should then be compensated. Since the compass is an important navigational aid, the compensating should be done by a qualified compass adjuster. It is seldom that a compass can be corrected to zero deviation on all headings, so he will provide you with a deviation card or chart showing the correction to be applied when laying out a compass course or making your navigational calculations.

After the compass is adjusted, do not permit items which might affect it to be placed near the compass, even temporarily. The compass must be readjusted if any influencing item for which it has been compensated is removed or relocated, or added in the vicinity. As a rule of thumb, electrical or metal items should be kept three or more feet away from the compass so as not to affect its magnetic field.

Get to know your compass. Watch how it swings. Check that its readings are consistent on frequently sailed courses. Note if it becomes sluggish, and above all, if it becomes erratic. These two signs warn of alien magnetism or damaged compass.


Fuel Gauge Switch – Allows you to check the amount of fuel in the fuel tank when the navigation lights are OFF or the ignition switch is OFF.

Boarding and Courtesy Lights – Are controlled by selector switches for operation of boarding lights and cockpit courtesy lights. The main DC breaker (Master Power) switch must first be in the ON position to activate lighting.

Navigation Lights Switch – Controls the running and anchor lights for night operation. NAV position will turn on the red and green bow lights, white stern light, and gauge illumination. ANC position turns on only the white stern light for night anchoring.

COMPASS DEVIATION		
HEADING	WEST	EAST
30°	5°	
60°	5°	
90°	6°	
120°	4°	
150°	3°	
180°	1°	
210°		1°
240°		2°
270°		4°
300°		4°
330°		5°
360°		6°

KC-0921

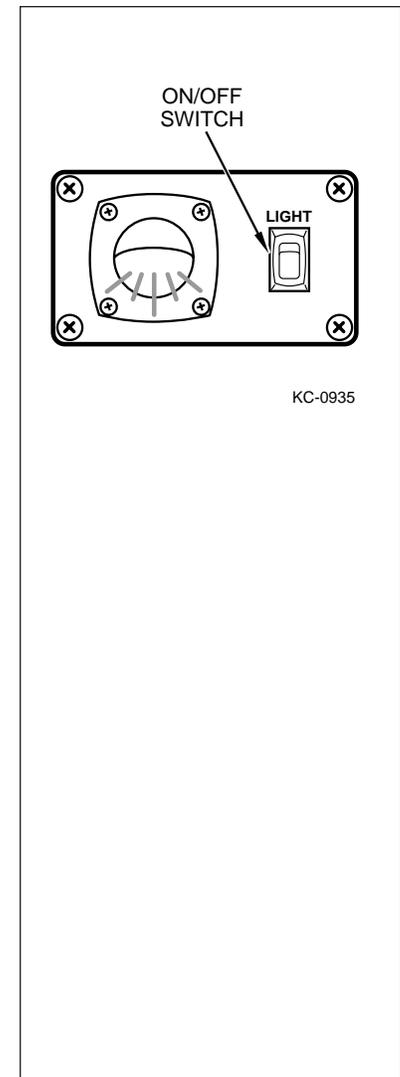

KC-0935



CAUTION

Never operate the boat between sunset and sunrise with the switch in the anchor light position. Running lights are required to indicate direction and right-of-way at night.


Blower Switch – Activates the engine box ventilation blower to remove explosive fumes from the box and bilge areas.



WARNING




The blower must be operated for a minimum of five minutes before each time the engine is started. In addition, the blower should be operated continuously when at idle or slow speed running. Failure to operate the blower can lead to conditions favorable for an explosion, with severe personal injury or death resulting.

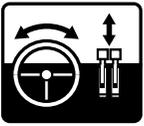

CONTROLS AND INDICATORS




KC104-18

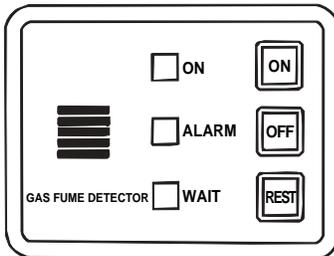

KC-0936

BATTERY CHARGER

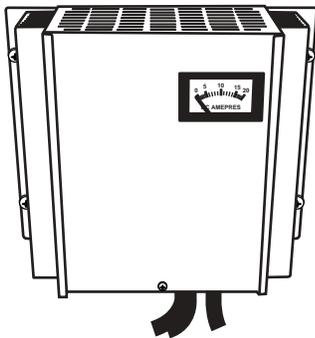

KC104-16

Bilge Switch – Activates the bilge pump to remove excess water from the bilge. Some models are equipped with an automatic bilge pump setting. Switch to AUTO whenever the boat is in operation, water will be pumped-out as it enters the bilge.



CAUTION

Be sure to switch the bilge OFF when the boat is not in use. Wave action or trailer travel can cause the pump to run down the battery.

Ignition Switch – Starts and stops the engine. Be sure to consult the engine operator's manual for information.

Depth Sounder – Indicates the distance between the bottom of your boat and the earth's surface directly below the transducer. To avoid running aground in shallow water, always add extra distance to meter reading. Consult the depth sounder operator's manual for more information.

Gas Fume Detector – Alarm will sound when gas fumes are detected. Turn on bilge blower to evacuate fumes. The sensor for the vapor detector is mounted in the bilge area where fumes collect. Test the unit before each cruise to check for proper performance.



WARNING



If the gas fume detector indicates a dangerous condition, do the following:

- DO NOT operate electrical equipment.
- Extinguish open flames and smoking materials immediately.
- Turn engine(s) OFF.
- Wait 5 minutes before opening the engine compartment to investigate the cause.
- Determine cause and correct immediately before resuming operation.


Engine Alarm System – Sounds alarm if the engine temperature exceeds set limit or if oil pressure drops below set range. If alarm sounds during operation, immediately shut down engines and determine cause. Consult the engine operator's manual for more information.



CAUTION

Continued operation after the warning alarm has sounded may cause severe engine damage.

CONTROLS AND INDICATORS

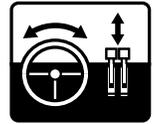

Battery Charger – Operates from the shore power or generator systems. It converts 110 volts A.C. to 12 volts D.C. to charge the batteries. The battery charger will either deliver full output to a discharged battery, or deliver a trickle charge to a battery with minimal discharge. Consult the battery charger operator's manual for more information.

Battery Isolator – Allows you to charge multiple batteries. The isolator automatically detects how much of a charge to send each battery. It prevents batteries from being overcharged, and eliminates a higher charged battery from discharging into a lower charged battery. Consult the battery isolator operator's manual for more information.


Horn Button – Push and hold to sound the horn.

Trim/Tilt Switch – Your engine is equipped with power trim and tilt, this switch activates that function. Push and hold the switch until the engine is at the desired angle. Use this switch in combination with the trim gauge to maximize boat performance in the water. The tilt switch raises the drive unit for trailering.

Trim Tab Switches – These rocker switches control the trim tabs located on the port and starboard transom. Adjusting trim tabs will improve the ride of your boat and correct listing from side to side due to varying weight conditions. See the RUNNING section of this manual for further trimming procedures.

Engine Stop Switch and Lanyard – The engine stop switch stops the engine when engaged. Attach the lanyard to the boat operator whenever the engine is running. If the operator is thrown from the seat or moves too far from the helm the lanyard will engage the switch and shut off the engine.

To attach the lanyard, hold out the button head and slide the fork beneath the safety switch. Attach the hook on the opposite end of the lanyard to a strong piece of clothing on the operator, such as a belt loop.

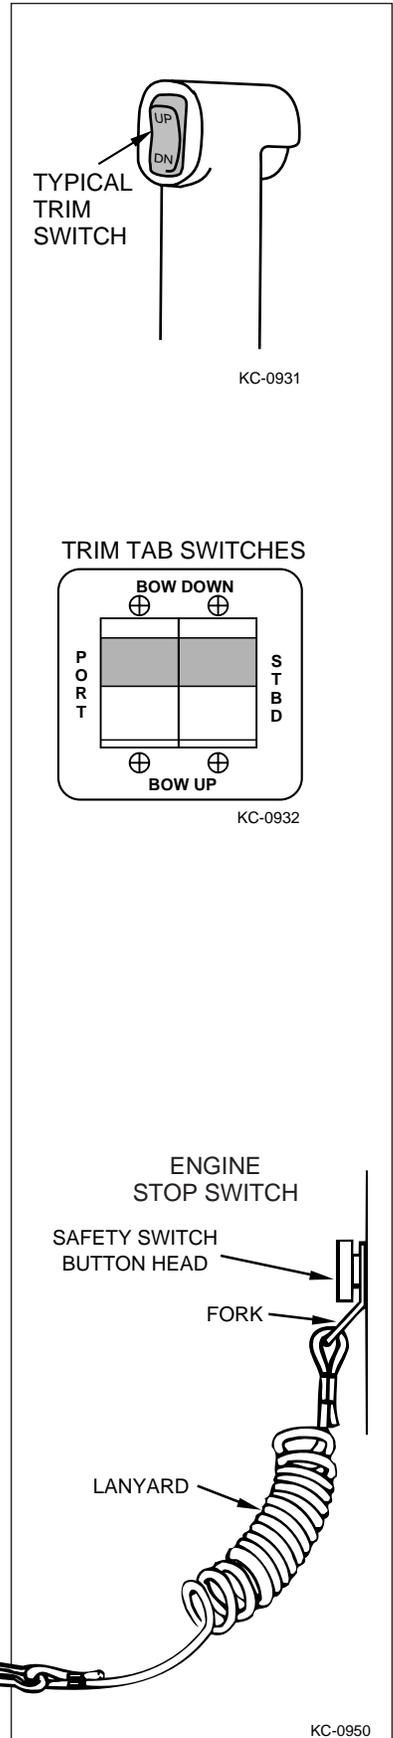

WARNING




Attach the Engine Stop Switch lanyard to the operator before starting the engine. This will prevent the boat from becoming a runaway if you are accidentally thrown from the boat.

The Engine Stop Switch can only be effective when it is in good working condition. Observe the following:

- **Never remove or modify the Engine Stop Switch and/or lanyard.**
- **Lanyard must always be free from obstructions that could interfere with its operation .**

ONCE A MONTH: Check switch for proper operation. With engine running, pull lanyard. If engine does not stop, see your DEALER for replacement of switch.

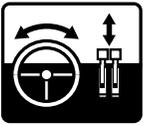

CONTROLS AND INDICATORS

STEERING SYSTEMS





Your boat is equipped with a steering wheel for controlling the direction of travel. The steering system itself may be mechanical, power-assisted or hydraulic in operation.

Boat steering is not self-centering. Always keep a secure grip on the steering wheel to maintain full boat control.

With mechanical steering, the helm unit transfers rotary motion of the steering wheel to linear motion in the cable which pushes or pulls the steering arm. Some boats are equipped with two cables; one cable pushes and the other pulls.


With power-assisted systems, the helm unit transfers rotary motion of the steering wheel to linear motion which pushes or pulls a cable. The cable movement is sensed and a signal is sent to a hydraulic pump which moves the hydraulic cylinder attached to the steering arm.

With hydraulic steering, the manual hydraulic steering system does not act like the power steering system in your car. The effort required to turn the wheel will increase as the system is called on to exert more force. As the steering wheel is turned, the pistons in the manual pump force hydraulic fluid to the cylinder, which then provides the force necessary to turn the boat.

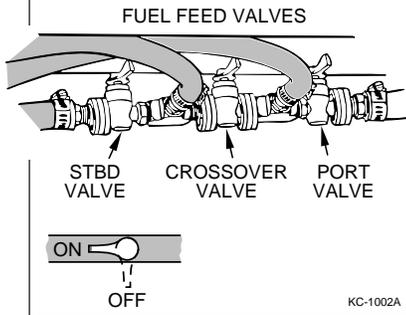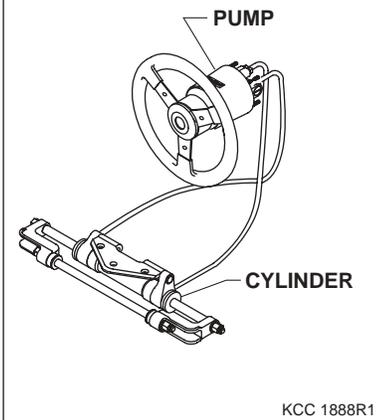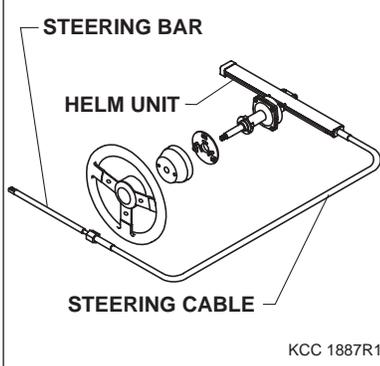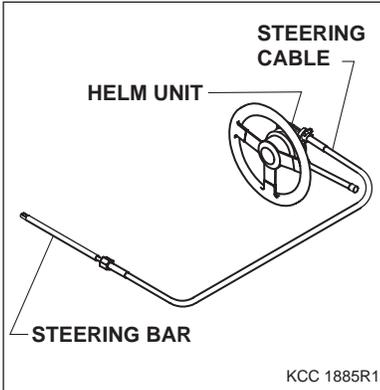

FUEL CONTROLS

Fuel Feed Valves – Models with two (or more) fuel tanks use manual valves to control fuel flow to the engines. Boat trim can be adjusted with the proper use of fuel feed valves. Refer to Ship Systems for more information.

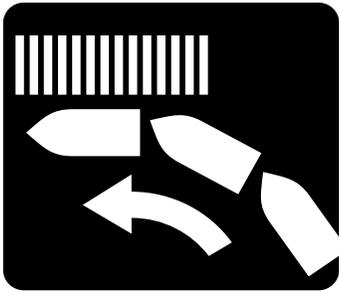

OPERATION

4

This section describes the basics of fueling, starting, running, trimming, and docking your boat. Since there is a variety of control and engine options, be sure to consult the other owner's manuals provided with your boat.

FUELING

Built-in tanks have the fuel filler aft in the boat. The fuel tank is equipped with either a shut-off valve or anti-siphon valve. The shut-off valve requires you to manually turn the fuel valve, while the anti-siphon valve operates automatically. Because gasoline fumes are heavier than air, they will sink to the lowest part of your boat, such as the bilge. It is important to always evacuate fumes with the blower before attempting to start the engine.




WARNING




Gasoline is extremely flammable and highly explosive under certain conditions. When refueling, always stop the engine and never smoke or allow open flames or sparks within 50 feet of the fueling area.

Take care not to spill gasoline. If gasoline is spilled accidentally, wipe up all traces of it with dry rags and immediately dispose of the rags properly onshore. When fueling:

- Know your fuel tank capacity. Be sure to have enough fuel to reach your destination. If departing for an extended cruise, know the availability of fuel along your route.
- Avoid fueling at night, except under well lighted conditions.
- Moor your boat securely to the dock. Know the location of fire extinguisher in case of emergency.
- Keep accurate records on fuel consumption. A fuel log tracking fuel use over time will help determine average consumption.
- Close all doors, hatches, windows, and other compartments.
- Extinguish cigarettes, pipes, stoves, and all other flame producing items.
- Make sure all power is off, and do not operate any electrical switches.
- Remove fuel fill cap. Insert hose nozzle and make sure nozzle is in contact with or grounded against fill opening. This will reduce the risk of static spark.

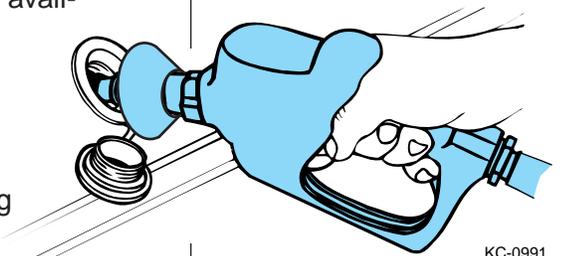

KC-0991

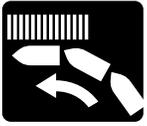

OPERATION

- Add fuel. Do not fill to capacity to allow for fuel expansion.
- Check oil level.

Notice

Each time you fill up, inspect fuel lines for leaks and hose deterioration.

Notice

The Federal Water Pollution Control Act prohibits the discharge of oil or oily waste into the water. Violators can be fined \$5,000. We urge you to protect our fragile environment by avoiding any type of discharge, trash, or litter into our waterways.


After fueling, you should:

- Close fill cap securely and wipe up spillage.
- Open all windows, hatches, doors, and compartments.
- Check all fuel lines and connections for leakage.
- Run blower for at least five minutes before starting your boat. If you smell gasoline fumes, continue to run blower.

STARTING


The following starting guidelines cover a wide variety of engine power and accessory options. Be sure to follow the starting instructions contained in the engine operator's manual and tailor starting procedures for your particular model.

- Complete Pre-Operation checks found in the Getting Underway section.
- Turn battery selection switch(es) to ON position.
- Open engine hatch.
- Open fuel feed valve(s) if equipped.

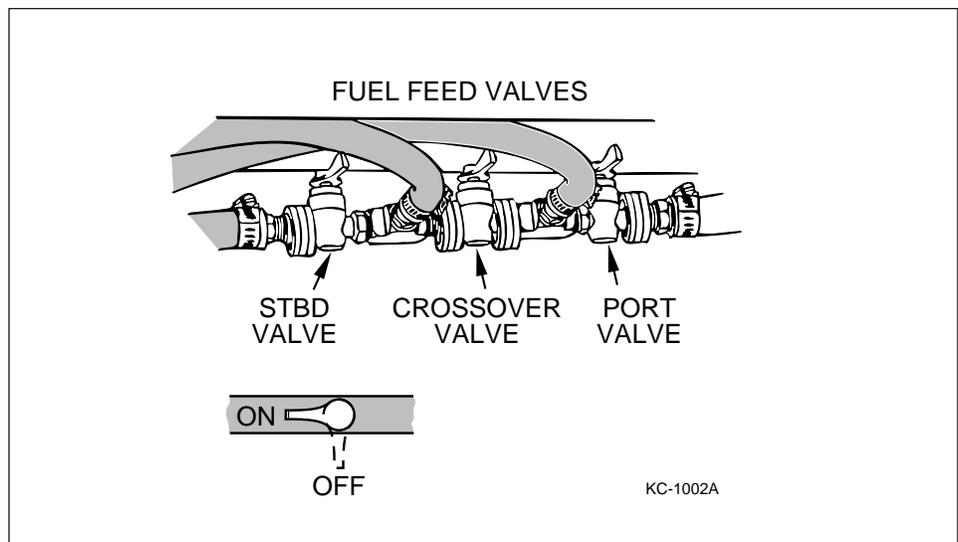



- Operate bilge blower for at least five minutes prior to starting engine(s). Continue to operate until underway at cruising speed.
- Use manual bilge pump switch to remove any water in bilge below the automatic switch level.
- Make sniff test with your nose; this is a very effective way to detect fumes.
- Open seacocks for engine cooling water. Seacocks for washdowns, heads, air conditioning, etc. are opened on an as needed basis.

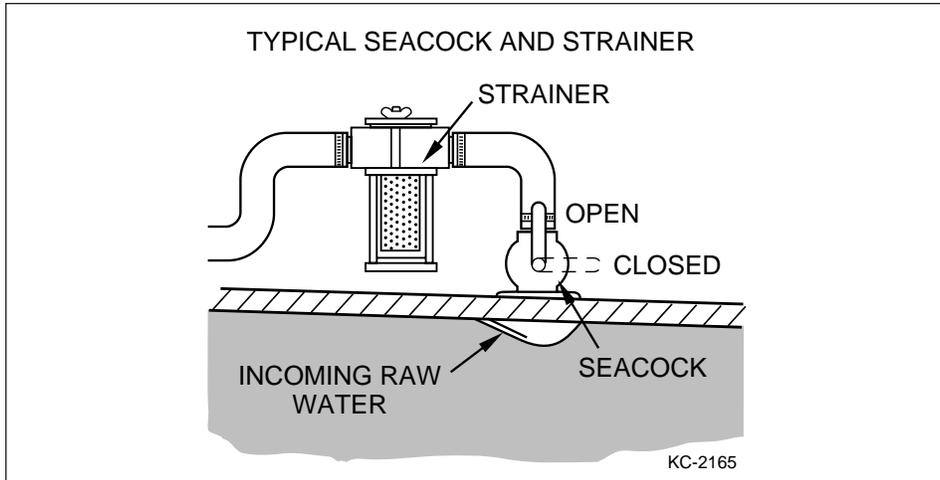

- Close engine hatch.
- Move stern drive(s) to full IN position.
- Move trim tab controls to the full UP position.
- Put shift lever(s) in NEUTRAL position.
- Move throttle lever(s) fully forward and return to idle position. Throttle linkage and cable must move freely.
- Slightly advance throttle lever forward.
- Turn the ignition key switch of one engine to START position. Release key immediately after engine starts.
- If engine will not start, move throttle to FULL position once or twice to actuate the carburetor accelerator pump.
- Operate engine at approximately 1000 to 1200 RPM for a few minutes before starting other engine (if equipped).
- Repeat steps for remaining engine, if equipped.
- Make sure gauges indicate normal operating ranges. If not, shut down engine(s) immediately and determine cause.
- After running engine(s) at 1000 to 1200 RPM for several minutes, reduce throttle to idle speed until you're ready to depart.



OPERATION

WARNING

The blower must be operated for a minimum of four minutes before each time the engine is started. In addition, the blower should be operated continuously when at idle or slow speed running. Failure to operate the blower can cause an explosion.

CAUTION

To prevent damage to the engine:

- Do not operate starter longer than a few seconds; let it cool for several minutes before trying again.
- Shift quickly and without hesitation. Never ease engine into gear or shift mechanism could be damaged.

CAUTION

Go slowly in reverse to avoid taking water in over the transom. You can swamp the boat by taking on too much water.

SHIFTING/RUNNING

Follow these guidelines when shifting your boat:

- Pause in neutral before shifting from forward to reverse, or reverse to forward.
- Avoid shifting into reverse while the boat is traveling forward at speed.
- Keep the shifter control clean and clear of obstructions.

WARNING ALARM

CAUTION

Continued operation after the warning alarm has sounded may cause severe engine damage.

Your boat is equipped with a warning alarm that will sound if an engine problem develops. If the warning alarm sounds, IMMEDIATELY throttle back to idle speed and shift into neutral. IMMEDIATELY check the gauges and stop the engine. On some models, the horn may emit a short chirping sound during starting to verify operation.



STEERING CONTROLS

All boats have a tendency to wander somewhat at slow speeds. A natural reaction to this effect is to steer the boat back and forth in an attempt to compensate for wandering. Invariably, the compensation will result in over-steer and only worsen the effect. Keep the steering wheel in the center position, the boat will wander back and forth somewhat, but the overall course will be a straight one.



WARNING



The steering system must be in good operating condition for safe boat operation. Frequent inspection, lubrication, and adjustment by your dealer is recommended.

STOPPING

1. Slowly bring throttle control to the idle position and the shift control to the NEUTRAL position. Bring the trim tabs to the UP position and the outdrives to the IN position accordingly. If the boat has been driven for a long period of time at high speed, allow the engine a 2-3 minute cool-down period at low idle.
2. Turn the ignition key to the OFF position.
3. If any problems were encountered during the outing, have the boat inspected by your dealer and request any necessary repairs before the next outing.




CAUTION


Do not use the engine stop switch for normal shutdown. Doing so may impair your ability to re-start the engine quickly or may create a hazardous swamping condition.

End of Day Shutdown

- To prevent marine growth from accumulating on the hydraulic cylinder shafts, make sure trim tabs are UP and outdrives are in the full IN position.
- Lock ignition key switch and remove ignition keys.
- Stow and secure all equipment.
- Pump bilges dry with manual switch. Leave on AUTO when finished.
- Close all inlet seacocks and fuel valves.
- Use fresh water to flush head and engines.
- Inspect boat for damage.
- Clean any spills, stains, or moisture from boat. Inspect and clean sea strainers.
- Turn battery select switches to OFF.

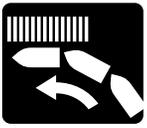

OPERATION

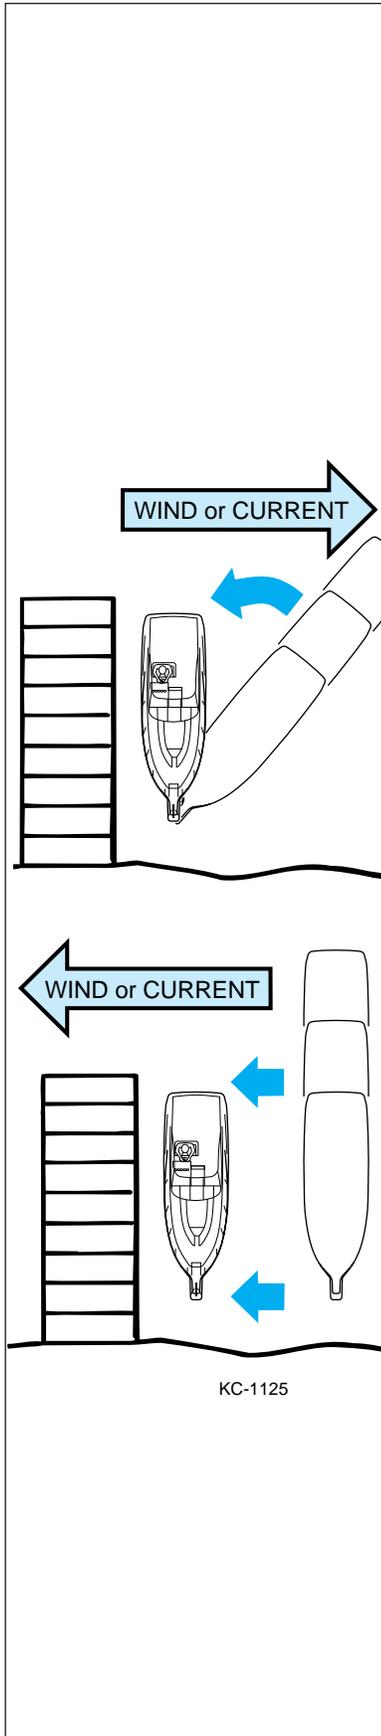

- Turn off breaker on electrical panel except for the bilge pumps.
- Remove any food, garbage, and wet gear from boat.
- Secure lockers, hatches, and canvas as equipped.
- If keeping boat in water, hook up shore power cord, make sure battery charger light is ON, and check mooring lines.

DOCKING

Practice docking before attempting it for the first time. Use a float, like a plastic milk jug with a line and small weight, as your docking target.



WARNING



Never use your hand, arm or other part of your body to attempt to keep the boat from hitting the dock. The boat could push against the dock, causing an injury.

Follow these guidelines when docking:

- Approach docks with the port side of the boat if possible.
- Come to a stop a short distance from the dock, then proceed slowly.
- Have fenders, mooring lines, and crew ready.
- Observe how the wind and current are moving your boat. Approach the dock with the boat pointed into the wind, if possible. If the wind or current is pushing you away from the dock, use a sharper angle of approach. If you must approach the dock downwind or down current, use a slow speed and shallow angle. Be ready to reverse to stop and maintain position.
- If there is no wind or current, approach the dock at a 10 to 20 degree angle.
- If possible, throw a line to a person on the dock and have that person secure a bow line.
- With the bow secure, swing the stern in with the engine, or pull it in with a boat hook.

Before tying-up the boat, be sure to use enough fenders to protect the boat from damage. If possible, tie-up with the bow towards the waves with a good quality double-braided nylon line. Tie-up only to the lifting or tie-down eyes; never use the handrails or windshield frames. If the boat is to be moored for a long period of time, use chafing protectors on lines to protect the gelcoat finish. Leave a little slack in the lines to allow for some wave movement or tidal action if applicable.

Follow these guidelines when departing:

- Very slowly shift into forward at idle speed.
- When the stern moves away from the dock, turn the engine away from the dock.
- Cast off bow line and back away.

If the wind or current is pushing away from the dock, cast off all lines and allow to drift until you are clear.




BOAT TRIM


The performance of your boat depends on load weight and distribution. Distribute weight evenly, from bow to stern, and also from port to starboard. After loading, the boat's trim can be adjusted by changing the engine trim angle and trim tabs.

DRIVE TRIM ANGLE

Engine trim angle is the angular relationship between the lower drive unit and the transom of the boat. Boat trim while underway greatly affects boat performance and efficiency. For best results, the boat should be on plane and trimmed to reduce the wetted surface. With less boat in the water, both speed and fuel economy increases. Engines with manual trim must be adjusted for best overall operation for the load and conditions. Engines with power trim should be adjusted continuously for best results.

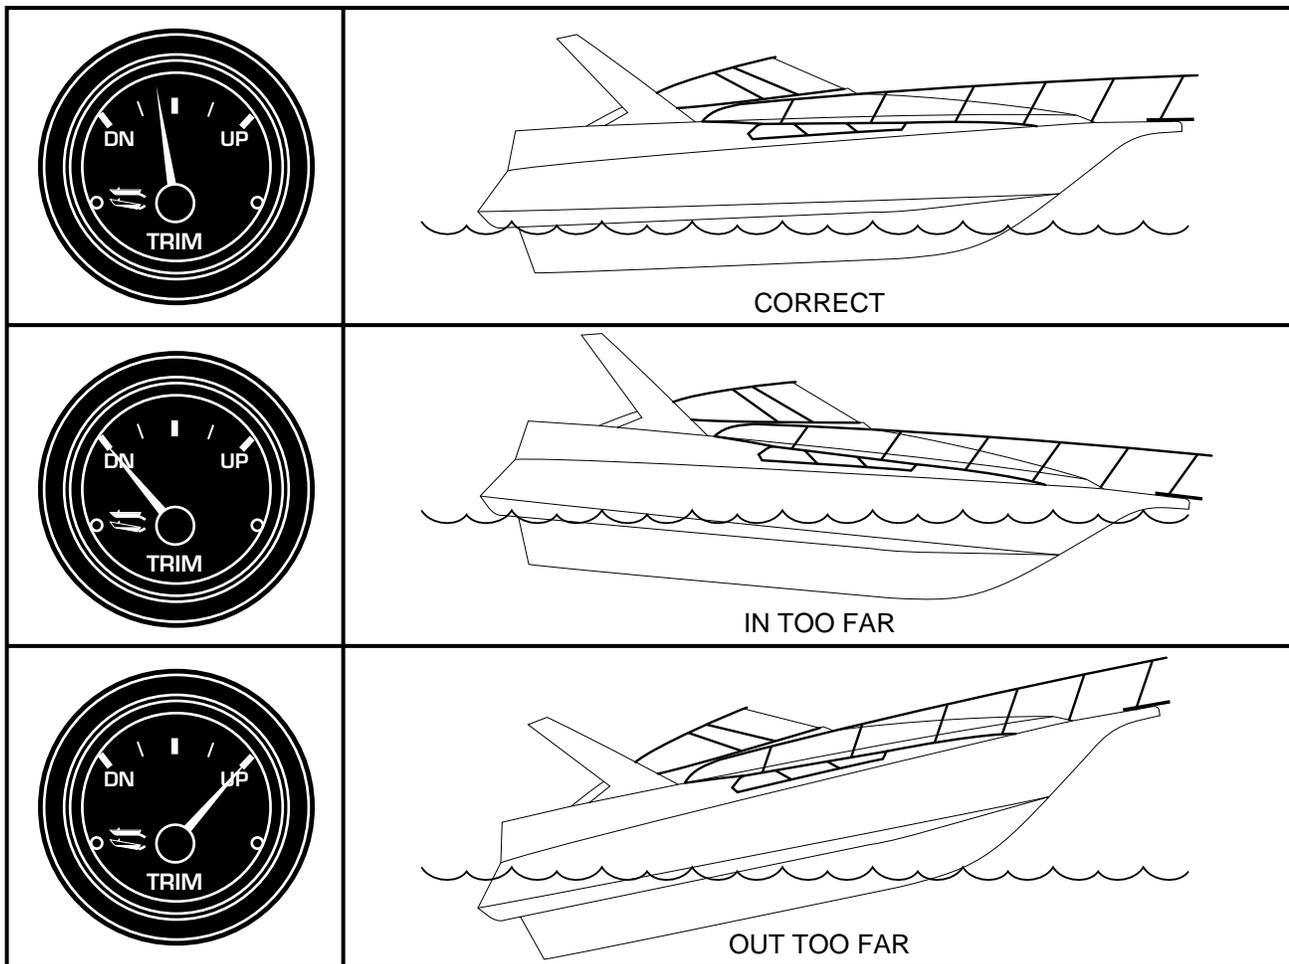

KC-1157A

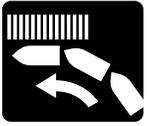

OPERATION

If the engine is trimmed in too far (closer to the boat bottom), speed drops, fuel economy decreases, and the boat may not handle correctly. However, it does provide better acceleration from a stand still; and because it forces the bow down, visibility is improved. If the engine is trimmed out too far (away from the boat bottom), steering torque may increase, the boat may be difficult to get on a plane, and may bounce.

! WARNING !


Do not trim the engine out too far or the boat may begin to “porpoise” (bounce up and down). Porpoising reduces control and visibility.

To use power trim effectively, always start with the engine trimmed in. As the boat planes, increase the angle out. Experience is the best teacher for understanding proper trim.

Trim Tabs

Water is deflected and redirected as the trim tabs are raised and lowered. This change in water flow creates upward pressure under the tabs, and raises the stern. When the stern raises, the bow is lowered. Likewise, lowering the port tab will cause the port stern to raise, making the starboard bow lower.


Using trim tabs in conjunction with the power trim will compensate for uneven weight distribution, listing, water conditions, and other factors that cause inefficient operation. Remember that trim tabs are trimming the hull while power trim is trimming the engine drive.

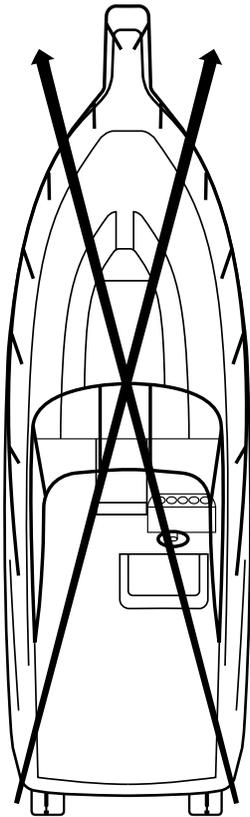

- PORT TAB LOWERS**
- PORT STERN RISES
 - STARBOARD BOW LOWERS

- STARBOARD TAB LOWERS**
- STARBOARD STERN RISES
 - PORT BOW LOWERS


KC-1155

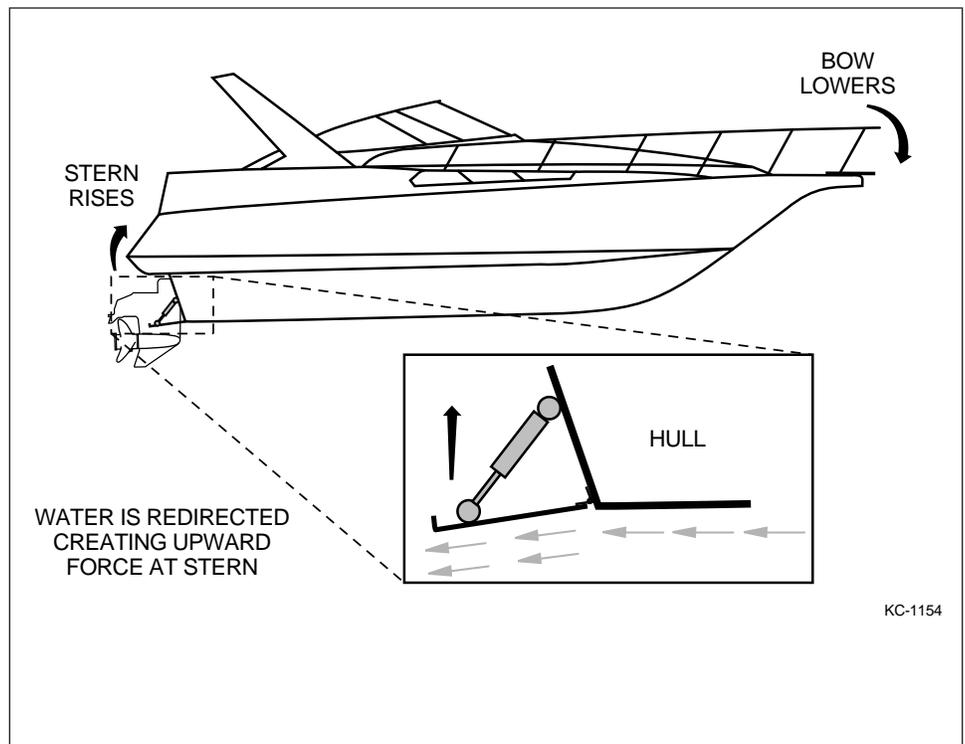



To use the trim tabs with the power trim

1. Adjust the trim tabs to achieve a planing attitude.
2. Use the power trim to position the prop path parallel to the water flow.

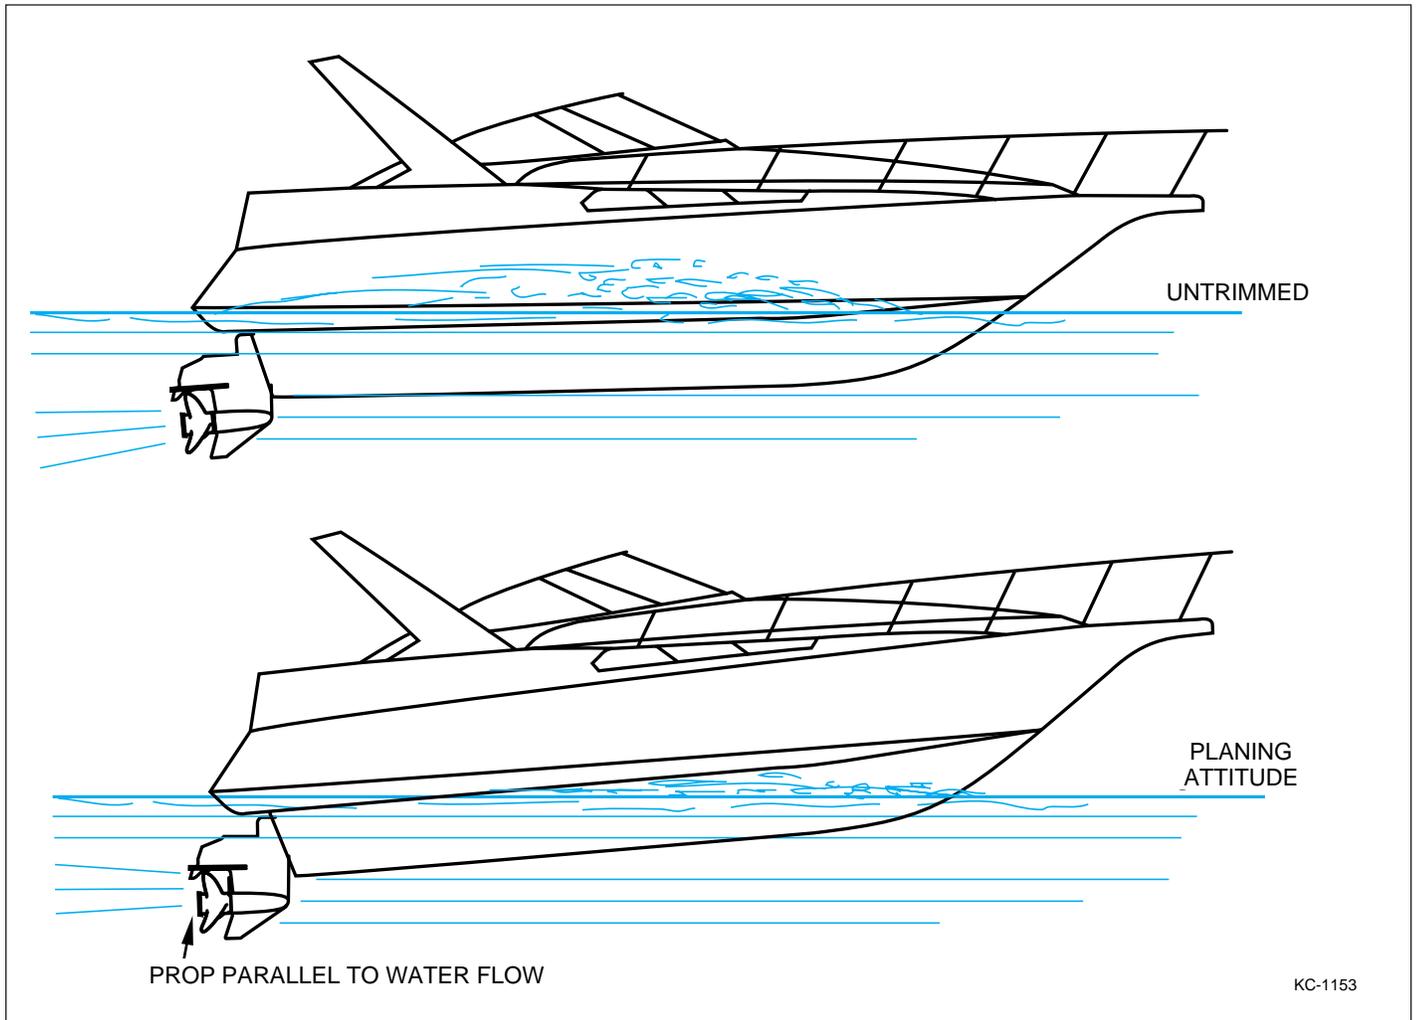


3. Readjust the trim tabs to fine tune attitude.
4. Do not overtrim because bow will dig in, causing the boat to veer.
5. To avoid listing, do not move one tab significantly further down than the other while underway.



WARNING




Improper use of trim tabs at high speeds can cause an accident or injury.

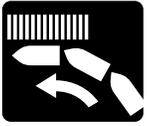

OPERATION



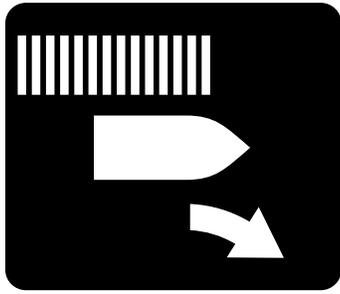

GETTING UNDERWAY

5

There are many things to consider to make your boating trip safe and enjoyable. This section includes a safety checklist, boarding guidelines, boat loading, and capacity information.

The contents of this section should be read and understood before casting off. Remember, if you have a problem during your cruise, you can't get out and fix it, or walk to safety or for help.

You are responsible for the safety of all passengers, the boat, and any damage the boat or its wake may cause. Always keep passengers from blocking your view so that you do not run into other boats, swimmers, water skiers, personal water vehicles, or aids to navigation.

SAFETY CHECKLIST

The following checks are essential to safe boating and must be performed before starting the engine. Get in the habit of performing these checks in the same order each time so that it becomes routine.



WARNING



DO NOT launch the boat if any problem is found during the Safety Check. A problem could lead to an accident during the outing causing severe injury or death. Have any problem attended to immediately; see your dealer.

Pre-Operation

- Check the weather report, wind and water conditions.
- Check that the required safety equipment is on board.
- Check that the fire extinguisher is fully charged.
- Check that bilge drain plug is installed properly.
- Check that no fuel, oil or water is leaking or has leaked into the bilge compartment.
- Check all hoses and connections for leakage and damage.
- Check engine and stern drive oil levels.
- Check stern drive pump and trim tab pump fluid levels.

✓ WEATHER

✓ EQUIPMENT

✓ FIRE
EXTINGUISHER


✓ DRAIN PLUG

✓ BILGE

✓ HOSES

✓ OIL LEVELS

✓ FLUID LEVELS

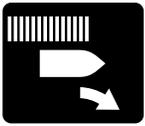

GETTING UNDERWAY

✓ STEERING

✓ STRAINERS

✓ EXHAUST

✓ PROPELLER

✓ WATER INTAKE

✓ BATTERY

✓ CIRCUITS

✓ CONTROLS

✓ STEERING

✓ MAINTENANCE

✓ GAUGES

✓ FUEL

- Check hydraulic steering fluid level.
- Make sure water strainer for raw water intake is clean.
- Check that raw water inlet seacocks are open.
- Inspect exhaust connections for water leaks or gas stains. Tighten loose connections.
- Check the propeller for damage.
- Check the engine cooling water intake pick-up for blockage.
- Check that battery terminals are clean and tight.
- Check electrical circuits (lights, pumps, horn, etc.) for proper operation.
- Check that throttle/shift control is in neutral.
- Check that the steering system operates properly.
- Check that all required maintenance has been performed.

During Operation

- Check gauges frequently for signs of abnormal behavior.
- Check that controls operate smoothly.
- Check for excessive vibration.

After Operation

- Fill fuel tank to prevent moisture due to condensation.
- Check for fuel, oil and water leakage.
- Check the propeller for damage.
- Complete END OF DAY SHUTDOWN checks found in the Operation section of this manual.


SAFETY EQUIPMENT

Federal and local laws require certain safety equipment to be on board at all times. In addition, responsible boaters carry other equipment in case of emergency. Check with local boating authorities for any additional requirements over and above federal requirements.

BOARDING

When boarding the boat, always step in. Do not jump. Avoid stepping on potentially slippery surfaces. Board one person at a time.

Do not board the boat while carrying gear. Set gear on the dock, board the boat and then pick-up the gear.

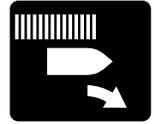

Boat Loading

The performance of your boat is dependent on load weight and distribution. Passengers should board one at a time and should distribute themselves to maintain trim. Remember to distribute weight from right to left, and also from front to back.




WARNING




All passengers should be carefully seated and not be riding on the bow, bow pulpit, deck, gunwale, or rear sun deck while underway.

- Do not allow your passengers to ride with their feet dangling over the side, floating debris can cause serious injury.
- Avoid excess weight in the bow or stern.
- Securely stow all extra gear in stowage areas to prevent load shifting. Do not stow gear on top of safety equipment; safety equipment must be quickly accessible.
- In adverse weather, reduce the load in the boat. People/load capacity ratings are based upon normal boating conditions.
- Do not use the engine unit as a boarding ramp. Make sure engine is off when swimmers, divers, and skiers are boarding to prevent injury.

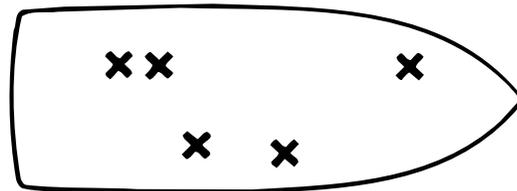


Proper Weight Distribution

KC-1310

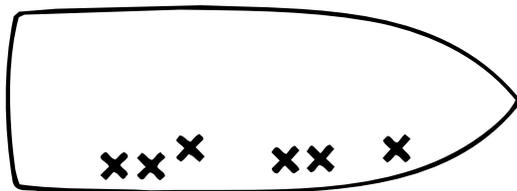

Improper (Starboard Heavy)

KC-1340

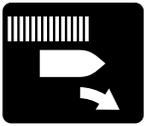

GETTING UNDERWAY

Capacity

Boats up to 29' in the National Marine Manufacturers Association (NMMA) program have a maximum rated load capacity, which is stated on the certification plate (if equipped). The person/load capacity is determined by various USCG formulas. Actual capacity is determined by the availability of proper seating on the boat. Acceptable seating determines the number of passengers, not the overall load capacity.

U.S. COAST GUARD MAXIMUM CAPACITIES	
XX PERSONS OR XXXX LBS. XXXX POUNDS, PERSONS, GEAR	
THIS BOAT COMPLIES WITH U.S. COAST GUARD SAFETY STANDARDS IN EFFECT ON THE DATE OF CERTIFICATION	
MANUFACTURER:	
MODEL:	
DESIGN COMPLIANCE WITH BIA REQUIREMENTS BELOW IS VERIFIED. MFGR. RESPONSIBLE FOR PRODUCTION CONTROL.	
LOAD CAPACITY • COMPARTMENT VENTILATION STEERING, FUEL AND ELECTRICAL SYSTEMS INTERNATIONAL LIGHTS • MANEUVERABILITY	
	NATIONAL MARINE MANUFACTURERS ASSN.

KC-1445




WARNING



Do not exceed the USCG certified maximum capacities under any circumstances. Overloading will reduce freeboard and increase the likelihood of swamping, especially in heavy seas. Overloading causes handling to become sluggish making it hard to react quickly.

Overpowering outboard powered craft is extremely dangerous. Overpowering will make the boat unstable and could cause loss of helm control. Failure to maintain control could result in severe injury or death.

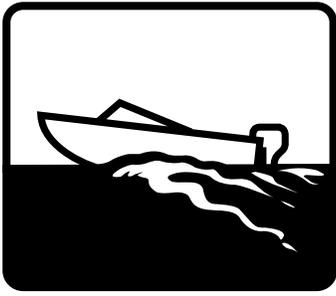

RUNNING

6

We urge you and all others operating the boat to seek certified instruction from the local boating authorities.

This section is designed to present the most basic operational principles. It is NOT intended to cover all conditions encountered during operation. The principles presented in this manual are limited directly to the operation of the boat. The responsibility for the proper application of these principles belongs to you.


MANEUVERING TECHNIQUES

Steering response depends on three factors: engine's position, motion and throttle.

Like an automobile, high speed maneuvering is relatively easy and takes little practice to learn. Slow speed maneuvering, on the other hand, is far more difficult and requires time and practice to master.

When making tight maneuvers, it is important to understand the effects of turning. Since both thrust and steering are at the stern of the boat, the stern will push away from the direction of the turn. The bow follows a smaller turning circle than the stern.


The effects of unequal propeller thrust, wind, and current must also be kept in mind. While wind and current may not always be present, an experienced boater will use them to his advantage. Unequal thrust is an aspect shared by all single engine propeller-driven watercraft. A clockwise rotation propeller tends to cause the boat, steering in the straight ahead position, to drift to starboard when going forward, and to port when going backward. At high speed, this effect is usually unnoticed, but at slow speed; especially during backing, it can be powerful. For this reason, many veteran boaters approach the dock with the port side of the boat toward the dock, if possible.

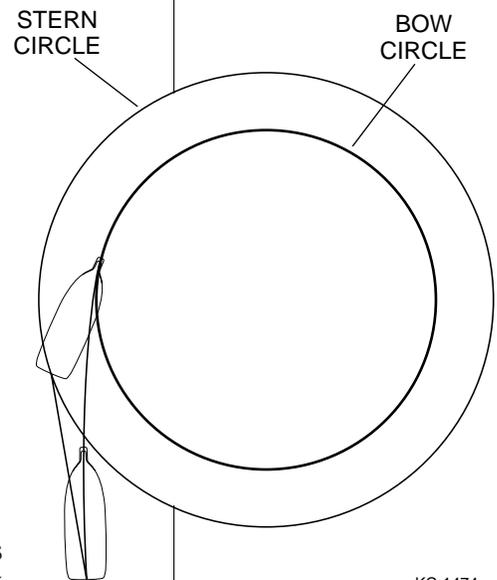

KC-1474



RUNNING

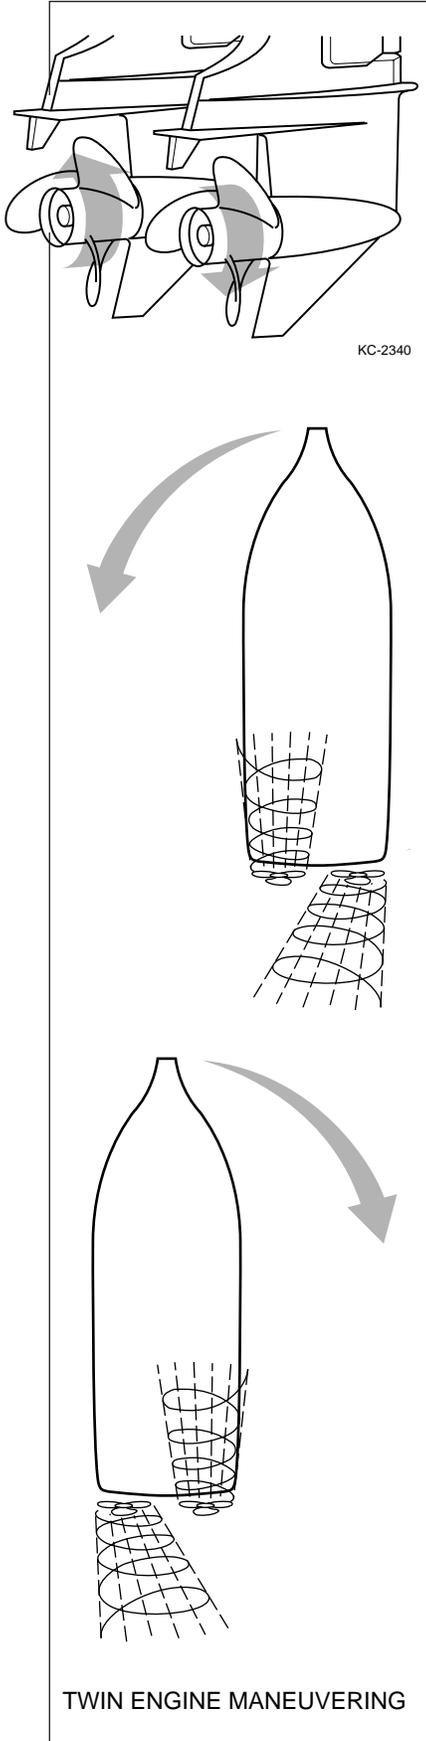


Stopping

Twin-engine craft with counter-rotating engines operate with less propeller torque induced drifting, using the concept of counterrotation. One engine propeller turns clockwise while the other turns counter-clockwise. This helps maintain an even keel by eliminating the tendency of your dual-powered boat to veer.

Stopping (checking headway) is a technique that must be developed. Since a boat has no brakes, reverse thrust is used to slow and stop the boat. The momentum of the boat will vary according to the load as well as the speed. Make it a practice to slow to idle (no-wake) speed before shifting into reverse.

Twin-Engine Maneuvering

One thing to keep in mind when maneuvering with twin-engine powered boats at low speeds, is that turns are made by thrusts of power from the engines and propeller, not by turning the outdrive unit; this means at lower speeds, steering your boat becomes a combination of propeller direction, engine thrusts, and steering wheel maneuvers.

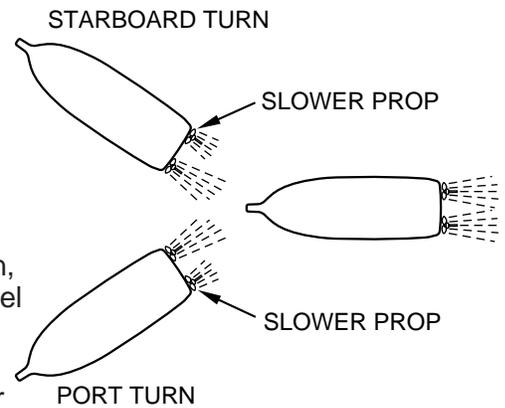

KC-1074

To make sharp and close quarter turns, observe the following:

- Before attempting to make close turns at low speed, bring the throttles to idle so you can shift into reverse without damaging the engine.
- Reverse the direction of the engine on the side you want to turn. For example, if you want to turn starboard, shift the starboard engine into reverse. The forward speed of the port engine, along with the reverse rotation of the starboard engine, will pivot your boat into a starboard turn.
- Practice using the throttles to control the boat. You should try these maneuvers in open water before attempting them near docks or other boats.
- Use quick “bursts” of throttle to control the boat. Keep in mind that once the boat starts to move, momentum will carry through.

It is best to learn maneuvering skills in open water away from traffic. Adequate practice is the only way to develop your boating skills.

SALT WATER

If boat is moored in salt water for long periods, tilt the engine out of the water (except during freezing temperatures). After removing the boat from the water, lower the engine to the run (down) position until the cooling system has drained thoroughly. Hose the entire hull down with fresh water and wipe dry.



Today's engines are built for operation in either fresh or salt water. Fresh water internal flushing is not normally required, however, it may be desirable after use in salt, polluted, or brackish water. Your dealer will assist you in securing the appropriate engine flushing device.

FREEZING TEMPERATURES

When the boat will be operated and left in the water and temperatures drop below freezing, the engine must remain in the tilted down (submerged) position at all times to prevent water in the engine from freezing. When the boat is removed from the water, drain the engine completely.

TOWING PROCEDURE

If seas are rough, it may not be easy to extend the tow line from one boat to another. In these cases, use a light throwing line with a weight on one end and with the heavier towing line secured to it.

Never attempt to tow a much larger or grounded vessel. Because of the tremendous stress caused by towing, use a tow line that is rated at least 4 times the gross weight of the boat being towed. Tow ropes must always be in good condition, free of any cuts or abrasions.

Attach tow line to the bow eye on the disabled boat. Attach the opposite end of the bridle only to the stern eyes of the tow boat. Wrap the bridle with chafing gear where it rubs against the boat or any corners. Leave at least 2 boat lengths between the boats for adequate movement.




DANGER

When towing, use only the bow and stern eyes; never use cleats, handrails, etc. Do not allow anyone to be in line with the tow rope. If the rope should break or pull free, a dangerous recoil could occur which may seriously injure or kill anyone in its path.

Adjust the tow line to match wave action. Keep the boats on the crest or in the trough of the waves at the same time. In protected, calm waters, shorten the line for better handling. Always tow at moderate speed, allowing for adverse wind and wave conditions. Have the operator of the towed boat steer with you if possible.

If you need a tow, or wish to tow another boat, use great care. The boat structure can be damaged by excessive pulling strain. You should always offer help to a boat in trouble. However, towing a cap-sized, grounded, or hull damaged boat is dangerous. Give assistance to the occupants; then call the proper authorities.

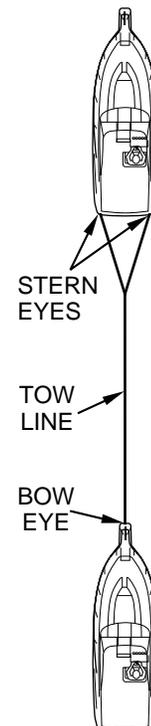


KC-2116




ANCHORS



MUSHROOM

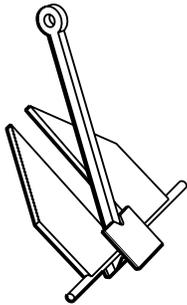

DANFORTH

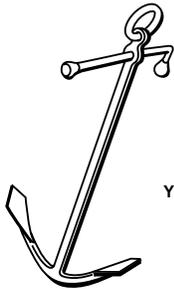

YACHTMAN'S

KC-1570

ANCHORING

Dropping Anchor

There are many types of anchors available on the market. The choice of one anchor over another depends on many factors. An anchor will usually hold best in a mixture of mud and clay or in hard sand. For more information on anchors consult your dealer.



WARNING



Always anchor from the bow; NEVER anchor from the stern. A small amount of current will make the boat unsteady...a strong current can pull a boat, anchored by the stern, under water and keep it there.


When anchoring, it is helpful to keep a few guidelines in mind.

- Make sure the line is tied to the anchor and tie the other end of the line to the forward cleat or bow eye.
- Head the boat into the wind or current over the spot where you want to lower the anchor.
- Stop the boat before lowering the anchor.
- When the anchor hits bottom, slowly back up the boat, keeping tension on the line. Let out an anchor line that is 6 to 7 times the depth of the water. For example, if you are in 10 feet of water, let out 60 to 70 feet of line.
- Secure anchor line to the bow cleat. Pull on line to make sure anchor is holding.
- Occasionally check your position against the shoreline. If the anchor is dragging and you are drifting, reset the anchor.

Weighing (Pulling In) Anchor

Start engine and move forward until anchor line is straight up and down. Pull hard to lift anchor from the bottom material (use wind).

If the anchor is stuck, attach anchor line to the bow cleat so that it is taut. The up and down motion of the bow from wave action may lift the anchor from the bottom. If the anchor remains stuck, let out a few more feet of line and attach it to the bow cleat. Slowly maneuver the boat around the anchor until the anchor pulls loose. Be sure to keep the line tight during this procedure.

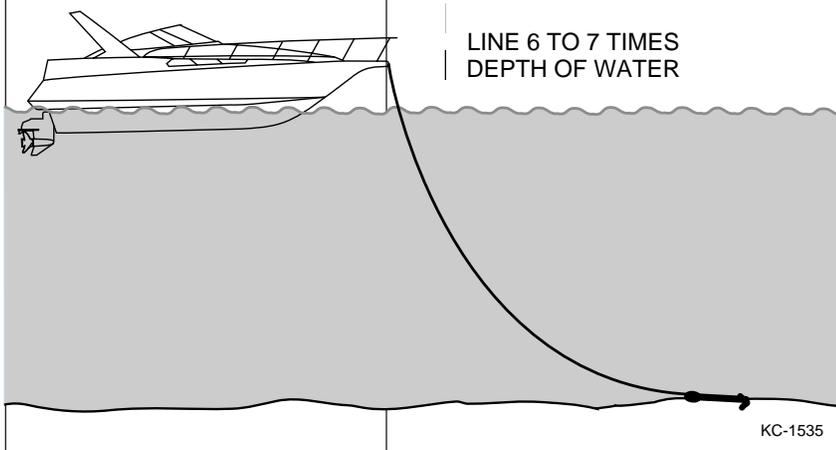



PERFORMANCE BOATING

Some boat models; especially those with high horsepower engines, are capable of impressive performance. Don't be tempted to push your boat to its limits until you are familiar with your boat's operating characteristics. The operator should have at least 10 hours of experience with the boat before any extended full throttle operation.

Operators must get used to the unique handling characteristics of performance operation; practice adjusting the throttle, trim and steering in an open body of water free of traffic. Never operate the boat when traffic is high or when conditions are rough.

Here are some guidelines for performance operation. Read them, practice them, and soon you will be operating your boat to its full capability.

Before Running

- Keep the bottom clean and free of scum, barnacles and other growth. Growth on the hull can slow the boat down considerably.
- Prepare the boat. Be sure all gear is properly stowed and compartments are latched.
- Weight distribution affects performance. Keep weight in the boat low and evenly distributed. Remove unnecessary weight and keep on shore.
- The propellers should be of the proper pitch to turn the recommended RPM rating for the engine and of the proper type for your average load and individual requirements. Your dealer can help you select a performance propeller.

When Underway



WARNING



Keep one hand on the wheel and the other on the throttle at all times. If the boat begins to operate in an unsafe way, pull back on the throttle and trim the engines IN at the same time. Failure to maintain control could result in severe injury or death.

- Raise trim tabs above the boat bottom
- Trim the engines out. Trimming the engine out at speed will cause the boat to rise up. The boat will begin accelerating without adjusting the throttles because less of the boat is dragging in the water. Steering will become easier because the propellers have less torque.



WARNING



Do not trim the engine out too far or the boat may begin to "porpoise" (bounce up and down). Porpoising lowers top speed and fuel efficiency, and reduces control and visibility. Failure to maintain control could result in severe injury or death.



RUNNING

- Watch the tachometer to keep the engines within the full throttle operating range. See the engine operator's manual for the proper tachometer reading at full throttle.

Performance operation on smooth water is very stable, but quick reactions and adjustments are needed to maintain control. Know your limits and stay within them. Always keep one hand on the steering wheel and the other on the throttles; constant adjustments are necessary for rapidly changing conditions. Depending on the speed, keep watch well ahead so that you may have enough time to react.


PROPELLERS

The propeller converts the engine's power into the thrust needed to propel the boat. Care and selection of your propeller is very important to proper boat operation. Propellers are identified by two numbers, such as 13 x 19, and a material identification, such as aluminum or stainless steel. In the number sequence, the first number is the diameter of the propeller and the second is the pitch.

Pitch is the angle of the blades expressed in the theoretical distance a propeller travels in each revolution. In the above example, the pitch is 19, or each revolution of the propeller pushes the boat 19 inches through the water. A 19" pitch is considered "higher" pitched and a 15" propeller is considered "lower" pitched.

Keep these guidelines in mind when selecting a propeller:

- There are many different propeller designs for specific operating characteristics, including the number of blades, relief holes, cupping, etc. Do not attempt to change propellers until after you have a chance to determine your average load and individual requirements. Your dealer is best qualified to help you select a propeller.
- Engine RPM must be within the recommended operating range. Refer to the engine operator's manual.
- Higher propeller pitch reduces: RPM, acceleration, engine noise, and usually improves fuel economy and top speed.
- Lower propeller pitch increases: RPM, acceleration, engine noise, reduces fuel economy and top speed.

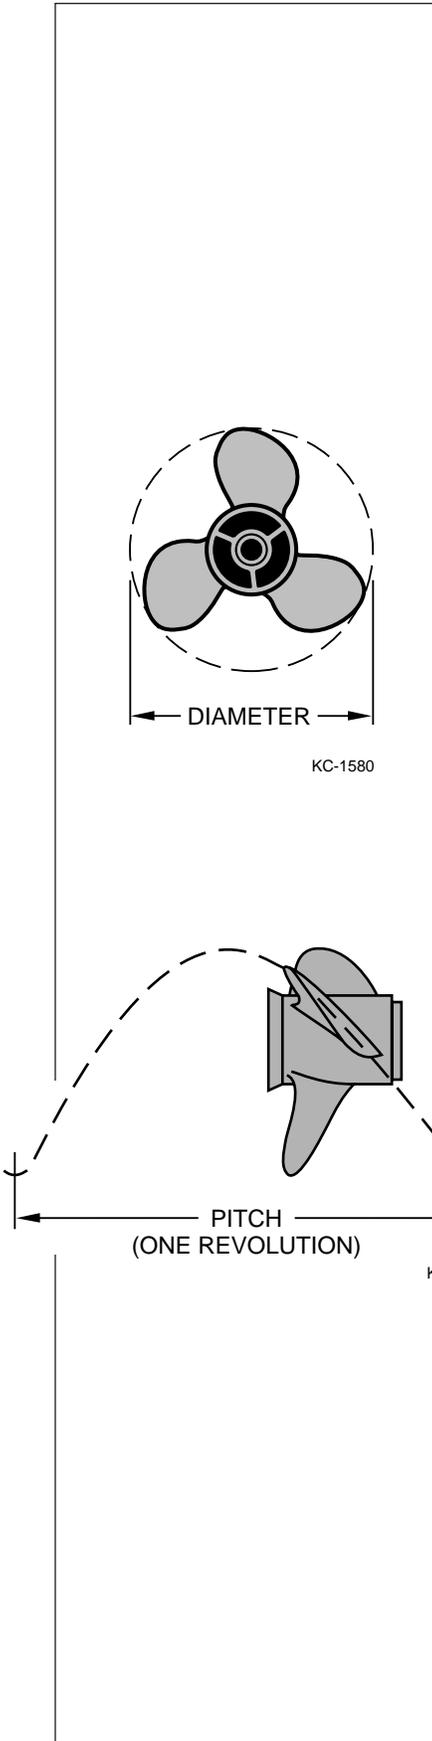

WARNING



Before installing or removing the propeller:

- Put the remote control in the "NEUTRAL" position.
- Put the main switch in the "OFF" position and remove the key.

Failure to observe this warning could result in severe injury.



A smaller pitch propeller should be selected for water skiing or for heavy loads. A smaller pitch propeller will develop more thrust for raising skiers quickly. When a skier has fallen, or a skier is not being towed, it is important that the operator watch the tachometer to make sure engine RPM does not continuously exceed the maximum full throttle RPM range.



WARNING




DO NOT use your hand to hold the propeller when loosening the nut. You could be injured. Put a wood block between the cavitation plate and the propeller blade to prevent the propeller from turning.

Problems associated with propellers include ventilation, cavitation, and blowout. These problems have similar symptoms and are best diagnosed by an expert. If you think you have a propeller related problem, consult your dealer.



RUNNING

A large, empty rectangular box intended for writing or drawing.

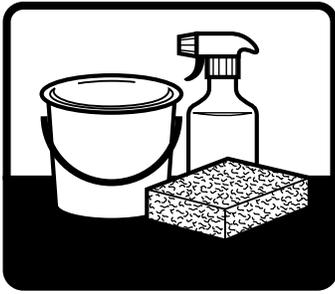

CARE AND MAINTENANCE

7

This section describes how to care and maintain your boat. It includes information about maintaining electrical components, corrosion protection, and general maintenance.

ELECTRICAL

Battery

The boat is equipped with a 12-volt direct current (12 VDC) negative ground electrical system. The positive (red) wire is hot and feeds current from the battery to the electrical systems. The negative (black) wire is ground and completes the circuit back to the battery. Until the engine is running at high idle or faster, all electrical power comes from the main battery. Once the engine is started and running above 1200 rpm, electrical power is then provided by the engine alternator. The alternator provides more power as engine speed is increased. When the engine is operating, the alternator is charging the battery.


Some models are equipped with a battery isolator that will automatically charge an accessory battery (such as a trolling motor battery) when the engine is running. The isolator automatically isolates each battery so that the lower charged battery will be charged first and the full battery cannot discharge to the drained battery. A battery selector switch may also be included for flexibility of use such as selecting either battery for starting, paralleling batteries, etc. Many different battery setups can be found; refer to Fish/Ski Features for more information.




WARNING

Batteries contain sulfuric acid which can cause severe burns. Wear protective clothing to avoid acid contact with skin, eyes, etc. Failure to observe this warning could result in severe injury.

Be sure to turn OFF battery charger and battery switch before servicing batteries. Check the battery frequently for signs of corrosion. If corrosion is evident, clean terminal posts with a baking soda and water solution and a wire brush. Before cleaning, remove the vent caps and seal the vent wells with corks to prevent the solution from getting inside the battery. Also, check the fluid levels in the cells. Usually, a level approximately 1/4 to 1/2 inch above the plates is sufficient. If needed, fill with distilled water; do not overfill! Some batteries are sealed, and cannot be filled.

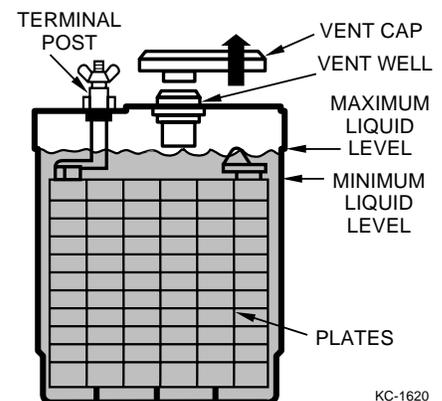

KC-1620

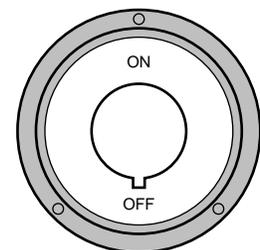

TYPICAL BATTERY SWITCH
KC-0704



CARE AND MAINTENANCE

Batteries are perishable products and will self-discharge. If you operate your boat sparingly, you may want to charge your battery occasionally (if not equipped with system battery charger). To recharge, remove the battery from the boat and remove the battery caps (when applicable). Recharge the battery according to the directions enclosed with your battery charger. When installing the battery in the boat, make sure the battery is secured in the battery box.



WARNING



Batteries produce explosive hydrogen gas. Never attempt starting your engine with jumper cables under any circumstances. Keep all sparks, flames and smoking materials away from batteries. Risk of spark at the battery post igniting gasoline or hydrogen fumes is too great. Always wear eye protection when near batteries and have adequate ventilation when charging. An explosion can cause blindness or other serious injuries.

Gelled Electrolyte Batteries

Batteries using gelled electrolyte (Gel-Cell) technology are being used more frequently in the marine industry. Gelled electrolyte batteries offer reliable, maintenance free power. Gell-Cells are pressurized during manufacture and should never be opened. Gell-Cell batteries are designed for long life and have up to three times the cycle life of a traditional wet cell battery. Because of their low self-discharge, gelled electrolyte batteries are ready for operation over extended storage periods up to two years. Improper charging of a gelled electrolyte battery will cause damage and shorten its life. Follow the charging directions included with the battery and use only a good constant potential, voltage-regulated, charger.

Circuit Breakers and Fuses


All electrical circuits are protected from overload by the use of fuses or circuit breakers. In the event of an overload or short circuit, the fuse will blow or circuit breaker will trip. If a circuit continuously overloads under normal operating conditions, have your boat inspected by the dealer immediately.




WARNING



Never exceed the recommended fuse sizes or bypass the fuse safeguard. Always install the proper (type and rating) fuses whenever replacing or changing fuses. Continuous fuse/breaker failures indicate a severe problem that requires immediate attention. Failure to install correct fuse may result in damage to the electrical system or severe personal injury.

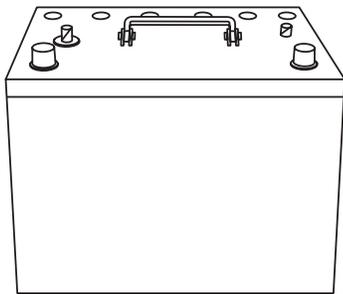

KC-1620A

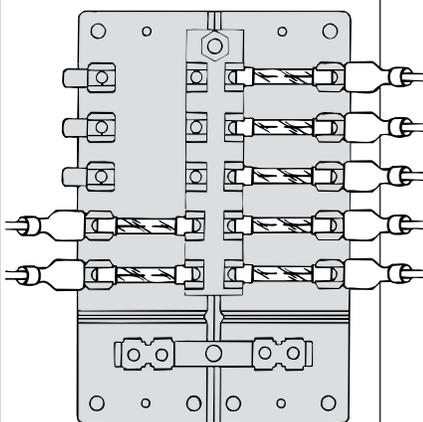

TYPICAL FUSE BLOCK

KC-1630

Some boat models have each individual circuit protected with a circuit breaker located next to the switch. To reset a tripped circuit breaker, switch OFF the circuit, wait about one minute for the breaker to cool, push the breaker button fully, and switch ON the circuit.

CARE AND MAINTENANCE



CAUTION

The electrical system is designed to protect you from short circuits and overload. Any modifications to the system, such as adding electrical accessories, should be done by a qualified technician.

Some installed accessories, such as the stereo, have an additional fuse located in the positive lead of the stereo. Some in-line fuse holders can be found near the battery.

FUEL SYSTEM

Fuel vents are normally located in the hull or transom below and in the same general area as the fuel fills. Check to see that the fuel fill and vent lines are free of obstructions and kinks. Be sure to check fuel filter periodically and clean as needed.

Fuel lines, vent hoses, and drain hoses should be checked frequently for leaks. Some models are equipped with removable inspection plates for fuel system component inspection. If a leak occurs around the fitting, then tightening of the hose clamps may be all that is necessary. However, if the leak continues, replace the hose immediately to prevent a build-up of fluids or gases. Surface cracking on the hose indicates wear, and replacement is recommended. Use fuel system parts certified for marine use only; do not substitute automotive parts in marine application.

STEERING SYSTEM

The steering system is the primary link for engine control and must be inspected and maintained regularly. The hardware at both the helm and engine end of the steering cable must be checked frequently for tightness. Refer to the engine operator's manual for the appropriate torques.


The steering bar must be lubricated monthly to ensure smooth operation. Turn the steering wheel to a full starboard turn to expose the bar. Use a high quality waterproof marine grease and fully coat the bar. Apply 2 - 4 shots of grease to fittings, if equipped. Turn the steering wheel back and forth to work the grease in.

Hydraulic and power-assisted systems must also be inspected. Make sure hydraulic hoses are tight and leak-free. Cylinder seals should be checked for dampness indicating leakage. Check the fluid reservoir monthly and top-off if necessary. Consult the steering system manufacturer's manual for more information.

CORROSION PROTECTION

Galvanic Corrosion

Galvanic corrosion (electrolysis), to the boater, is the break-up of metals due to the effects of electrolytic action. When two dissimilar metals are immersed in a conductive fluid (salt water), an electric current is produced, much like a battery. As the current flows, it takes with it tiny bits of the softer metal. If not stopped, a great deal of damage could occur.

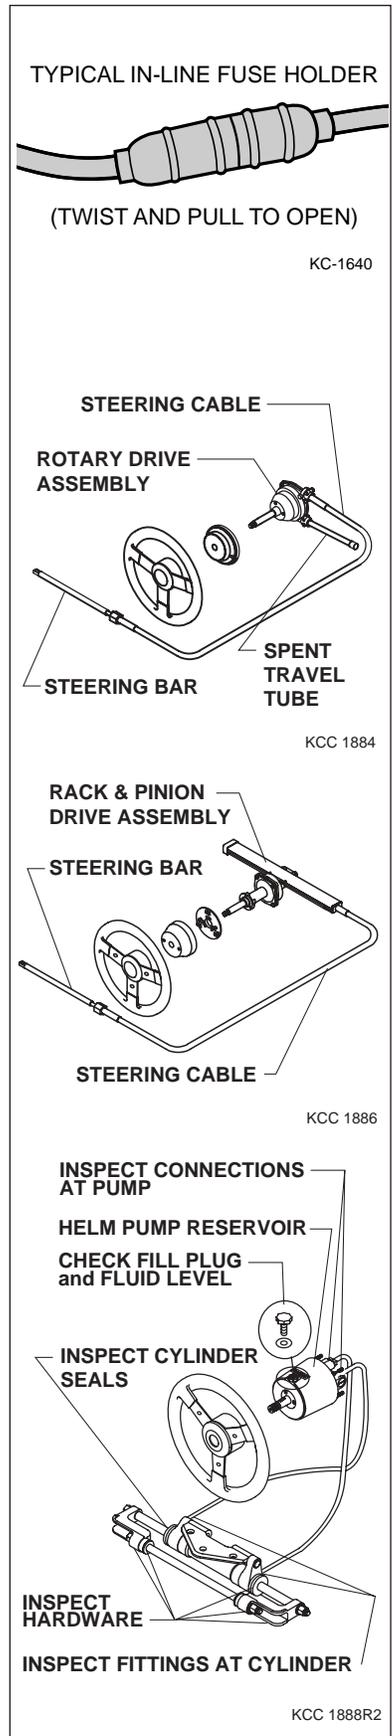



CARE AND MAINTENANCE

If you operate in salt, polluted, or brackish waters, your boat should be equipped with a transom mounted zinc anode to prevent damage to those metal parts coming in contact with the water. The zinc is, by design, self-sacrificing. It is slowly eroded away by electrolytic action and requires periodic inspection for deterioration. If the zinc shows extreme erosion, it must be replaced to continue protection, or damage to other metal parts may result.

Most engines are equipped with one or more zinc anodes which must also be inspected regularly for deterioration. Some boat models may be equipped with an electronic cathode system. This system emits a low current electrical charge into the water close to the metal components. This charge cancels the effect of electrolysis.



CAUTION

Never paint or coat zinc anodes or cathodes with any substance. Once covered, they do not provide protection from galvanic corrosion. Replace anodes if they have deteriorated 50% or more.

Salt Water Corrosion

The entire boat should be rinsed with fresh water and washed immediately after use in salt water. If the boat is used primarily in salt water, wax the hull monthly and apply corrosion inhibitor to all hardware. See your dealer for products suitable for the marine salt water environment. Fresh water internal flushing is recommended when used in salt, polluted, or brackish waters. Flush the entire engine cooling system with fresh water for at least 5 minutes after use in these waters. See your dealer for appropriate flushing devices.

GENERAL MAINTENANCE

Marine Growth

If accelerated marine growth is a problem in your area, an anti-fouling bottom paint may be necessary to slow growth and prevent gelcoat damage. Before selecting a bottom paint, talk with other boaters and your dealer to determine which product works best in your area. Many local variables can affect the selection of paint. Be sure to follow the paint manufacturer's directions exactly.

Cleaning

Periodic cleaning is the best way to keep your boat looking new. Regular washing and waxing keep dirt and scum from building up and deteriorating the finish. Keeping your boat in "show room" condition means greater personal satisfaction and higher resale value. Special cleaning products are available from your dealer to remove mildew.

CARE AND MAINTENANCE



Hull

Routine, periodic maintenance is the only practical way to keep the surface of your boat looking shiny and new. Boats left outdoors will gradually deteriorate from exposure to sunlight, water, dust and chemicals in the air. Outdoor exposure may cause your boat's surface to show a variety of changes, including:

- Chalking (fine, powdery whiteness on the surface)
- Fading (gradual loss of color)
- Yellowing
- Loss of gloss

Darker colors tend to exhibit these changes more rapidly than light colors because they absorb more of the sun's rays (ultraviolet and infrared).

Keep your boat covered when not in use. Use heavy duck or canvas (tarpaulin). **DO NOT** use sheet-plastic or other nonporous materials which can trap moisture between the cover and the boat's surface.

When washing the boat, be sure to use a mild detergent and warm water solution. **DO NOT** use abrasive cleaners, solvents, ammonia or chlorine as these will damage the gelcoat surface. Under extreme conditions, special cleaners may be used to remove marine growth, such as scum or algae, from the hull; see your dealer.

Waxing the entire gelcoat surface at least twice a season is recommended for all climates. Use of a specially formulated marine gelcoat wax will prevent color fade and soil and scum adhesion. If the gelcoat has chalked or faded from lack of proper maintenance, buffing may be necessary to bring back the shiny appearance. Hand buffing with #7 rubbing compound or power buffing with glazing compound #1 will quickly restore the surface.

Bottom Maintenance

The bottom of your boat must be kept clean! Any build-up of marine life from water will create drag and affect the boat's performance and efficiency. Never use wire brushes or scouring pads on the bottom of your boat, as this can cause small scratches that actually trap dirt.

Upholstery

Regular washing with mild detergent and warm water or automotive vinyl cleaners is sufficient to keep the cushions, canopy top, and vinyl coverings in good condition. Keep the cushions from becoming soaked and dry off thoroughly after washing to prevent mildew accumulation after the boat is covered. Prop the cushions up in the boat when covered to allow air circulation and spray with mildew repellent. Lubricate canopy top snaps with petroleum jelly.



CARE AND MAINTENANCE



CAUTION

Certain automotive, household and industrial cleaners can cause further damage and discoloration. Solvents and dry cleaning fluids, or products that contain dyes such as waxes, should be used with caution. Whenever cleaning stubborn stains, be sure to test the treatment in an unseen area first. The following stain treatments should be used with discretion. Between steps, be sure to rinse thoroughly with plenty of clean water and allow to dry.

Stain	Steps		
	1	2	3
Ballpoint Ink*	A	B	E
Chewing Gum	D	A	B
Coffee, Tea or Chocolate	B		
Crayon	D	B	
Eyeshadow	B		
Grease	D	B	E
Ketchup	A	B	
Latex Paint	A	B	E
Lipstick	A	B	
Mildew or Wet Leaves*	C	A	B
Motor Oil	B		
Paint, Oil Base (Dried)	D	A	B
Paint, Oil Base (Fresh)	D	B	E
Permanent Marker*	B	C	E
Shoe Polish*	D	B	E
Soil	A	B	
Spray Paint	B	E	
Suntan Lotion	A	B	E
Tar/Asphalt	D	A	B
Yellow Mustard	A	B	C

*These products contain certain dyes that stain permanently.

Treatment

- A. Medium soft brush-warm soapy water.
- B. Household spray cleaner (Fantastic).
- C. One (1) tablespoon bleach to one (1) quart water.
- D. Wipe or scrape off excess. (Chill gum with ice.)
- E. Follow instructions of staining agent manufacturer.

Carpet

Occasional washing with mild detergent and warm water or household carpet cleaners will keep the carpet clean. Thoroughly hose the detergent out of the carpet and into the bilge. This is usually the best time to clean the bilge. Let the carpet dry in the sun to prevent any mildew or odor caused by moisture.

CARE AND MAINTENANCE



Windshield

A clean windshield is important. The windshield requires special cleaning to prevent scratches to the surface. Use a mild soap solution and damp cloth only. Harsh detergents, solvents, chemicals or dry cloths will scratch the surface.

Bilge

Your bilge accumulates oil and greasy dirt over a period of time and should be cleaned out. Usually, ordinary soap and water does not remove the accumulation, and something stronger is necessary. Consult your dealer for recommendations on special bilge cleaning products.

Teak

Teak does not require refinishing, but should be cleaned occasionally with a teak cleaner, which can usually be found at a marine supply store. The best way to keep teak in top condition is to oil it regularly with teak oil, at least twice a year. Follow manufacturer's instructions and warnings carefully as some cleaners or oils may damage gelcoat, vinyl or aluminum. Avoid rust-producing steel wool pads when cleaning. Scotchbrite or similar nonmetallic pads are recommended.



CAUTION

Teak sealers can be harmful to other materials. Make sure you thoroughly remove any of this oil that has come in contact with the vinyls, gelcoats, etc. Teak should not be varnished as the natural oils will cause poor adhesion.

Interior Wood

Most interior wood is teak. If a scratch develops, it can be repaired easily using a fine grade sandpaper (400 to 1000 grit). Use a tack cloth to clean sanding residue, and then apply a small amount of lemon oil. Let dry and wipe with a soft cloth.

Plexiglass

Plexiglass is susceptible to scratching. When cleaning, always apply clean, lukewarm water and wipe with a soft, lint-free cloth. **DO NOT** use the following:

- Abrasive cleaners
- Solvents
- Glass cleaning solutions
- Acetone, benzene, gasoline
- Dry cleaning fluids
- Alcohol or carbon tetrachloride



CARE AND MAINTENANCE

Window Channels

A nylon pile is used in sliding window channels. NEVER use any products that contain bleaching solutions in this area. Use only mild detergent and water solution for cleaning. If windows stick, spray the channels with silicone spray while working the window back and forth.

Interior Fabric

Clean interior fabrics with dry cleaning fluid approved for use with soft fabrics. Follow the label instructions carefully. Be sure to test cleaners in an unseen area first.



CAUTION

**Dry cleaners require adequate ventilation during use.
Open all hatches and windows before application.**

Use a soft cleanser to clean marks or stains on wallpaper; they will usually come off with soap and water. Lightly rub the mark or stain with a sponge or soft cloth and dry with a clean cloth.

Canvas

In most cases, boat canvas is subjected to more abuse than any other item on the boat. Canvas must be regularly maintained for long life and top performance.

Moisture, dirt and chemicals from industrial fallout, heat, ultraviolet rays and salt water can all contribute to the deterioration of canvas. These elements can cause serious damage if left unchecked. The following guidelines should help keep your canvas in good condition for years to come.

- The convertible top is not designed to withstand long periods of time exposed to the elements as a protective cover at dock side or when your boat is in storage. A full, properly fitted, light colored mooring cover should be used for these purposes.
- If canvas gets wet during use, remove side curtains and open windshield so seams can dry out. The air circulation will allow all canvas to dry and prevent the growth of mildew. **Never store folded or rolled up damp canvas.**
- Occasionally set up all canvas and curtains and hose down with fresh water to remove accumulated soot and dirt. Sweep or brush the underside of the canvas to prevent the accumulation of dirt and mildew.
- Wet canvas must be allowed to dry thoroughly before storage. DO NOT allow canvas to dry loose since shrinkage can occur. Erect all canvas fully on the boat when drying.
- Do not allow the canvas to be exposed to direct sunlight for long periods of time.
- Use care when handling clear vinyl curtains and windows to prevent scratching.

CARE AND MAINTENANCE




- Do not use cleaners on clear vinyl curtains and windows. Clean with plenty of clean water and a soft, clean cloth.
- Do not fold canvas parts. Loosely roll canvas to prevent damage.
- Do not store canvas in poly bags. Canvas should be kept in a well ventilated compartment.
- The outer canvas surfaces can be cleaned with a soft scrub brush and either automotive convertible top cleaners or household cleaners suitable for use on vinyl surfaces. The underside of the canvas may be periodically sprayed with a spray disinfectant to prevent the growth of mildew.
- Do not store or dock your boat under trees. Tree sap is very corrosive to canvas and can also be harmful to gelcoat and vinyl interiors.
- Adjust top bows to eliminate pockets in which rain water can accumulate. The weight of this accumulated water can collapse the top or bag the canvas.
- Snaps and zippers should be regularly lubricated. Vaseline, silicone spray, or paraffin are some of the lubricants that are effective. **Zippers should never be forced.**
- Never trailer your boat with the convertible top in the mounted position. All canvas should be dismantled, rolled, and securely stored while trailering your boat to prevent wind damage.

Stainless Steel and Chrome

Stainless steel and chrome plated parts are not totally resistant to corrosion. Occasional cleaning and polishing with a marine chrome and stainless polish will maintain and extend the useful life. In salt water areas, rinse all hardware with fresh water and apply a light coating of corrosion inhibitor oil to enhance appearance. Check hardware tightness at least once a season.

Bilge Pump(s)

Periodically check the bilge pump(s) inlet screens for debris. Foreign materials can clog the screen or become lodged in the bilge pump impeller, which can cause the pump to malfunction. Inspect all clamps and hoses for tightness on a regular basis.

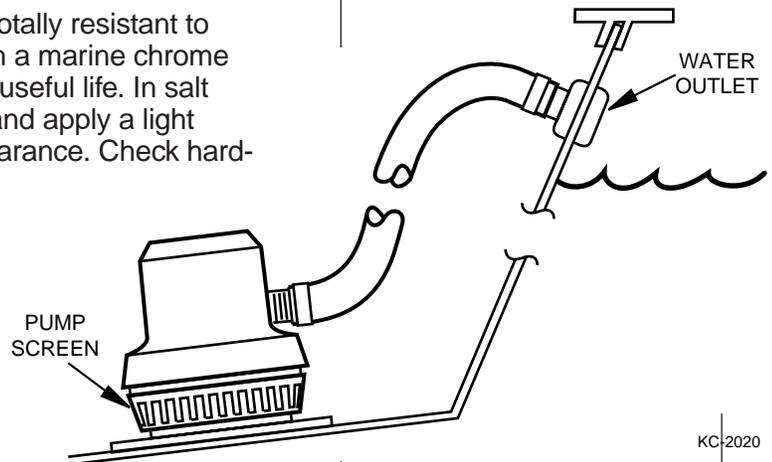

KC-2020

Toilet

Basic maintenance on the toilet involves the following:

- Use a nonabrasive cleaner for keeping the bowl clean.
- A light coating of a general purpose marine lubricant on the pump rods and slides will reduce friction of moving parts.
- Use recommended deodorant and lubricant for the internal parts of the head.



CARE AND MAINTENANCE



Detectors

The gas vapor detector and Carbon Monoxide (CO) detector require little maintenance. Consult the owner's manual for periodic testing procedures.


Trim Tabs

Inspect the trim tab pump periodically for fluid level. Fill with recommended fluid until full (if needed). Also inspect trim tabs for loose fasteners, leaking cylinders, and harness connections.

Alcohol Stoves

Carefully read and follow manufacturer's operating instructions supplied with your stove, and observe the following:

- Use only denatured alcohol labeled specifically for marine use.
- Do not operate the stove while underway.
- Do not fill stove near an open flame or hot object.
- All alcohol spilled should be wiped up prior to lighting the stove.

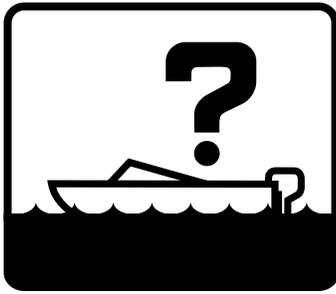

TROUBLE-SHOOTING

8

The following chart will assist you in finding and correcting minor mechanical and electrical problems. If an engine problem is indicated, consult your engine owner's manual.

Some problems may require specialized skill and tools to correct them; see your dealer.


TROUBLE CHECK CHART

Symptom	Possible Cause	Remedy
Engine will not crank	<ul style="list-style-type: none"> ● Emergency safety switch not connected ● Throttle/shift control in gear ● Main circuit breaker open ● Battery terminals corroded ● Weak battery ● Battery switch in OFF position ● Faulty ignition switch ● Engine problem 	<ul style="list-style-type: none"> ● Connect Switch ● Place control in neutral ● Reset breakers ● Clean terminals and wiring ● Charge/replace battery ● Place switch ON ● Replace switch ● See your dealer
Engine cranks but will not start	<ul style="list-style-type: none"> ● No fuel in tank ● Fuel filter clogged ● Fuel valves closed ● Contaminated fuel ● Engine problem 	<ul style="list-style-type: none"> ● Fill fuel tank ● Clean/replace filter ● Open fuel valve(s) ● Replace fuel - see your dealer ● See your dealer
Poor boat performance	<ul style="list-style-type: none"> ● Contaminated fuel ● Uneven load distribution ● Engine trim wrong 	<ul style="list-style-type: none"> ● Replace fuel - see your dealer ● Adjust load/trim tabs ● Adjust engine trim



TROUBLESHOOTING

Symptom	Possible Cause	Remedy
Poor boat performance (cont.)	<ul style="list-style-type: none"> ● Improper propeller selection ● Damaged or obstructed propeller ● Excessive water in bilge ● Engine problem 	<ul style="list-style-type: none"> ● Change propeller ● Check/change propeller ● Drain bilge ● See your dealer
Poor gas mileage	<ul style="list-style-type: none"> ● Engine trim wrong ● Marine growth on hull ● Engine problem 	<ul style="list-style-type: none"> ● Adjust engine trim ● Clean hull ● See your dealer
Throttle/shifting problems	<ul style="list-style-type: none"> ● Corroded cable ● Kink in cable ● Engine problem 	<ul style="list-style-type: none"> ● Clean/lubricate cable ● Replace cable - see your dealer ● See your dealer
Excessive vibration	<ul style="list-style-type: none"> ● Damaged or obstructed propeller ● Engine problem 	<ul style="list-style-type: none"> ● Check/change propeller ● See your dealer
Electrical problems	<ul style="list-style-type: none"> ● Blown fuse or open circuit ● Loose wiring connections ● Defective switch or gauge ● Defective component 	<ul style="list-style-type: none"> ● Replace fuse/repair open circuit ● Clean and tighten wiring ● Replace switch or gauge ● See your dealer
No power to AC outlets	<ul style="list-style-type: none"> ● Ground fault circuit interrupter tripped ● Loose shore power cord ● AC breaker 	<ul style="list-style-type: none"> ● Reset GFIC ● Turn shore power OFF and reconnect cord ● Reset breaker
Sink/shower does not operate	<ul style="list-style-type: none"> ● Fresh water pump circuit breaker is OFF ● Fresh water tank is empty ● Fresh water pump is defective 	<ul style="list-style-type: none"> ● Turn breaker ON ● Fill tank ● See your dealer
Toilet will not flush	<ul style="list-style-type: none"> ● Toilet circuit breaker is OFF ● Weak or discharged battery ● Toilet seacock closed 	<ul style="list-style-type: none"> ● Turn breaker ON ● Charge/change battery ● Open seacock
Toilet will not empty	<ul style="list-style-type: none"> ● Discharge valve closed ● Line to holding tank blocked 	<ul style="list-style-type: none"> ● Open valve ● See your dealer

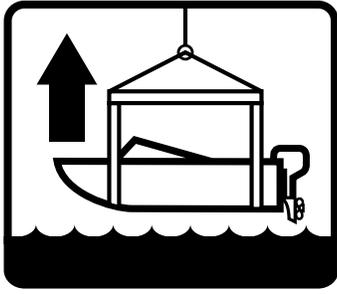

STORAGE

9

Storage or winter lay-up requires special preparation to prevent damage to the boat. Perform all annual maintenance at this time.

Without proper preparation, storage for long periods of time may cause internal parts of the engine and drive unit to rust because of lack of lubrication. Or, if the boat is stored in below freezing temperatures, water inside the bilge or cooling system may freeze causing damage. Damage to the boat due to improper storage will not be covered by the warranty. The following procedures should help prevent damage to your boat.

While The Boat Is Still In The Water

1. Fill fuel tank and add the proper amount of fuel stabilizer and conditioner according to the manufacturer's recommendations.
2. Operate boat for at least 15 minutes to be sure that treated fuel has reached engine.

Notice


If the boat is to be stored for more than 5 months, stored in a high moisture (humidity) environment, in temperature extremes, or stored outdoors, "fog" the engine with a rust preventative fogging oil according to the manufacturer's recommendations. See your dealer.

When The Boat Is Removed From The Water

Notice

Remove the bilge drain plug immediately after taking the boat out of the water. After washing, raise the bow of the boat high to allow as much water as possible to drain while performing other storage preparations.

- Flush the engine cooling system with clean water. DO NOT exceed 1500 rpm when flushing.
- Perform all scheduled maintenance. For stern drives, tuning the engine and changing the oil and fuel filters is especially important.
- Thoroughly clean the hull, deck and interior of the boat as soon as it is removed from the water. Cleaning at this time is easier because the marine growth is still wet. Be sure to allow for a couple of days of air drying to prevent mildew due to trapped moisture.

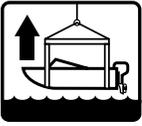


STORAGE

- Apply a coat of wax to the entire surface of the boat and rust inhibitor on all metal parts.
- Clean all traces of dirt, oil, grime, and grease from the engine and bilge. Touch-up areas of engine where paint has been removed.
- Prepare the engine for storage according to the instructions contained in the engine owner's manual.
- Store the bilge drain plug in a plastic bag and tape it to the throttle control lever so that it is easily found for reactivation.
- Remove the batteries from the boat. Clean, fully charge and store the batteries in an area not subject to freezing temperatures. Never store batteries close to heat, spark, or flame producing devices.
- Open all faucets and allow fresh water pump to empty water tank and intake lines. Run the pump dry for one or two minutes before turning it off.
- Open all drains, including the one on the water heater (if equipped).
- Empty holding tank for sanitary system, and flush with fresh water.
- Close inlet seacock. Remove inlet hose from pump housing and temporarily attach a short hose to the inlet. Pour one quart of nontoxic anti-freeze into container. With the open end of the temporary hose in the container, pump the head until the colored fluid runs down the rim of the bowl.
- Close outlet seacock.
- Remove strainer and seacock drain plugs to prevent damage from freezing. Close all seacocks.
- The boat bottom must be properly supported to prevent damage.


If stored on a trailer:

- Repack trailer wheel bearings with water resistant wheel bearing grease. If the trailer is equipped with bearing protectors, squirt grease into hubs with a grease gun.
- Park trailer and boat in a protected area. It is best to store boat on cradle. If the rig is left outside, install a boat cover. See your dealer.
- Loosen tie-downs and winch line but be sure the boat is resting properly on hull supports.
- Jack up trailer and place blocks under trailer frame to relieve weight on trailer tires and springs.
- Refer to engine and boat accessory manuals for further storage instructions.

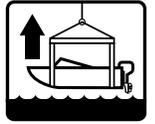

Reactivating The Boat After Storage

- Charge and install batteries in boat.
- Check engine and bilge for signs of nesting animals; clean as necessary.
- Check entire engine for cracks and leaks caused by freeze damage.
- Check hose condition and all hose clamps for tightness.
- Install bilge drain plug.
- Open and close all seacocks to check operation. Install all drain plugs in strainers and seacocks.
- Open all faucets and fill fresh water holding tank with about 20 gallons of water. Turn fresh water pump on to allow water to flow through faucets before closing them. Pump will run until operating pressure is reached. Fill fresh water tank until full.
- Perform daily maintenance. If not performed during lay-up, perform annual maintenance.
- If the boat is equipped with the optional fresh water cooling system (stern drive only) and was drained for storage, fill the system with fresh coolant solution.
- Check and lubricate steering system.
- Remove blocks from under trailer frame.
- Tighten tie-downs and trailer winch line.
- Check tire pressure and lug nuts on trailer.
- Take the boat to the water and start it. It may take a minute of cranking to allow the fuel system to prime. Allow a one minute cool down period for every 15 seconds of cranking. When the engine starts, keep a close watch over the gauge readings and check for leakage and abnormal noises. Keep speeds low for the first 15 minutes until the engine has reached normal operating temperature.
- Refer to engine and boat accessory manuals for further reactivation instructions.

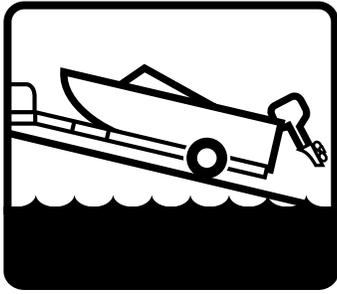

TRAILERING

10

This section provides information about trailering. It describes the hitch and safety chains, backing your trailer, preparing to launch, launching, and loading your trailer. Also included is a trailering checklist.

WARNING

- The trailer must be matched for the boat's weight and hull.
- The towing vehicle must have the capability of pulling the load. Pulling a load that exceeds the vehicle's towing capacity may cause loss of control.

Notice


Check the certification label on the left forward side of your trailer. The label is required to show the Gross Vehicle Weight Rating (GVWR), which is the load carrying capacity plus the weight of the trailer itself. Be sure that the total weight of your boat, engine, gear, and trailer do not exceed the GVWR.

Trailer laws on things such as lighting, registration, trailer brakes, gross vehicle weight, etc., vary widely from state to state. Contact your state Dept. of Motor Vehicles (and that of other states through which you may be traveling) for laws you must be in compliance.

CLASSIFICATIONS

Trailers are separated into four classes based on gross vehicle weight (GVW). Gross vehicle weight is equal the trailers weight plus maximum load it may carry at 60 MPH.


- Class One GVW under 2000 lbs.
- Class Two GVW over 2000 under 3500 lbs.
- Class Three GVW over 3500 under 5000 lbs.
- Class Four GVW over 5000 lbs.

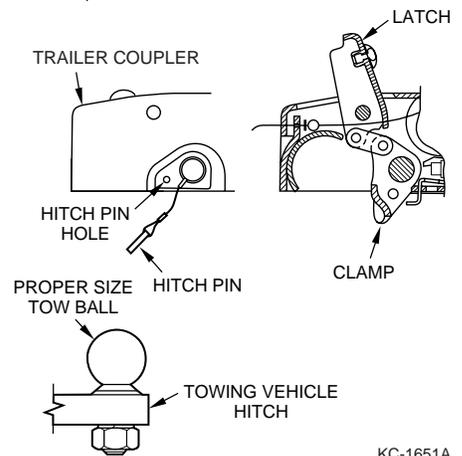



TRAILERING

TRAILER COMPONENTS

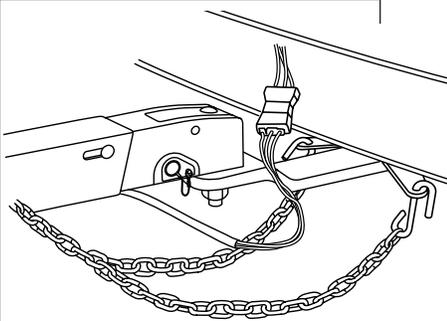


Hitch


Hitches are divided into classes that specify the gross trailer weight (GTW) and maximum tongue weight for each class. Always use a hitch with the same class number as the trailer, or greater.

Most boat trailers connect to a ball hitch that is bolted or welded to the towing vehicle. Special heavy-duty equalizing hitches are necessary for trailer tongue weights of 350 pounds or greater.

CRISSCROSS SAFETY CHAINS

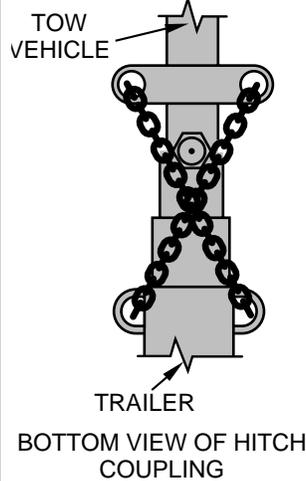

MAXIMUM TONGUE WEIGHT

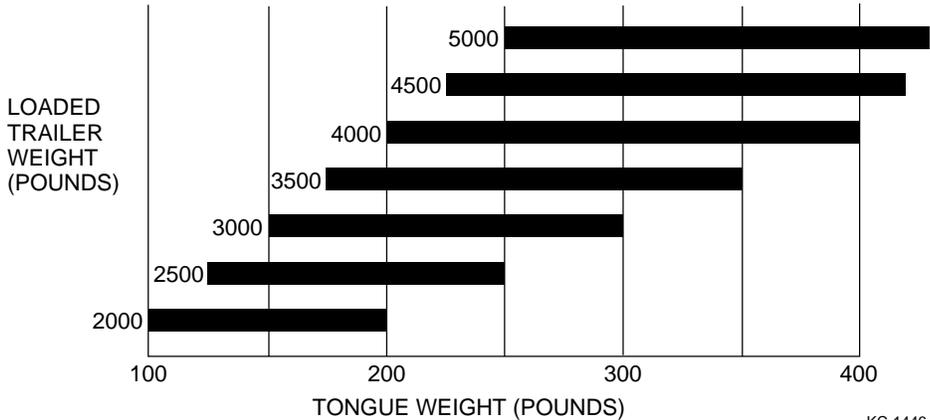

KC-1446

The trailer hitch coupler must match the size of the hitch ball. Never use a hitch ball that does not match the trailer coupler. The correct ball diameter is marked on the trailer coupler.

Safety Chains

Safety chains on your boat trailer provide added insurance that it will not become completely detached from the towing vehicle when underway.

Crisscross the chains under the trailer tongue to prevent the tongue from dropping to the road if the trailer separates from the hitch ball. Rig the chains as tight as possible with just enough slack to permit tight turns.

Make sure the proper chains are correctly attached between the towing vehicle and trailer before and during each trip.



Trailer Jack

Manufacturers recommend using the jack (if equipped) to lift the coupling of a loaded trailer from the hitch ball and for moving the trailer about when it is disconnected from the towing vehicle. The trailer jack should be lowered to a minimum position and tilted horizontally before towing the trailer.

Like any mechanical assembly, a jack requires maintenance to function properly over a long period of time. The drive gear and the rack and pinion should be greased. The caster and wheel bearing should be oiled frequently.

Tie-Downs


Ensuring that your boat is held securely in place on the trailer's hull support, especially when underway, is extremely important. If it is not firmly and properly secured, your boat can be damaged as it bounces against the hull supports.

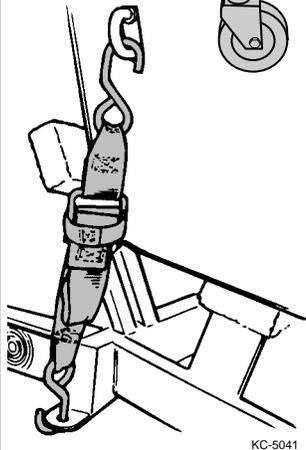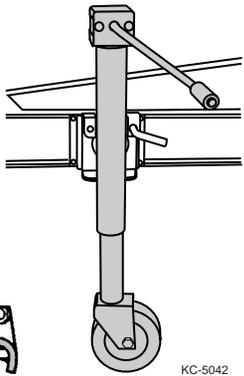



Trailer Brakes


In some states, any trailer with a gross vehicle weight rating (GVWR) of 1,500 pounds or more is required to have brakes. Usually, this brake is a self-contained, hydraulic surge system, with either a drum or disk brake. Some trailer brake systems are electrically actuated and require a control box inside the towing vehicle. Consult your trailer manufacturer's owner's manual for more information on operation, adjustments and maintenance.

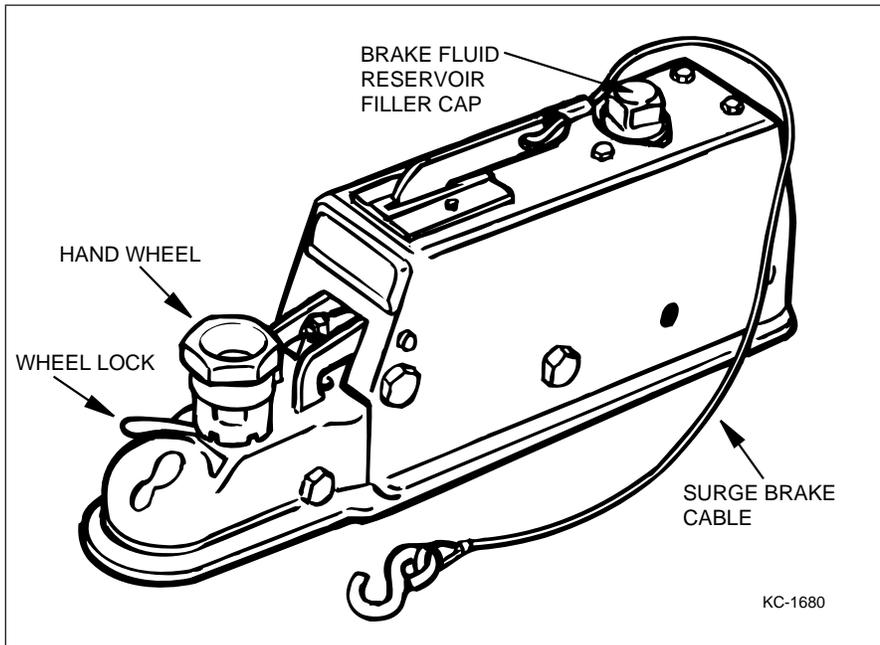

TRAILERING CHECKLIST


Below is a checklist to follow when trailering your boat:

- Consult your state laws as to brake and axle load requirements. Check brakes for proper operation and fluid level prior to departure on each trip.
- Check springs and undercarriage for loose parts.
- Check tires for proper inflation. Under-inflated tires heat up rapidly and tire damage or failure is likely to occur.
- Wheel bearings and lug nuts should be checked before each trip.

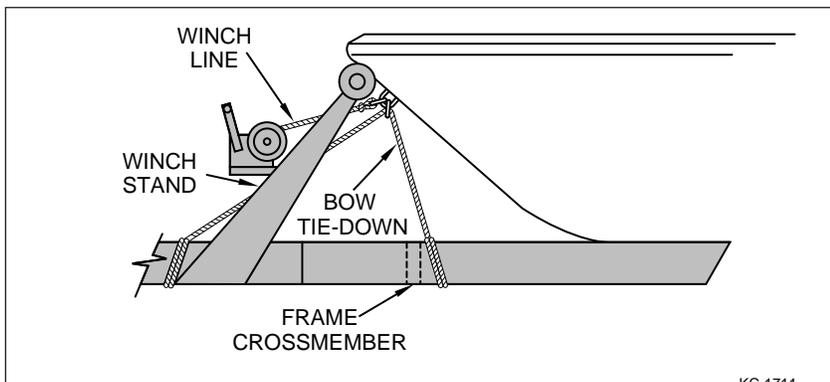



TRAILERING

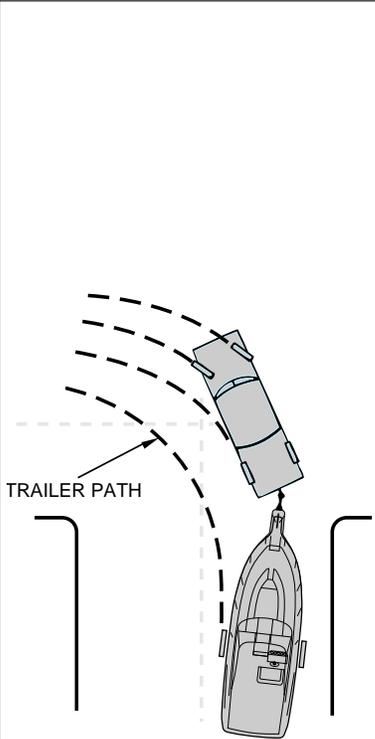


KC-1736

- Your boat should be fastened to the trailer by a line from the bow eye to the winch line PLUS a bow tie-down to the winch stand or trailer tongue. The stern of your boat should be tied down to the trailer from the stern eyes.
- Check to be sure the taillights and turning signals work prior to towing.
- Convertible tops are not designed to stay on boats at highway speeds. Before towing, take down the convertible top, side curtains, and back cover.
- Carry a spare tire for both your trailer and your towing vehicle along with sufficient tools to change them.
- Consult the engine operator's manual for engine related trailering precautions.
- On extended trips, carry spare wheel bearings, seals, and races.
- While traveling, check the wheel hubs every time you stop for gas or refreshments. If the hub feels abnormally hot, the bearing should be inspected before continuing your trip.
- When rounding turns on highways or streets, do not cut corners. Also, go slow over railroad tracks.
- Before backing your trailer into water, disconnect the light plug from the towing vehicle to reduce the likelihood of blowing out lights when they become submerged.

BACKING UP TRAILERS

If you have never towed a trailer before, take the time to practice backing your trailer before using it for the first time. Follow these guidelines when backing:

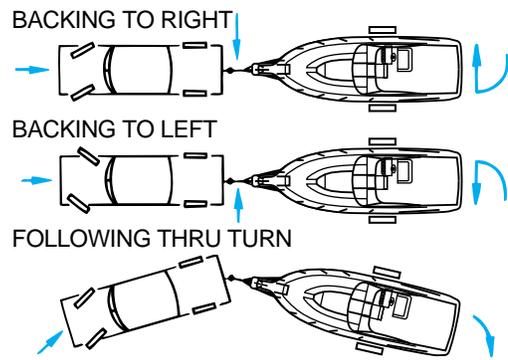

KC-1766

- Back slowly and make small steering adjustments.
- Turn the car wheels in the opposite direction you want the trailer to go.
- After the trailer begins moving, turn the car to follow it.
- Have a second person assist you with hand signals.



LAUNCHING

Before launching your boat, stay to one side and watch a couple of launchings to notice any problems on the ramp and the effects of the wind and current on launching. It is a common courtesy to prepare the boat for launching away from the ramp especially during busy periods. Perform the pre-launch sequence as follows:

1. Remove the boat cover, if equipped.
2. Check that bilge drain plug is in place.
3. Remove any additional trailering tie-downs from the boat.
4. Attach the bow and stern docking lines and fenders if necessary.
5. Disconnect the trailer lights from the car.

Launching with two people is recommended. Since all launches are different from each other in some way, the following procedure must be modified to fit the launch in use:

1. Back the boat down the ramp until the wheels are at least halfway submerged. Keep the trailer/car combination as straight as possible and at 90 degrees to the shore line.
2. Loosen and detach the bow strap from the bow eye.
3. Back the boat further down until the top of the fenders are about 2" above the water.
4. Board the boat and start it. If possible, remain on the trailer until the engine has warmed-up.

LOADING

Loading, like launching, is best done with two people:

1. Back the trailer into the water until the top of the fenders are about 3" above the water. Keep the trailer/car combination as straight as possible and, if possible, at 90 degrees to the shoreline. Set the parking brake securely.
2. Approach the trailer in a straight line from at least 5' out. Use "bursts" of propeller thrust to move towards the trailer at the slowest steerable speed. Guide the boat onto the support bunks.
3. Check to see that the boat is centered on the support rails and is headed in a straight line for the bow stop (bumper board).




WARNING



Excessive throttle can cause the boat to travel over the bumper board causing extensive damage to the boat, trailer, and car and could cause severe personal injury.

4. Using a very light touch on the throttle, ease the boat forward until the bow comes to rest against the bow stop (bumper board).

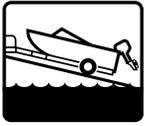

TRAILERING




CAUTION

The winch bow strap is merely a means of securing the boat to the trailer and is not intended to winch or pull the boat onto the trailer.


5. Attach and tighten the winch bow strap.
6. Pull the trailer up the ramp and attach any additional tie-downs and connect the trailer light harness.
7. Pull drain plug.
8. Perform end of day shut down procedures.

SLINGING/LIFTING

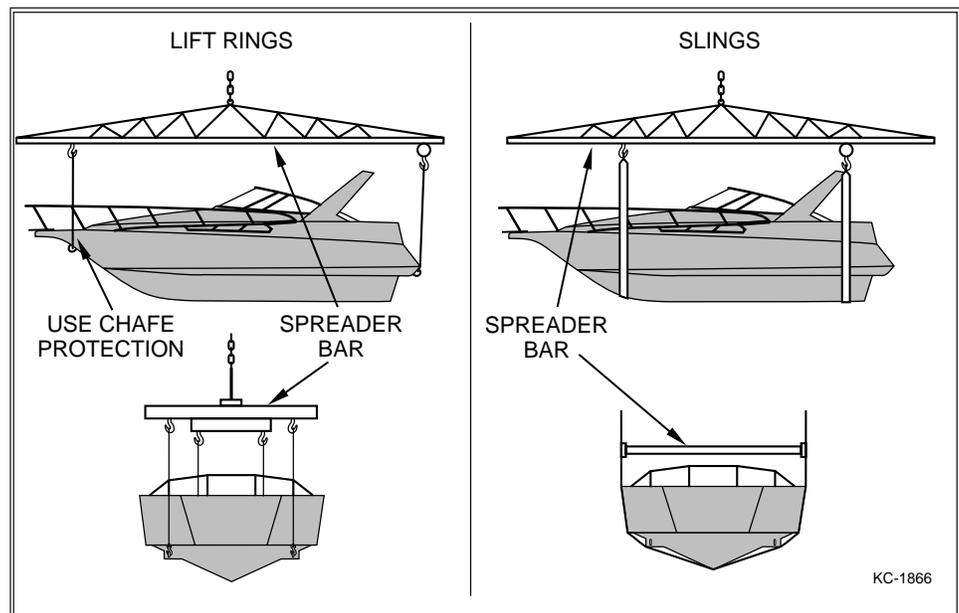

If the boat is to be removed from the water without a trailer, follow these guidelines:

- Never attach lifting cables to cleats, ski tow eyes or hand rails. Attach cables only to the lifting eyes in the transom and bow.
- Cover lifting cables with rubber hose or other protectors to prevent damage to the finish.
- Attach guide lines to the bow and stern to control movement.
- Use spreader bars and keep lifting pressure vertical to prevent side load damage.
- Keep the bow slightly higher than the stern to prevent engine damage.

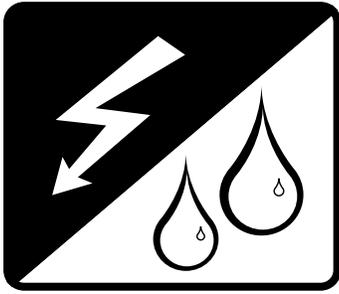

SHIP SYSTEMS

11

Your boat is equipped with several systems for operation. This section describes the basic operational principles for the major systems. The procedures and illustrations in this section are typical and are intended to be representative of the system on your boat. Be sure to consult all system information provided with your boat before operation.

ELECTRICAL SYSTEMS

Some boats are equipped with two electrical systems; a battery powered direct current (DC) system, and a generator or shore powered alternating current (AC) system. These systems have a load center panel which serves as the main distribution panel.

The DC system supplies electricity to all of the boat's electrical circuits (lights, pumps, blowers, ignition, etc.)

The AC system supplies power to the electrical outlets, and to AC powered systems (electric stove, water heater, microwave, refrigerator, etc.) when the boat is moored to dock or slip.

DC Electrical System



WARNING



Considerable care has been taken to design a safe electrical system to protect you from hazardous shocks. Any modifications to the system should always be done by a qualified technician to protect you from hazardous shock.

Your boat has a 12 volt negative ground DC system. The positive wire is hot, and feeds current from the batteries to the various 12 volt systems, and the negative wire is the ground.

Many boats are equipped with three batteries. Two batteries (cranking batteries) are used only to start the engine(s). The third battery is an auxiliary battery that provides power to all of the other DC electrical circuits via the master battery switch.

While the engines are running, all batteries are charged by the engine alternator(s), and the rate of charge is controlled by an internal voltage regulator.



SHIP SYSTEMS


The electrical system is grounded by grounding the cranking batteries to the engine(s) and the auxiliary battery to the cranking batteries. The engine(s) are connected by ground cable to provide added assurance that a proper ground is being achieved. The engine(s) are then grounded to a bonding strip located in the engine compartment.

The auxiliary battery is separated from the cranking batteries by an electronic solid state isolator. When the engines and ignition switches are "OFF", the isolator prevents accessory loads from depleting the cranking batteries. When the batteries are being charged by the alternator(s), the isolator automatically combines and isolates the alternator output and distributes the charge among the batteries according to individual need.

DC Master Panel

A typical DC master panel may consist of a voltmeter, a battery test switch, a series of switch type and resettable circuit breakers, and the master breaker switch.

Typical DC Control Panel

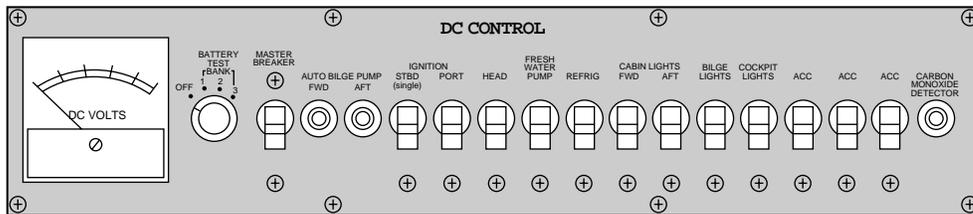

TYPICAL DC CONTROL PANEL

KC-1633

The meter allows you to check on the condition of the batteries. With master breaker switch in the "OFF" position, turn battery test switch to:

- "1" to check the starboard engine cranking battery,
- "2" to check the port engine cranking battery,
- "3" to check the auxiliary battery, and
- "OFF" to disable meter and test circuit.



CAUTION

Never reset a breaker which has been automatically tripped without first detecting and correcting the cause of the problem.

The switch type circuit breakers' function is twofold: they allow you to manually enable or interrupt a circuit by moving the switch on or off, and they protect the system receiving the DC current (power) by automatically opening the circuit if a short or overload condition occurs.

The resettable circuit breakers protect the system receiving DC power by automatically opening the circuit if a short or overload occurs.



AC Electrical System

Models equipped with shore power AC systems are rated for 125 volts at 60 cycles. Source current can be provided from a 110 volt, 60 cycle shore power station.

The AC system in your boat is much like the system in your home. The hot wire (usually black) sends current to the AC system. The neutral wire (always white) sends current back to the source, and the ground wire (always green) grounds all systems to a common ground. In your boat the common ground is the copper bonding strip located in the engine compartment.



WARNING

Considerable care has been taken to design a safe electrical system to protect you from hazardous shocks. Any modifications to the system should always be done by a qualified technician to protect you from hazardous shock.

Typical AC Generator Control Panel

Many AC control panels consist of a voltmeter or main AC breaker, a reversed polarity indicator light, and individual circuit breakers.

Voltage Meter – Allows you to monitor the AC voltage. Damage to components can occur if voltage entering your system is less than 105 volts. Do not use AC powered equipment if you get a reading of 105 volts or less.


Reversed Polarity Light – Indicates if the polarity of the **shoreside power source** has been reversed, but will not indicate if the boat polarity (wiring) is reversed.



WARNING

Every effort has been made at the factory to assure proper wiring polarity for the boat AC system. Any modification performed on the boat AC system must be made by a qualified marine technician and checked to assure compliance with ABYC guidelines and National Electrical Codes.

Power Available Light – Indicates that power from the shore or from the generator is available to the panel for distribution. This indicator must be illuminated before switching the main AC breaker “ON.”

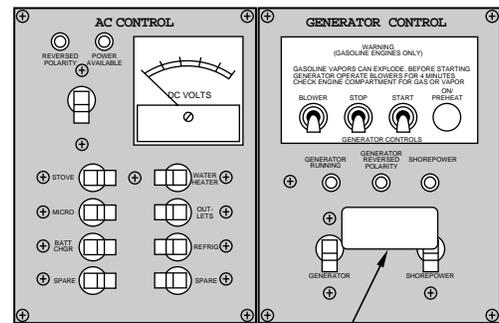

SLIDE PROTECTOR

TYPICAL AC CONTROL PANEL

KC-1634



SHIP SYSTEMS



WARNING



If a reversed polarity warning is indicated, **DO NOT USE** the shore power source. Immediately turn off the power source on shore and disconnect the shore power cord. Reversed polarity is a dangerous and potentially lethal condition which may cause shock, electrocution, or death.

Main AC Breaker – Switches the entire AC system “ON” and “OFF.” This allows you to check for proper voltage and polarity immediately after shore power cord connection has been made, before individual circuits are enabled.

Individual Circuit Breakers – Allow you to manually enable or interrupt a circuit by flipping the switch “ON” or “OFF,” and they also protect the system receiving the AC load by automatically breaking the circuit in cases of shorts or overloads.



CAUTION

Never reset a breaker which has been automatically tripped, without first discovery and remedying the cause of the problem.

If your boat is equipped with a generator, the Generator Control panel contains the starting/stopping controls for the generator as well as the controls for switching between Shore Power and Generator.

Notice

Read the generator owner’s manual before operating the generator for the first time. The manual contains important operation and maintenance information.

Whenever operating the generator, you must first operate the engine compartment blower for at least 4 minutes prior to starting, and continuously during generator operation to remove dangerous gas or vapor.



WARNING



The blower must be operated for a minimum of four minutes before each time the engine is started. In addition, the blower should be operated continuously when at idle or slow speed running. Failure to operate the blower can cause an explosion.

Notice

Models equipped with a diesel engine powered generator may have a PREHEAT switch used during starting.



Notice

Some models may be equipped with extra batteries and a DC to AC converter. The converter will allow certain AC appliances, such as a refrigerator, to operate from battery power while underway. The operation of battery conversion systems is not discussed in this manual.

Since boats equipped with shore power usually remain in the water for extended periods, corrosion is the primary cause of AC electrical problems. Corroded connections can overheat plugs and receptacles and is usually first noticed at the plug. If signs of overheating is evident, repairs must be made immediately before further damage is done.

Shore Power Connection

One or two 125 volt receptacles are provided for shore power inlet. The type of receptacle determines the amperage rating of the system.

Four amperages may be found; 15 ampere, 30 ampere, 50 ampere 125V and 50 ampere 125/250V.


A 15 ampere shore cord could be viewed as an extension cord for the boat. Fifteen ampere systems usually supply one device such as a battery charger, and have no AC control panel or individual branch circuits.

The 30 and 50 ampere systems are equipped with an AC control panel for power distribution to branch circuits.

All shore power systems require a special, marine grade three-conductor cable to make a proper connection to the shore. Dockside connections are plug-in while boat side connections plug-in and are locked in position with a threaded locking collar to prevent accidental disconnection and enhance water resistance. If the proper receptacle is not available at dock side, there are special adapters available to connect to 50 ampere systems. Consult your dealer for information on proper adapters.

Some boats may be equipped with two separate 30 ampere electrical systems (with separate AC Control Panels) or may use two 125V shore power cords to provide 250V service (in which case the AC Control Panel will combine service automatically for large appliances).

SHORE POWER CORD

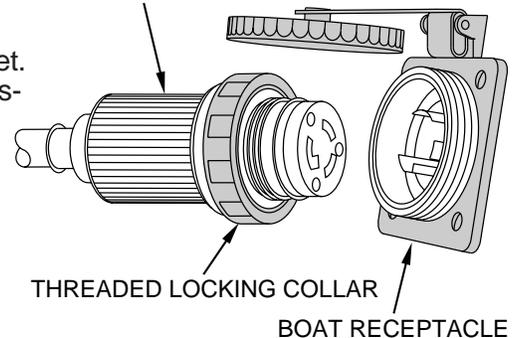

BOAT SIDE SHORE POWER CONNECTION

KC-2053



WARNING

Plugs and receptacles for different systems are designed in noninterchangeable configurations. A plug from one system cannot fit into the receptacle of another system. Never attempt to modify a shore power cable; use only commercially available adapters for system modification.



SHIP SYSTEMS

To minimize shock and fire hazards when connecting and disconnecting shore cord:

To connect:

1. Turn “OFF” the boat’s main AC breaker switch.
2. If the outlet on the pier has a disconnect switch, turn the switch in the “OFF” position.
3. Connect shore power cable at the boat first.
4. Make sure the cable has more slack than the mooring lines.
5. Remove the cap from the outlet on the pier. Connect the other end of shore cable to the outlet on the pier.
6. If polarity warning indicator is activated, immediately disconnect cable.
7. Set the shore disconnect switch in the “ON” position.

To disconnect:

1. Set the 110 volt AC MAIN switch in the “OFF” position.
2. If there is a disconnect switch on the shore, set the disconnect switch in the “OFF” position.
3. Disconnect shore power cable at shore outlet first.
4. Disconnect the power cable from the inlet in the boat. Replace the cap over the inlet.
5. Place cable in storage for future use.



WARNING



Some marinas have been known to “break” shore power ground circuits to prevent electrolysis. Opening the ground circuit creates a potentially dangerous on board shock hazard. Ensure that your shore power cable ground circuit is always continuous.

Generator Breaker – Makes or breaks the connection between the generator and the AC control panel. DO NOT switch while the generator is operating.

Shore Power Breaker – Makes or breaks the connection between shore power and the AC control panel. DO NOT switch while shore power is being used.

Generator Running Light – Indicates that generator power is being received by the AC control panel.

Reversed Polarity Light – Indicates if the polarity of the generator output (wiring) has been reversed.

**WARNING**

If a reversed polarity warning is indicated, **DO NOT USE the generator.** Immediately turn off the generator and determine the source of the problem. Reversed polarity is a dangerous and potentially lethal condition which may cause shock, electrocution, or death.

Shore Power Light – Indicates that shore power is being received by the AC control panel.

To Operate From Shore Power

1. Shut down generator if applicable. If equipped, Generator Running indicator will go out.
2. Turn “OFF” generator breaker and main AC breaker. If equipped, Power Available indicator will go out.
3. If so equipped, move the slide protector over the Generator breaker.
4. Flip the Shore Power breaker to the “ON” position. The Power Available indicator should illuminate.
5. Flip the Main AC breaker to the “ON” position. If the Reversed Polarity light illuminates, flip the breaker “OFF” immediately.

**WARNING**

If a reversed polarity warning is indicated, **DO NOT USE the shore power source.** Immediately turn off the power source on shore and disconnect the shore power cord. Reversed polarity is a dangerous and potentially lethal condition which may cause shock, electrocution, or death.

6. Flip individual circuit breakers “ON” as required.

To Operate From Generator Power

1. Shut down shore power if applicable. If equipped, Shore Power indicator will go out.
2. Turn “OFF” shore power breaker and main AC breaker. If equipped, Power Available indicator will go out.
3. If so equipped, move the slide protector over the Shore Power breaker.
4. Flip the Generator breaker to the “ON” position. The Power Available indicator should illuminate.
5. Flip the Main AC breaker to the “ON” position. If the Generator Reversed Polarity light illuminates, flip the breaker “OFF” immediately.

**WARNING**

If a reversed polarity warning is indicated, **DO NOT USE the generator power source.** Immediately turn off the power source. Reversed polarity is a dangerous and potentially lethal condition which may cause shock, electrocution, or death.

6. Flip individual circuit breakers “ON” as required.



SHIP SYSTEMS

WATER SYSTEMS

Some boat models may be equipped with two or more water systems; a fresh water system, a raw water system, and a head and waste containment system.


The fresh water system provides potable (drinkable) water to items such as sinks, showers, hot water heater, ice makers, or cockpit washdowns.

The raw water system provides outside (that which the boat is on) water to items such as cockpit washdowns, heads (marine toilets), and engines.

The head and waste containment system provides outside (raw) water to the head.

Fresh Water System

Two types of fresh water systems are common; a manual system and a pressurized system. Manual systems consist of a storage tank and a hand pump/faucet.

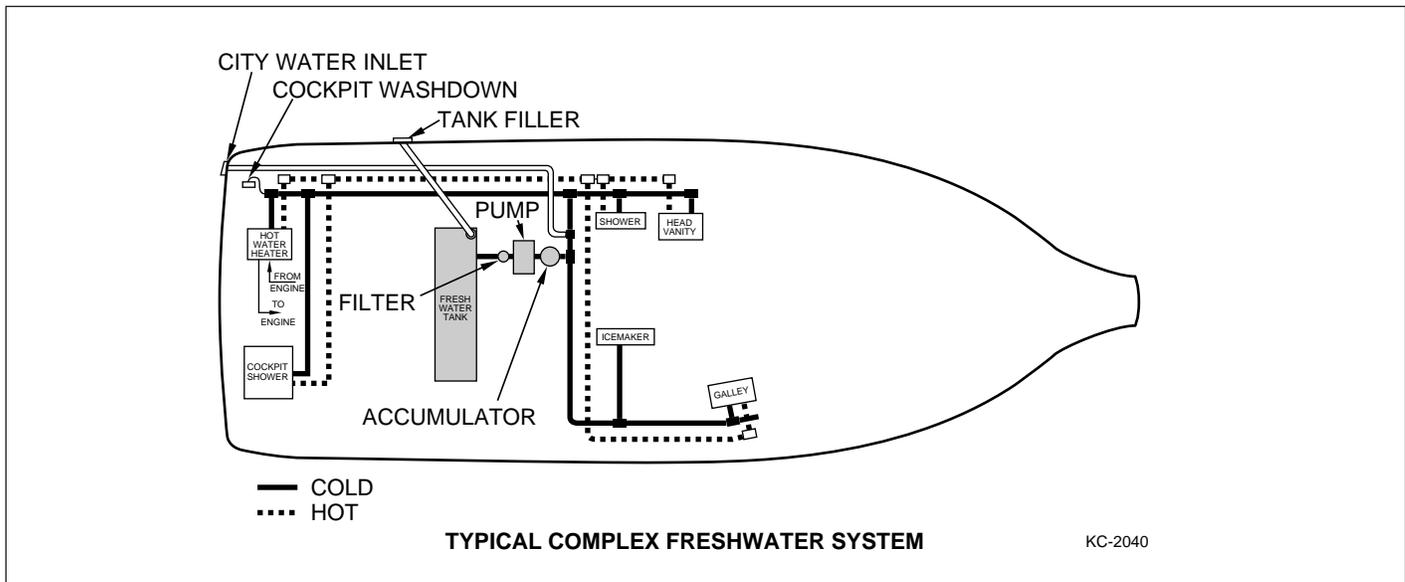

Pressurized systems can range from the simple type consisting of a storage tank, electric pump and faucet, to the complex type consisting of a storage tank, filter, electric pump, accumulator, city water hookup, water heater, and any one of a number of showers, sinks, or other items which require potable water.

Notice

All fresh water drainage is directed overboard.

Fresh Water Tank

The boat is fitted with a fresh water tank that is filled through the deck plate filler marked "WATER." The tank is vented through the hull, this allows air to enter/escape as water levels rise and fall. The water tank is full when water comes out of the vent.



Notice

Fill the tank only with potable water. Using and refilling the tank often will help keep it a source of clean drinking water.

To fill the tank:

1. Insert the filler cap (special) key provided with your boat.
2. Insert the key into the slot in the cap and turn counterclockwise to unlock.
3. Remove the cap.
4. Using a sanitary drinking water hose (blue), fill the tank with clean, fresh drinking water.
5. Replace the cap and lock into position with the key.

Filter, Pump, and Pressure Accumulator


Water is drawn from the tank by a self-priming pump located to port and below the engine hatch. Before entering the pump, the water passes through a filter to capture any contaminants. The pump provides a flow of water at a preset pressure to the remainder of the system. Should the system develop a leak or become empty, a dry tank shut down switch prevents pump burnout.

A pressure accumulator tank provides a smooth surge free flow of water from the pump to various fresh water systems. The pressure accumulator also reduces the need for excessive pump cycling by maintaining a constant pressure in the lines.


Initial Fresh Water System Startup

1. Fill the fresh water tank with approximately 20 gallons of potable water.
2. Turn the FRESH WATER PUMP breaker "ON."
3. Open the cold water galley faucet to allow air to escape. Close the faucet when a steady flow of water is apparent.
4. Open the hot water galley faucet to fill the water heater and allow air to escape from the line. Close the faucet when a steady flow of water is apparent.
5. Bleed air from the remainder of the faucets, showers, etc., in the same manner as steps 3 and 4. After all lines have been bled, the pump will build to operating pressure and then shut off.
6. You may now continue to fill the tank to its capacity.

TYPICAL DECK PLATE KEY

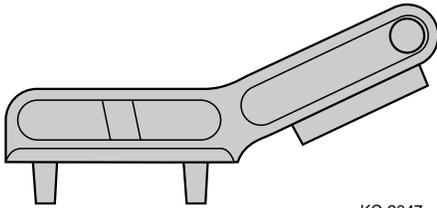

KC-2047

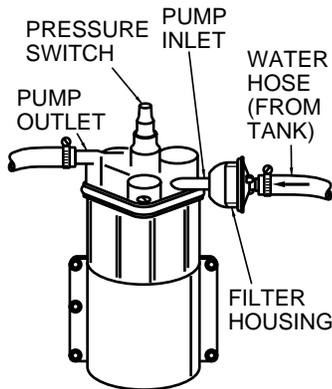

TYPICAL FRESHWATER PUMP

KC-2042.1



CAUTION

The fresh water pump works on demand and WILL NOT automatically shut-off when the tank is empty. If the breaker switch is in the "ON" position, and the tank is empty, the pump will run continuously and may over-heat.



SHIP SYSTEMS

City Water Hookup



CAUTION

Monitor the water system during initial usage of the “city water” feature. In this mode, the boat is connected to an unlimited source of water. **NEVER** leave boat unattended while using the “city water” feature. Any major leak or break in the system will allow abnormal bilge accumulation which in turn could cause sinking or swamping of batteries and engine.

As an alternative to the fresh water tank, the fresh water system can be connected to “city water.” Because the water enters the boat under pressure, it bypasses the tank, the filter, the pump, and the pressure accumulator. Also, since city water pressure can sometimes be higher than the boat system was designed for, your water inlet may be equipped with a pressure regulator that limits the maximum pressure to 35 psi.

Notice

Using “city water” hookup does not replenish water supply in the tank. The tank can only be filled at the fresh water fill plate.




WARNING



Before connecting to any water fitting (dockside or otherwise), be sure the water is potable and suitable for human consumption. Also, a special sanitary drinking water hose is required for the potable water connection. **Never use common garden hose for drinking water.**

To connect city water:

1. Turn the FRESHWATER PUMP breaker “OFF.”
2. Remove the threaded plug from the female swivel hose connector of the water inlet fitting. Clean any particles from the strainer.
3. Attach the proper sanitary drinking water hose to the water inlet fitting. Be sure to clean both ends and flush the hose before connecting. Foreign matter may damage the pressure regulator.
4. Before connecting to the dockside city water outlet, open the valve fully to flush any rust particles that may be present.
5. Connect the hose to the dockside city water outlet.

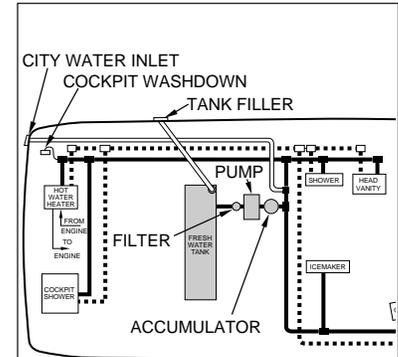

— COLD
... HOT

TYPICAL FRESHWATER SYSTEM



HOT WATER HEATER

The hot water tank is equipped with a high pressure relief valve for safety. Some models may have a thermostat that regulates the heater to a specific water temperature. The thermostat is adjustable to suit individual taste. The electric hot water heater is operated by turning “ON” the WATER HEATER breaker switch located on the AC panel.

The hot water tank also operates via a heat exchanger. Heated cooling water from the engines is delivered to a heat exchanger which in turn heats the water in the hot water tank.



CAUTION

Do not turn the hot water switch on unless the fresh water system is charged. Damage to the heating element will result if allowed to heat up with no water in the system.

To use the hot water heater:

1. With fresh water tank filled and pump “ON” or city water connection operating, turn HOT WATER HEATER breaker “ON.”
2. Turn on one of the hot water faucets to purge any remaining air from the hot water system.


Notice

Some hot water heaters are equipped with a high temperature limit switch to protect the heating elements should the heater be activated without water in the tank. If for any reason the system does not operate, turn the hot water heater breaker “OFF” and push the reset button on the heater.

Fresh Water System Maintenance

The following maintenance actions should be performed monthly to keep the fresh water system clean and sanitary:

- Drain the fresh water tank completely (using all faucets, showers, etc.). Refill tank with at least 20 gallons of clean, fresh water and drain again.
- Clean fresh water pump inlet filter screen (if equipped).
- Replace fresh water system filter(s) (if equipped).
- Clean city water inlet strainer (if equipped).
- Flush city water system (using all faucets, showers, etc.).

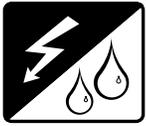

SANITIZING THE FRESH WATER SYSTEM

If water in the tank has been allowed to stagnate and you suspect that the fresh water system may be contaminated, sanitize the system. To sanitize:

1. Drain the fresh water tank completely (using all faucets, showers, etc.).
2. Mix a solution of 1/4 cup household bleach to 1 gallon of water for every 15 gallons of tank capacity. Pour the solution into the fresh water tank.
3. Fill the tank with clean, fresh water.
4. Turn fresh water pump "ON" and bleed air from all faucets, showers, etc.
5. After approximately 3 hours, drain the system completely.
6. Flush the system with one full tank of water.
7. Fill tank with clean, fresh drinking water.

If you can smell or taste bleach in the water:

1. Drain the system completely.
2. Mix a solution of one quart of white vinegar to 5 gallons of water. Pour the solution into the fresh water tank.
3. Allow the solution to remain in the tank until approximately one hour of cruising time is logged.

Notice

Boat motion will "slosh" the vinegar/water solution to help clean the tank.

4. Allow the solution to remain in the tank for at least one week.
5. Drain the fresh water system completely.
6. Flush the system with one full tank of water.
7. Fill the tank with clean, fresh drinking water.


Raw Water System

Boats may contain several raw water systems. Essentially, any component that requires outside water such as the engines, head, or cockpit washdown will each have its own raw water intake.

All raw water systems have three things in common; each will have its own thru-hull raw water intake, a seacock and a strainer. The seacock is very important as it protects a boat from sinking if a downstream hose or fitting should fail. It is therefore very important to close any seacock not in use.



All raw water systems have some type of pump to draw water into the boat. Engines have pulley driven pumps; heads may have manual push/pull or electric pumps; cockpit washdowns have electric pumps. Some raw water systems may supply two components and will have a flow control valve for directing water flow.

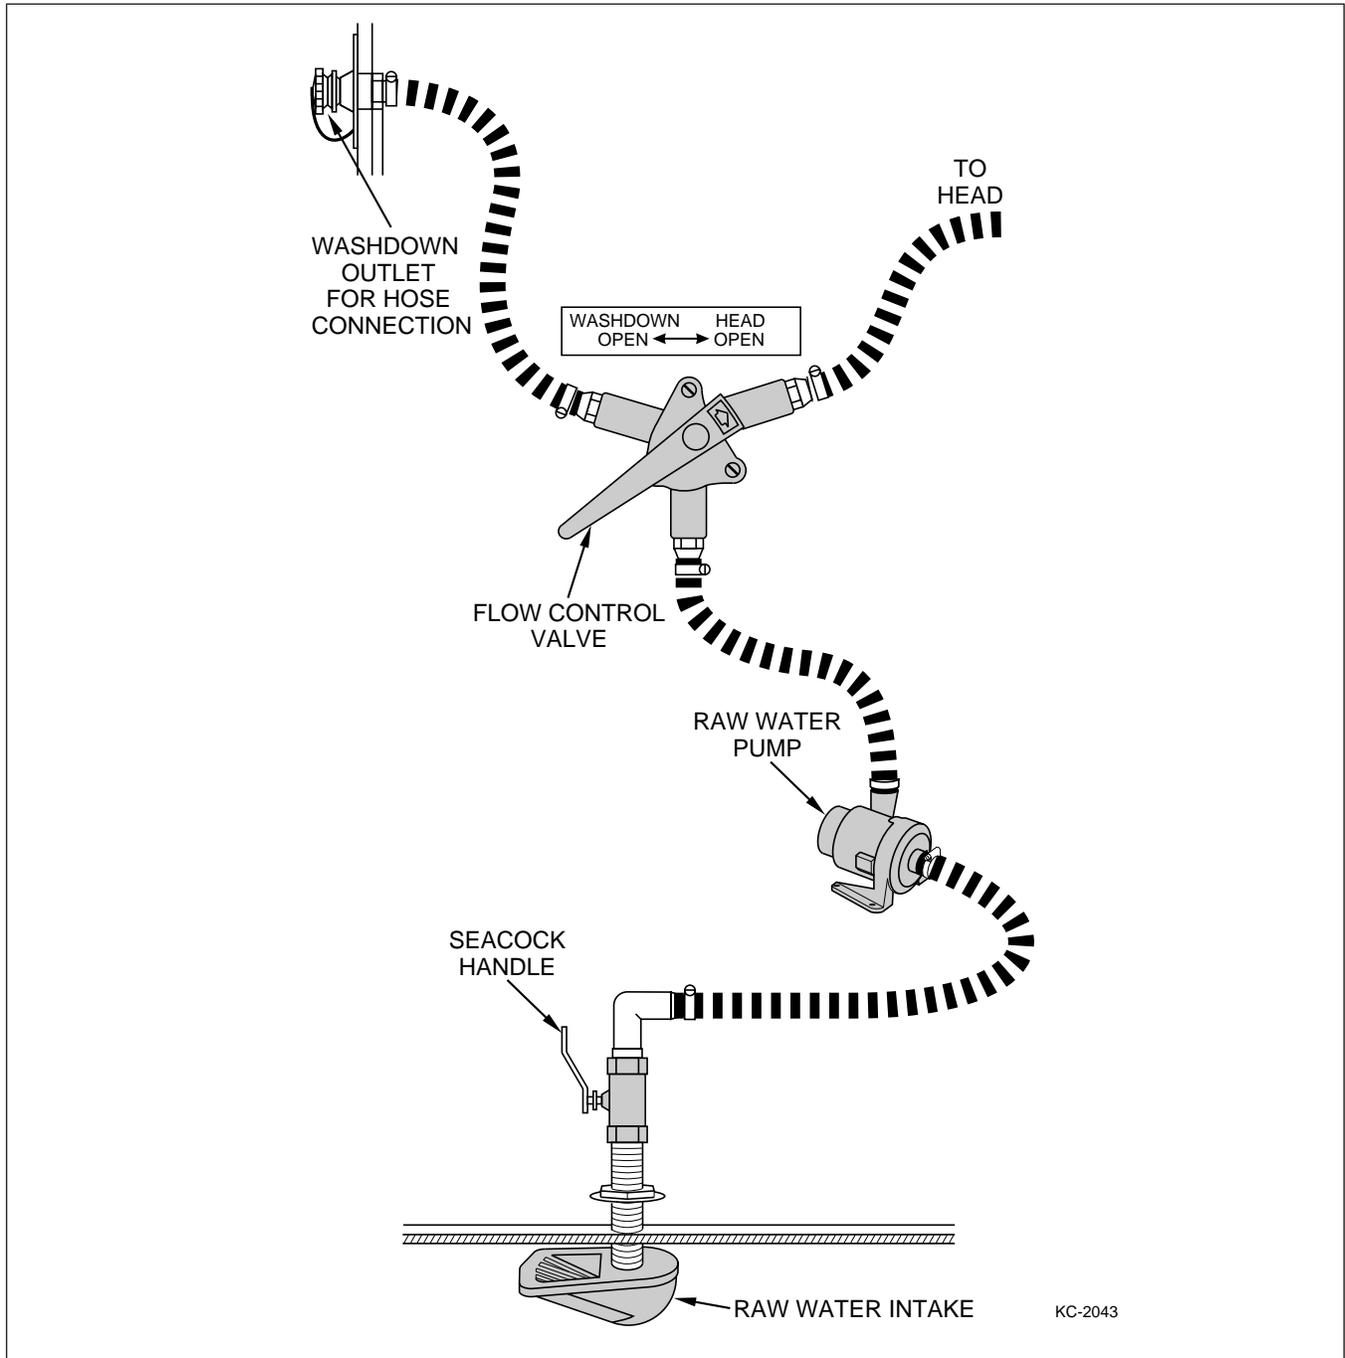

To operate a raw water system:

1. Open seacock.
2. Adjust flow control valve (if equipped).
3. Turn appropriate pump switch "ON" if necessary.



SHIP SYSTEMS

Head and Waste Containment System

Some boats are equipped with a head (marine toilet) and waste containment system. The head has either the manually operated system, or the electrically operated system, which draws seawater in through the hull to flush waste water from the marine toilet. The toilet pumps the waste water on to a holding tank.

Waste Holding Tank

The boat is fitted with a waste holding tank that is emptied through the deck plate fitting marked "WASTE." Waste is pumped from the head through a sanitary waste hose to the top portion of the tank. A 3/4" sanitary waste hose is attached to the bottom of the tank, and runs to the dockside pumpout plate. An overboard vent keeps the tank at atmospheric pressure regardless of waste levels.

All the components which comprise the waste system are made of materials specially formulated to prevent odor permeation and to resist chemical actions. It is strongly recommended that you regularly add chemical to your tank by flushing it through the head. The chemical helps to control odor and break down the waste. Follow the manufacturer's instructions on the chemical before using.

Depending on the model, there are 3 basic waste system configurations; dockside pumpout, pumpout and overboard discharge, and pumpout, discharge and macerator.



CAUTION


Do not flush into a full holding tank. Attempting to flush the head when the tank is full could result in damage to the waste system.

A waste tank indicator may be installed to provide a visual indication of the amount of waste in the tank.

Waste Disposal DOCKSIDE PUMPOUT

This system directs all waste to the holding tank. To clear the tank of waste water, you will need to use the dockside pumpout services provided at marinas, etc.

To empty the tank of waste, hook a suction hose to the pumpout plate and to the dockside pump. The marina will handle the proper disposal of the waste and may charge for this service.

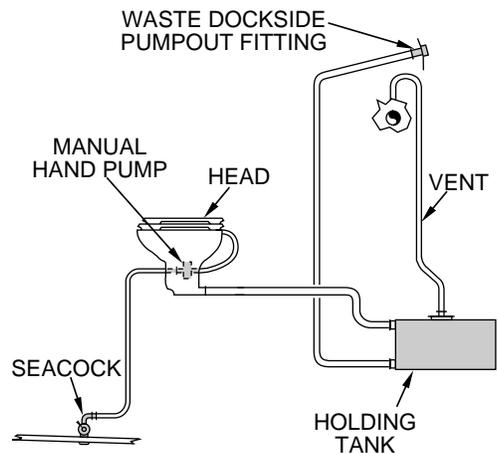

TYPICAL DOCK PUMPOUT SYSTEM

KC-2044



Overboard Discharge

A “Y” valve is installed, in this version, between the marine toilet and the waste holding tank. The “Y” valve can direct the flow of waste to the holding tank, or direct to an outlet seacock for overboard discharge of waste.



CAUTION

Overboard discharge of waste should only be used in approved areas. It is your responsibility to comply with local regulations regarding the discharge of waste.

To operate overboard discharge, the “Y” valve lever must be in the overboard position, and the waste water outlet seacock must be open. Close the outlet water seacock when not in use.

To empty the waste holding tank, see Dockside Pumpout.

Macerator Pump

A “Y” valve is installed between the pumpout plate and the macerator discharge seacock. The macerator pump is located between the “Y” valve and the macerator discharge seacock. In this configuration all waste is flushed from the head to the holding tank. The “Y” valve permits you to use the dockside pumpout feature, or to use the macerator to pump the waste from the holding tank overboard.



CAUTION

Overboard discharge of waste should only be used in approved areas. It is your responsibility to comply with local regulations regarding the discharge of waste.

To pump out the holding tank using the macerator pump:


1. Open the discharge seacock.
2. Move the “Y” valve lever to the down or overboard position.



CAUTION


Do not run the pump dry. Running the pump when there is no waste to pump out of the holding tank will shorten the life of the pump.

3. Activate the macerator pump by turning its circuit breaker “ON.”
4. Close the macerator discharge seacock and turn macerator pump “OFF” after the pumpout is complete.

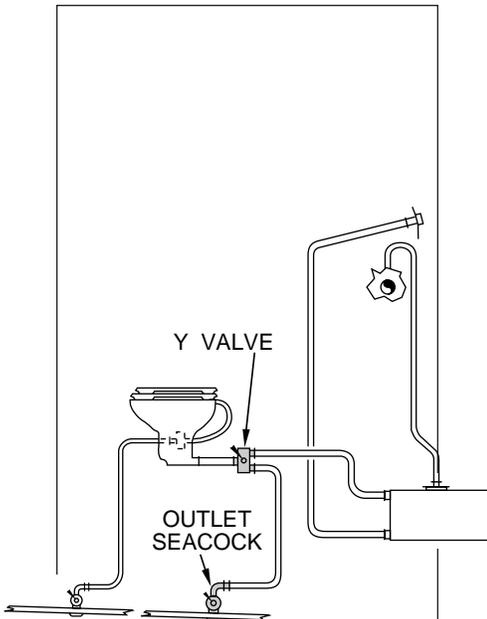

TYPICAL OVERBOARD
DISCHARGE SYSTEM

KC-2045

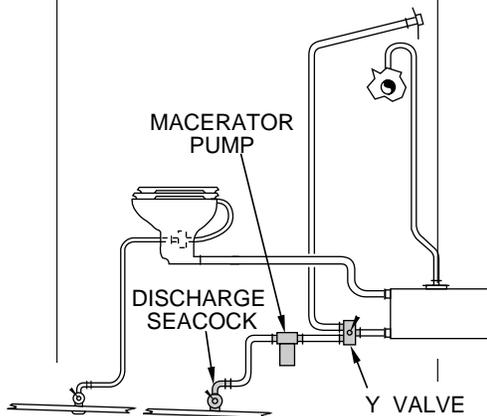

TYPICAL MACERATOR SYSTEM

KC-2046



SHIP SYSTEMS

Head Operating Instructions

Before operating the head for the first time, read the owner's manual for the marine toilet.

ELECTRICALLY OPERATED HEAD

1. Open the inlet water seacock below the cabin floor.



CAUTION

Overboard discharge of waste should only be used in approved areas. It is your responsibility to comply with local regulations regarding the discharge of waste.

2. If overboard discharge is to be used, make sure the "Y" valve is in the overboard position, and that the macerator discharge seacock is open.
3. To charge the head, depress the foot pedal on the lower left side of the bowl, and push the flush button. Release the flush button after the bowl is moistened, and then pump the floor pedal 2-4 times to fill the bowl with water.
4. To flush, depress the foot pedal and push the flush button at the same time – hold until all waste is removed.

Notice

To empty the bowl of excess water, operate flush button until water level decreases to desired level.

MANUALLY OPERATED HEAD

1. Open the inlet water seacock below the cabin floor.
2. If overboard discharge is to be used, make sure the "Y" valve is in the overboard position, and that the macerator discharge seacock is open.
3. Pump the floor pedal 2-4 times to fill the bowl with water.
4. To flush, depress the foot pedal and operate flush handle next to head at the same time. Operate handle until all waste is removed.

Notice

To empty the bowl of excess water, operate flush button until water level decreases to desired level.



SAMPLE FLOAT PLAN

Copy this page and fill out the copy before going boating. Leave the filled out copy with a reliable person who can be depended upon to notify the Coast Guard, or other rescue organization, should you not return as scheduled. **DO NOT** file this plan with the Coast Guard.

Name _____ Telephone _____

Description of Boat: Type _____ Color _____ Trim _____

Registration Number _____

Length _____ Name _____ Make _____

Other Info. _____

Persons Aboard:	Name	Age	Address & Telephone

Engine Type: _____ HP _____

No. of Engines: _____ Fuel Capacity: _____

Survival Equipment:

PFDs _____ Flares _____ Mirror _____

Smoke Signals _____ Flashlight _____ Food _____

Paddles _____ Water _____ Anchor _____

Raft or Dinghy _____ EPIRB _____

Radio: Yes _____ No _____ Type _____ Freq _____

Cell Phone: Yes _____ No _____ Type _____ Number _____

Destination _____ Est. Time of Arrival _____

Expect to Return By _____

Auto Type _____ License No. _____ Parked _____

If not returned by _____ call the Coast Guard, or _____

(Local Authority). Coast Guard Telephone Number: _____

Local Authority Telephone Number: _____

GLOSSARY OF TERMS

12

- ABOARD** – On or in the boat.
- AFLOAT** – On the water.
- AFT** – Toward the rear or stern of the boat.
- AGROUND** – Touching bottom.
- AMIDSHIP** – Center or middle of the boat.
- ANCHOR** – (1) An iron casting shaped to grip the lake bottom to hold the boat. (2) The act of setting the anchor.
- ASHORE** – On the shore.
- ASTERN** – Toward the stern.
- BAIL** – To remove water from the bottom of the boat with a pump, bucket, sponge, etc.
- BAITWELL** – A miniature livewell used to store and keep live bait alive and healthy.
- BEAM** – The widest point on the boat.
- BEARING** – Relative position or direction of an object from the boat.
- BILGE** – The lowest interior section of the boat hull.
- BILGE KEELS** – The raised areas or aluminum extrusions on the bottom of a boat that parallel the keel.
- BOARDING** – To enter the boat.
- BOUNDARY WATERS** – A body of water between two areas of jurisdiction; i.e., a river between two states.
- BOW** – The front of the boat.
- BULKHEAD** – Vertical partition (wall) in a boat.
- BUNKS** – Carpeted trailer hull supports.
- BURDENED BOAT** – Term for the boat that must “give-way” to boats with the right-of-way.
- CAPACITY PLATE** – A plate that provides maximum weight capacity and engine horsepower rating information. It is located in full view of the helm.
- CAPSIZE** – To turn over.
- CAST-OFF** – To unfasten mooring lines in preparation for departure.
- CENTER LINE** – A lengthwise imaginary line which runs fore and aft with the boat's keel.
- CHINE** – The point on a boat where the side intersects (meets) the bottom.
- CLEAT** – A deck fitting with ears to which lines are fastened.
- CONSOLE** – Also called helm. The steering wheel area of the boat.
- CRANKING BATTERY** – The main battery used for engine starting and electrical circuits.
- CURRENT** – Water moving in a horizontal direction.
- DECK** – The open surface on the boat where the passengers walk.
- DEEP CYCLE BATTERIES** – Special long-running batteries which can be repeatedly discharged and recharged without significant loss of power.
- DOLLY WHEEL** – A rolling jack assembly at the front of the trailer used for positioning the coupler during trailer hookup.
- DRAFT** – The depth of the boat below the water line, measured vertically to the lowest part of the hull.
- ELECTROLYSIS** – The break-up of metals due to the effects of galvanic corrosion.
- FATHOM** – Unit of depth or measure; 1 fathom equals 6 feet.
- FENDERS** – Objects placed alongside the boat for cushioning. Sometimes called bumpers.

GLOSSARY OF TERMS

FORE – Toward the front or bow of the boat. Opposite of aft.

FREEBOARD – The distance from the water to the gunwale.

FUEL SENDING UNIT – The electrical device that is mounted on the outside of a built-in fuel tank and controls the dashboard fuel gauge.

GIVE-WAY BOAT – (1) Term for the boat that must take whatever action necessary to keep well clear of the boat with the right-of-way in meeting or crossing situations. (2) The burdened boat.

GUNWALE – The rail or upper edge of a boat's side.

HEAD – A marine toilet.

HELM – The steering wheel or command area.

HULL – The body of the boat.

HYPOTHERMIA – A physical condition where the body loses heat faster than it can produce it.

IN-LINE FUSE – A type of protective fuse located in the power wire of a direct current (DC) circuit usually near the battery.

KEEL – The lowest portion of the boat; extends fore and aft along the boat's bottom.

LIST – Leaning or tilt of a boat toward the side.

MAKING WAY – Making progress through the water.

MARINE CHART – Seagoing maps showing depths, buoys, navigation aids, etc.

MOORING – An anchor, chain, or similar device that holds a boat in one location.

NAVIGATION AID – Recognizable objects on land or sea such as buoys, towers or lights which are used to fix position to identify safe and unsafe waters.

NO-WAKE SPEED – The speed at which a boat travels to produce an imperceptible wake.

PFD – Personal flotation device.

PITOT TUBE – See SPEEDOMETER PICKUP TUBE.

PLANING HULL – A hull designed to lift, thereby reducing friction and increasing efficiency.

PORPOISE – A condition in which the bow bounces up and down caused by trimming the engine too far out.

PORT – (1) The left side of a boat when facing the bow. (2) A destination or harbor.

PRIVILEGED BOAT – Term used for the boat with the right-of-way.

RIGHT-OF-WAY – Term for the boat that has priority in meeting or crossing situations. The stand on or privileged boat.

RULES OF THE ROAD – Regulations for preventing collisions on the water.

SPEEDOMETER PICKUP TUBE – Also called pitot tube. The plastic device that extends below the bottom of the boat. It connects to the speedometer with plastic flexible tubing.

SPLASHWELL – The section of an outboard-equipped boat that is just forward of the transom.

STAND ON BOAT – Term for the boat that must maintain course and speed in meeting or crossing situations. The privileged boat.

STARBOARD – The right side of the boat when looking towards the bow.

STERN – The back of the boat.

STOW – To pack the cargo.

SURGE BRAKES – A type of trailer braking system designed to automatically actuate when the tow vehicle's brakes are applied.

TRANSDUCER – The unit that sends/receives signals for the depth sounder.

TRANSOM – The transverse beam across the stern.

TRIM – Fore to aft and side to side balance of the boat when loaded.

UNDERWAY – Boat in motion; i.e., not moored or anchored.

USCG – United States Coast Guard

WAKE – The waves that a boat leaves behind when moving through the water.

WATERWAY – A navigable body of water.

V-PAD – A modified vee hull design with a small, flat area in the keel aft.

VISUAL DISTRESS SIGNAL – A device used to signal the need for assistance such as flags, lights and flares.

ONE-YEAR LIMITED AND FIVE-YEAR TRANSFERRABLE LIMITED STRUCTURAL HULL WARRANTY ON NEW MONTEREY BOATS

SEABRING MARINE INDUSTRIES, INC. (MONTEREY BOATS) warrants to the original retail purchaser of its products that the boats manufactured by it will be free from defects in materials and workmanship for one (1) year from the date of sale to the original retail purchaser.

This warranty is extended to the original retail purchaser only and does not apply to used boats, or to the following:

WHAT IS NOT COVERED:

This warranty does not cover:

1. Any boat that has been repaired or altered by persons other than MONTEREY BOATS or an authorized MONTEREY BOATS dealer, or modified in any way so as to affect its use and operation;
2. Engines, outdrives, controls, batteries, propellers, any other accessories or equipment that have been made by other manufacturers, whether or not warranted by such other manufacturers;
3. Gelcoat finish cracking, crazing or blistering;
4. Any boat used for racing or commercial purposes or that has been subject to misuse, neglect, accident or structural modification;
5. Windshield breakage, windshield leaks, hatch leaks, fuel gauges and fuel gauge systems, fuel tanks and any defects in paint, upholstery, canvas, vinyl, plastics fabrics, trim or other materials;
6. Any boat that has been overpowered according to the maximum BIA recommended engine horsepower specified on the capacity plate affixed to said boat;
7. Installation of engines, generators, air conditioners, parts or other after market accessories produced, installed or attached by anyone other than MONTEREY BOATS;
8. Loss of time, inconvenience, loss of the use of the boat or other matters not specifically covered hereunder; and
9. Any boat purchased by a consumer through an authorized dealer located in the United States, which said boat is registered and/or operated outside the United States.

FIVE-YEAR TRANSFERRABLE LIMITED STRUCTURAL HULL WARRANTY:

Beginning with the 1999 model year boats, MONTEREY BOATS also offers a Five-Year Transferrable Limited Structural Hull Warranty. The Five-Year Limited Warranty may be transferred to subsequent purchasers (hereinafter 'new owner') for a fee of \$50 for sport boats and \$100 for cruisers. This transfer will only apply during the five years from the date of purchase to the original retail purchaser. Under the Five-Year Transferrable Limited Structural Hull Warranty, MONTEREY BOATS will repair or replace the fiberglass hull if it is found to be structurally defective in materials or workmanship within the first five years after purchase. For the purposes of this warranty, the hull is defined as the single fiberglass casting which rests in the water. This Five-Year Transferrable Limited Structural Hull Warranty does not otherwise modify, expand or affect the balance of the warranty provisions noted herein, except as specifically noted.

1. The request for transfer must be made in writing by the new owner and sent within thirty (30) days of the date of his/her acquisition of the vessel to:

MONTEREY BOATS
1579 SW 18th Street
Williston, Florida 32696

2. The request must include: A copy of the bill of sale with the Hull ID number, the new owner's name and address, and a Certified Check or Money Order for the correct transfer fee amount. MONTEREY BOATS will send a new warranty card with the updated information once this information has been received.
3. Only the unused portion of the original Five-Year Transferrable Limited Structural Hull Warranty will apply to the new owner.

4. In the event of fiberglass hull work is required, the new owner must return the product to the original selling dealer or to a dealer authorized to service MONTEREY products.

5. The cost of returning the product to and from either the dealer, authorized representative or to MONTEREY BOATS will be the sole responsibility of the owner.

GENERAL PROVISIONS:

MONTEREY BOATS does not authorize any person to create or assume for it any other obligation or liability with respect to its boats. No person, including a MONTEREY BOATS dealer, is authorized to make any repairs or replacements under this warranty without the prior written approval of MONTEREY BOATS. MONTEREY BOATS' obligation under this warranty is limited to the cost of repair of the warranted item or replacement thereof, at MONTEREY BOATS option. The sales personnel or other employees of MONTEREY BOATS dealers are not to make warranties concerning MONTEREY BOATS products. MONTEREY BOATS shall have no obligation under this written warranty unless and until each of the following conditions are met:

1. The original retail purchaser of its product completes and mails the Warranty Registration Card to MONTEREY BOATS within fifteen (15) days from the date of sale of the boat to that purchaser;
2. Notice of each warranty claim is given to the MONTEREY BOATS Dealer within a reasonable period of time after discovery of any claimed defect;
3. Notice of each warranty claim is given to the MONTEREY BOATS Dealer within (1) year from the date of purchase by the original retail purchaser; and
4. All transportation charges incurred in transporting the boat for warranty work are paid for by the owner.

THERE ARE NO WARRANTIES EXTENDED BEYOND THE DESCRIPTION ON THE FACE HEREOF. ALL IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSE, OR OTHERWISE ARE DISCLAIMED FOR THEIR ENTIRETY AFTER THE EXPIRATION OF THE ONE-YEAR WARRANTY. MONTEREY BOATS SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES RESULTING FROM A BREACH OF THIS WARRANTY OR ANY IMPLIED WARRANTY.

Some states do not allow exclusions or limitations of incidental or consequential damages, and some states do not allow limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific rights, and you also may have other rights that vary from state to state.

MONTEREY BOATS reserves the right to make changes at any time, without notice, in prices or to make changes in colors, specifications, equipment, options, materials, etc., and MONTEREY BOATS shall be under no obligation to equip or modify boats built prior to such changes.

IMPORTANT: Return of the Warranty Card to MONTEREY BOATS is important for purposes of recording customer information for notification and correction of product defects under the Federal Boat Safety Act.



1579 S.W. 18th Street • Williston, Florida 32696
(352) 529-9181 • FAX: (352) 529-9173

D E A L E R

Monterey Boats
1579 S.W. 18th Street
Williston, FL 32696
Phone 352-529-9181 Fax 352-529-9173